

ALLIMITY QYSY-A75C3077-QYSY

ALLIMITY A75C3077 A75C3078 Replacement Remote Control User Manual

Model: QYSY-A75C3077-QYSY | Brand: ALLIMITY

1. INTRODUCTION

This manual provides instructions for the ALLIMITY A75C3077 A75C3078 replacement remote control, designed for use with various Panasonic air conditioner models. This remote control is a direct replacement and requires no programming. Simply insert batteries to begin operation.

Compatible Panasonic AC Models:

- A75C3078, CWA75C3078, A75C3077, CWA75C3077
- CS-UE12JKD, CS-UE9JKD, CS-UE9JKE, CS-RE12GKE, CS-RE12HKE, CS-RE12JKE, CS-UE12JKE
- CS-RE9GKE, CS-RE9HKE, CS-RE12JKE-1, CS-RE9JKE, CS-RE9JKE-1, CS-RE12JKR, CS-RE9JKX
- CS-UE9GKE, CS-RE12JKX, CS-UE12GKE, CS-UE12HKE, CS-RE9JKR, CS-UE9HKE

2. SETUP

2.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the "OPEN" tab and lift to remove it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Back view of the remote control, illustrating the battery compartment.

After battery installation, the remote control is ready for immediate use with compatible Panasonic air conditioner models. No additional programming is required.

3. OPERATING INSTRUCTIONS

This section details the functions of the remote control buttons.



Figure 2: Front view of the remote control, displaying the LCD screen and various function buttons.

3.1 Button Functions

Button	Function
OFF/ON (Yellow button)	Powers the air conditioner ON or OFF.
MODE	Cycles through operating modes: AUTO, HEAT, COOL, DRY, FAN.
TEMP ▲ / ▼	Adjusts the temperature setting upwards or downwards.
FAN SPEED	Adjusts the fan speed (e.g., Low, Medium, High, Auto).

Button	Function
AIR SWING	Controls the air swing (louver movement) function.
TIMER	Activates or adjusts the timer settings for automatic ON/OFF.
SELECT	Used to confirm selections during timer or other advanced settings.
SET/CANCEL	Used to set or cancel timer and other advanced functions.
CHECK	Used for checking system status or error codes.
ERROR RESET	Resets error indicators on the air conditioner unit.

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's operating range decreases or if the display becomes dim. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not operate the AC unit.	<ul style="list-style-type: none"> Dead or incorrectly installed batteries. Obstruction between remote and AC unit. Remote control is out of range. 	<ul style="list-style-type: none"> Replace batteries with new AAA alkaline batteries, ensuring correct polarity. Remove any objects blocking the signal path. Move closer to the AC unit (within 10 meters).
Display on remote is dim or blank.	Low battery power.	Replace batteries with new AAA alkaline batteries.
Specific functions do not work.	<ul style="list-style-type: none"> Button malfunction. AC unit does not support the function. 	<ul style="list-style-type: none"> Ensure the button is pressed firmly. Refer to your AC unit's original manual for supported functions.

6. SPECIFICATIONS

- **Model:** QYSY-A75C3077-QYSY
- **Brand:** ALLIMITY
- **Dimensions:** 4 x 12 x 0.3 cm (1.57 x 4.72 x 0.12 inches)
- **Weight:** 50 g (1.76 oz)
- **Connectivity Technology:** Infrared
- **Maximum Range:** 10 meters (33 feet)
- **Number of Buttons:** 12
- **Controller Type:** Push-button control
- **Battery Type:** 2 x AAA Alkaline batteries (not included)
- **Special Feature:** No programming required
- **Country of Origin:** China

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the retailer or your purchase documentation. For technical support or inquiries, please contact the seller directly through the platform where the purchase was made.

Keep your purchase receipt for any warranty claims.