

Kscjdg 970698001

Kscjdg 970698001 20-inch Lawnmower Grass Bag Instruction Manual

For Ryobi 40V Cordless Mower Models RY40108, RY40109, RY401014US

1. INTRODUCTION

This instruction manual provides essential information for the proper installation, use, and maintenance of your Kscjdg 970698001 20-inch Lawnmower Grass Bag. This product is a replacement fabric grass bag designed for specific Ryobi 40V cordless lawnmower models. Please read this manual thoroughly before installation and use to ensure safe and effective operation.

IMPORTANT NOTE: This product includes the fabric grass bag **ONLY**. The metal frame is **NOT** included and must be reused from your original lawnmower setup.

2. SAFETY INFORMATION

Always prioritize safety when working with lawn care equipment. Follow these general safety guidelines:

- **Disconnect Power:** Before installing, removing, or performing any maintenance on the grass bag, ensure the lawnmower's power source (battery) is removed or disconnected to prevent accidental startup.
- **Wear Protective Gear:** Always wear appropriate personal protective equipment, including safety glasses and sturdy footwear, when operating or servicing a lawnmower.
- **Inspect Equipment:** Regularly inspect your lawnmower and all its components, including the grass bag, for any damage or wear. Replace worn or damaged parts immediately.
- **Clear Work Area:** Ensure the area around the lawnmower is clear of debris and other hazards before beginning any work.

3. PRODUCT OVERVIEW

The Kscjdg 970698001 Lawnmower Grass Bag is a durable replacement component designed to collect grass clippings during mowing. It is constructed from reinforced polyester fabric, offering tear resistance and reusability. The bag features a design that allows for easy attachment to your existing metal frame.



Image 1: The Kscjdg 970698001 20-inch Lawnmower Grass Bag, shown without the metal frame.

3.1. Compatibility

This grass bag is compatible with the following lawnmower models:

- Ryobi 20-inch 40V Cordless Mower Models: RY40108, RY40109, RY401014US
- Also compatible with some Craftsman, Toro, and Troy-Bilt 21-inch 40V cordless mowers. Please verify your mower's specifications and existing frame for fitment.



Lawn Mower Grass Bag

- Replacement Ryobi Lawnmower part number:970698001.
- Fits Ryobi RY40108,RY40109 and RY401014US 20" 40V Cordless Mower.

Image 2: The grass bag shown in context with a compatible Ryobi 40V cordless lawnmower, highlighting its intended use.

4. SETUP AND INSTALLATION

Installing the grass bag involves attaching the fabric bag to your existing metal frame. No special tools are required.

1. **Prepare the Mower:** Ensure the lawnmower is turned off and the battery is removed for safety.
2. **Remove Old Bag (if applicable):** If replacing an old bag, carefully detach it from the metal frame.
3. **Position the New Bag:** Orient the new Kscjdg 970698001 grass bag correctly with the opening facing the mower's discharge chute.
4. **Attach to Frame:** Align the clips or attachment points on the fabric bag with the corresponding parts of your existing metal frame. Snap the fabric securely onto the frame along all edges. Ensure a snug fit to prevent grass clippings from escaping.
5. **Verify Installation:** Once attached, gently pull on the fabric to confirm it is firmly secured to the frame.

**PLEASE NOTE: This is the fabric bag ONLY!!
The frame is NOT included !!!**

Please check your user manual to ensure this is the right part
for you mower model.



Image 3: Visual representation of the grass bag being installed or removed from a lawnmower, emphasizing that the frame is separate.



Ryobi 970698001 20" Lawn mower bag



Reinforced Polyester Fabric



High Quality



Double stitch design



Reusable



Tear Resistant and Durable

Image 4: Detailed view of the reinforced polyester fabric and the clip mechanism for attaching the bag to the frame.

5. OPERATING INSTRUCTIONS

Once the grass bag is securely installed on your lawnmower's frame, you can proceed with normal mowing operations. The bag is designed to efficiently collect grass clippings as you mow.

- **Monitor Fill Level:** Periodically check the grass bag's fill level. Overfilling can reduce collection efficiency and put strain on the mower.
- **Emptying the Bag:** When the bag is full, turn off the lawnmower and remove the battery. Carefully detach the grass bag from the mower. Empty the clippings into a compost pile or waste receptacle.
- **Reattach Bag:** Reattach the empty grass bag to the mower frame, ensuring it is securely fastened before resuming mowing.

Ryobi Lawn Mower Bag

Collects grass blown from beneath the deck, making your mowing work easy.



Image 5: A person demonstrating the process of emptying grass clippings from the attached grass bag.

6. MAINTENANCE

Regular maintenance of your grass bag will extend its lifespan and ensure optimal performance.

- **Cleaning:** After each use, or as needed, shake out any remaining grass clippings. For a more thorough cleaning, the fabric bag can be rinsed with water. Allow it to air dry completely before storage or re-use to prevent mold or mildew.
- **Inspection:** Periodically inspect the fabric for any tears, holes, or signs of excessive wear. Check the attachment points for damage. Replace the bag if significant damage is observed.
- **Storage:** Store the grass bag in a clean, dry place away from direct sunlight and extreme temperatures when not in use.

7. TROUBLESHOOTING

If you encounter issues with your grass bag, consider the following:

- **Grass Not Collecting:** Ensure the bag is correctly and securely attached to the mower frame. Check if the discharge chute is clear of obstructions. The bag might be full and needs emptying.
- **Bag Falling Off:** Verify that all clips and attachment points are properly engaged with the metal frame. Inspect the clips for damage or bending.
- **Poor Fit:** Double-check the compatibility with your specific lawnmower model. Ensure you are using your original metal frame, as this product is a fabric replacement only.

8. SPECIFICATIONS

Part Number	970698001
Material	Reinforced Polyester Fabric
Color	Black
Compatible Mower Size	20-inch (Ryobi), 21-inch (Craftsman, Toro, Troy-Bilt)
Item Weight	0.6 Kilograms (1.32 Pounds)
Package Dimensions	15.59 x 5.67 x 3.31 inches

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the original product packaging or contact the retailer from whom the product was purchased. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question