

[manuals.plus](#) /

› [Dyson](#) /

› [Dyson Cyclone V10 Animal Cordless Vacuum Cleaner User Manual](#)

Dyson Dyson Cyclone V10 Animal

Dyson Cyclone V10 Animal Cordless Vacuum Cleaner User Manual

Model: Dyson Cyclone V10 Animal (Part No. 400480-91-cr)

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Dyson Cyclone V10 Animal cordless vacuum cleaner. This powerful vacuum is designed for deep cleaning carpets and hard floors, effectively picking up pet hair and debris with strong suction.

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect for any damage. The package should include the vacuum cleaner, wand, Motorbar cleaner head, docking station, combination tool, crevice tool, Reach under tool, hair screw tool, and charger.



suction to pick up more dust and debris.¹

¹Compared to Dyson V8™ cord-free vacuum.

Up to
60
MINUTES

Up to 60 minutes
fade-free power.²



Dyson digital motor V10
generates powerful suction



14 concentric cyclones spin
fine dust from the air and
into the bin



Figure 1: Dyson Cyclone V10 Animal Cordless Vacuum Cleaner with its main components. The image displays the vacuum in its upright stick configuration, with a dog in the background, illustrating its suitability for pet owners.

1.2 Assembly

- 1. Attach the Wand:** Insert the wand into the main body of the vacuum until it clicks securely into place.
- 2. Attach the Cleaner Head:** Connect the desired cleaner head (e.g., Motorbar cleaner head) to the end of the wand until it clicks.
- 3. Install Docking Station:** Mount the docking station to a wall in a convenient location near a power outlet. Refer to the separate docking station instructions for detailed mounting steps.

1.3 Charging the Battery

- Connect the charger to the docking station or directly to the vacuum's charging port.
- Plug the charger into a power outlet. The battery indicator lights will illuminate during charging.
- Allow the vacuum to fully charge before first use. A full charge provides up to 60 minutes of fade-free power, depending on the power mode and attachments used.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off and Mode Selection

- To start the vacuum, press and hold the power trigger. Release the trigger to turn it off.
- The vacuum features three power modes. Use the mode selection button on the top of the main body to cycle through the modes:
 - **Mode 1 (Eco):** For lighter cleaning and maximum run time.
 - **Mode 2 (Medium):** Balanced power for everyday cleaning.
 - **Mode 3 (Max):** For intensive spot cleaning and stubborn dirt.

2.2 Using Attachments

The Dyson Cyclone V10 Animal comes with several specialized tools:

- **Motorbar Cleaner Head:** Designed for deep cleaning all floor types, automatically de-tangling long hair and pet hair.
- **Combination Tool:** A two-in-one tool for dusting and surface cleaning.
- **Crevice Tool:** Ideal for cleaning tight gaps and edges.
- **Hair Screw Tool:** Features an anti-tangle conical brush bar, specifically designed to remove long hair and pet hair from upholstery, pet beds, and stairs.
- **Reach Under Tool:** Extends and twists to clean awkward spaces.

2.3 Converting to Handheld Mode

To convert the vacuum into a handheld unit for cleaning cars, stairs, or upholstery, simply detach the wand from the main body and attach any desired tool directly to the main body.

3. MAINTENANCE

3.1 Emptying the Clear Bin

Empty the bin as soon as the dirt reaches the MAX level. To empty:

1. Hold the vacuum over a waste bin.
2. Push the red lever down firmly to release the bin flap and eject the dirt.
3. Close the bin flap securely until it clicks.

3.2 Washing the Filter

The filter should be washed at least once a month, or more frequently if used heavily. Ensure the filter is completely dry before reinserting.

1. Twist the filter counter-clockwise from the top of the main body to remove it.

2. Wash the filter under cold running water until the water runs clear. Do not use detergents.
3. Shake excess water from the filter and leave it to air dry for at least 24 hours in a warm place. Do not dry in a tumble dryer, microwave, or near a naked flame.
4. Once completely dry, reinsert the filter by twisting it clockwise until it clicks into place.

3.3 Cleaning the Motorbar Cleaner Head

Periodically check the cleaner head for blockages or tangled hair. The Motorbar cleaner head is designed to de-tangle hair automatically, but manual removal may be necessary for severe tangles. Refer to the Dyson website for specific instructions on disassembling and cleaning the brush bar if needed.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum not turning on	Battery is not charged; Power trigger not fully pressed.	Charge the battery fully; Ensure the power trigger is held down.
Loss of suction	Bin is full; Filter is dirty or incorrectly fitted; Blockage in the wand or cleaner head.	Empty the bin; Wash and thoroughly dry the filter, then reinsert correctly; Check for and remove any blockages.
Cleaner head not spinning	Blockage in the brush bar; Cleaner head not properly attached.	Remove any obstructions from the brush bar; Ensure the cleaner head is securely attached to the wand.
Short run time	Using Max mode; Battery not fully charged; Filter needs cleaning.	Use Eco or Medium mode for longer run time; Fully charge the battery; Wash and dry the filter.

5. SPECIFICATIONS

Brand: Dyson

Model Name: Dyson Cyclone V10 Animal

Item Model Number: 400480-91-cr

Special Features: Bagless, Cordless, Lightweight, Washable Filter

Filter Type: HEPA Filter

Included Components: Vacuum Cleaner, Wand, Motorbar cleaner head, Docking station, combination tool, crevice tool, Reach under tool, hair screw tool, charger

Cordless: Yes

Recommended Uses: Carpet, Hard Floor, Stairs, Upholstery, Car, Bare Floor

Form Factor: Stick

Battery Type: Lithium-Ion

Battery Life: Up to 60 minutes (depending on mode and attachment)

Number of Power Levels: 3

Product Dimensions: 9.5 x 9.8 x 48.7 inches

Item Weight: 5.17 pounds

UPC: 657768511172

6. WARRANTY AND SUPPORT

6.1 Warranty Information

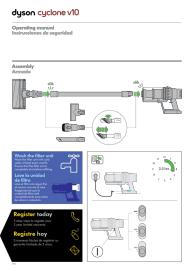
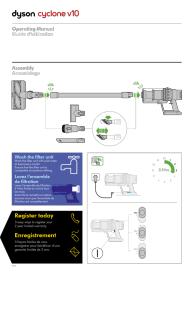
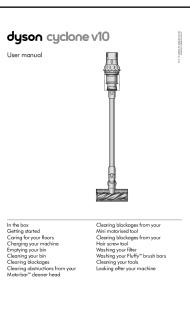
This Dyson Cyclone V10 Animal vacuum cleaner comes with a **90-day limited warranty**. Please retain your proof of purchase for warranty claims. For full terms and conditions, refer to the warranty documentation provided with your product or visit the official Dyson website.

6.2 Customer Support

For further assistance, technical support, or to purchase genuine Dyson parts and accessories, please visit the official Dyson support website or contact their customer service department. Contact information can typically be found on the Dyson website or in your product packaging.

Online Support: www.dyson.com/support

Related Documents - Dyson Cyclone V10 Animal

	<p>Dyson Cyclone V10 Operating Manual and Safety Instructions</p> <p>Comprehensive operating manual and safety instructions for the Dyson Cyclone V10 vacuum cleaner, covering assembly, usage, maintenance, troubleshooting, and warranty information.</p>
	<p>Dyson Cyclone V10 User Manual: Setup, Maintenance, and Troubleshooting</p> <p>Comprehensive user manual for the Dyson Cyclone V10 cordless vacuum cleaner. Learn how to set up, use, clean, maintain, and troubleshoot your Dyson V10.</p>
	<p>Dyson Cyclone V10 User Manual: Setup, Maintenance, and Troubleshooting</p> <p>Comprehensive user manual for the Dyson Cyclone V10 cordless vacuum cleaner. Learn how to set up, use, clean, maintain, and troubleshoot your Dyson V10.</p>

 <p>v8 cyclone User manual</p> <p>Contents</p> <ul style="list-style-type: none"> In the box Getting started Caring for your floors Changing your machine Emptying your bin Cleaning your bin Cleaning blockages from your machine* Washing the Post Filter <p>dyson</p>	<p>Dyson V8 Cyclone User Manual - Operation, Maintenance, and Troubleshooting</p> <p>Comprehensive user manual for the Dyson V8 Cyclone cordless vacuum cleaner (Model SV12), covering unboxing, setup, operation, charging, maintenance, cleaning, and troubleshooting.</p>
 <p>dyson cyclone v10 User manual</p> <p>In the box</p> <ul style="list-style-type: none"> Getting started Caring for your floors Changing your machine Emptying your bin Cleaning your bin Cleaning blockages from your machine* Washing the Post Filter <p>dyson</p>	<p>Dyson Cyclone V10 User Manual</p> <p>User manual for the Dyson Cyclone V10 vacuum cleaner, covering setup, maintenance, and troubleshooting.</p>
 <p>dyson cyclone v10 User manual</p> <p>In the box</p> <ul style="list-style-type: none"> Getting started Caring for your floors Changing your machine Emptying your bin Cleaning your bin Cleaning blockages from your machine* Washing the Post Filter <p>dyson</p>	<p>Dyson Cyclone V10 User Manual: Operation, Cleaning, and Maintenance</p> <p>A comprehensive user manual for the Dyson Cyclone V10 cordless vacuum cleaner, detailing setup, operation modes, bin emptying and cleaning, filter washing, brush bar maintenance, tool usage, and general care for optimal performance.</p>