

[Manuals.plus](#) /

› [Feihe](#) /

› Feihe 19 Inch TV with Built-in DVD Player User Manual

Feihe TV/DVD-002

Feihe 19-Inch TV with Built-in DVD Player User Manual

Model: TV/DVD-002

1. INTRODUCTION

Thank you for choosing the Feihe 19-Inch TV with Built-in DVD Player. This compact and versatile entertainment system is designed for various environments, including kitchens, bedrooms, RVs, campers, trucks, and boats. Featuring a Full HD 1080P LED display, a digital tuner, and multiple connectivity options, it provides a complete viewing experience without the need for additional devices. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your product.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the TV. Keep this manual for future reference.

- **Power Source:** Use only the specified power adapter. Ensure the voltage matches your local power supply.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow to prevent overheating.
- **Water and Moisture:** Do not expose the TV to rain, moisture, or excessive humidity. Keep liquids away from the device.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- **Placement:** Place the TV on a stable, flat surface. Avoid placing it in direct sunlight or near heat sources.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **DVD Player:** The built-in DVD player supports DVD/VCD/CD discs. It **does not** play Blu-ray discs.

3. PACKAGE CONTENTS

Verify that all items are included in your package:

- Feihe 19-Inch TV with Built-in DVD Player
- Remote Control
- Power Adapter (AC)
- Car Charger Adapter (DC)
- TV Stand/Feet

- User Manual

4. PRODUCT OVERVIEW

Front and Side View

 


The front view of the Feihe 19-inch TV, highlighting the integrated DVD player slot on the right side.


Rear Panel and Connections

FREE

LOCAL HD CHANNELS

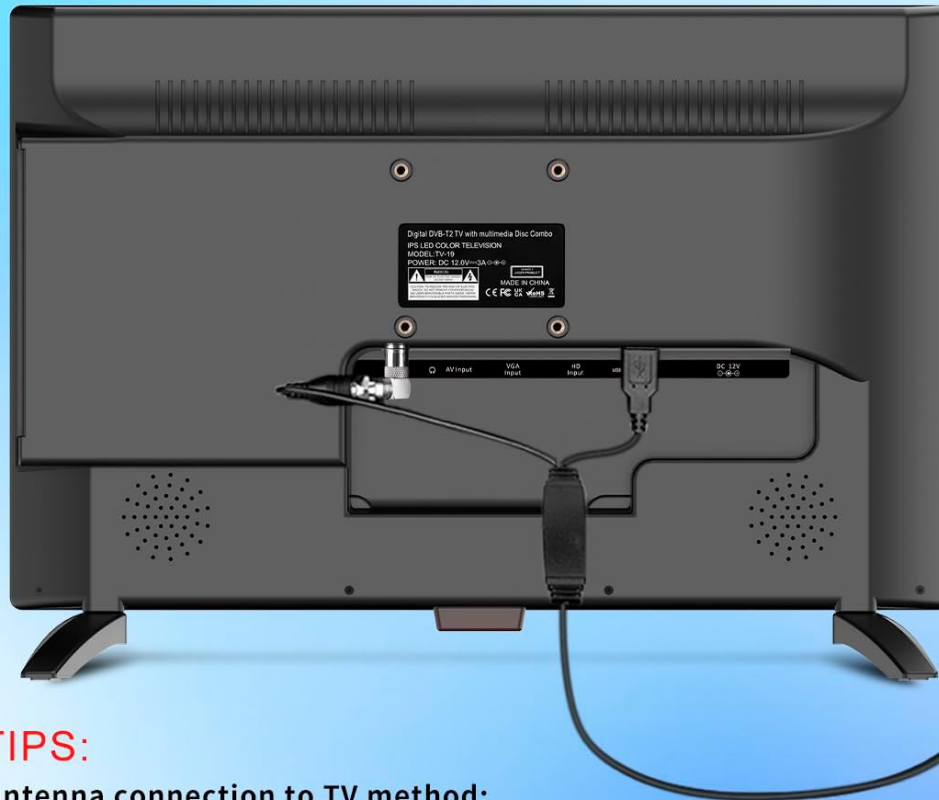

**Built-In Digital
ATSC Tuner**

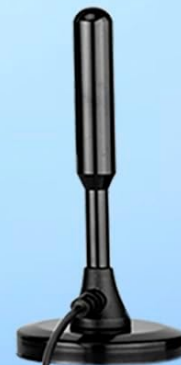 

(NOT INCLUDED)

TIPS:

Antenna connection to TV method:

First: Please connect our antenna's USB port and RF port must all be connected to the TV/DVD at the same time.

Second: Please make sure the antenna's wires are in an elongated state and cannot be tied together.

Third: Please put the antenna near the open position, no shade, as close to the window as possible


The rear panel of the TV features multiple input ports for versatile connectivity.

Key Features

- **Built-in DVD Player:** Enjoy movies and music directly without an external player. Supports DVD/VCD/CD formats.
- **Full HD 1080P Resolution:** Delivers crisp, clear images with vibrant colors.
- **Multiple Inputs:** HDMI, USB, AV, VGA, and Headphone Jack for connecting various devices.
- **Digital TV Tuner:** Built-in ATSC tuner for receiving over-the-air digital broadcasts.
- **Portable Design:** Lightweight and compact, suitable for travel and small spaces.

BUILT-IN DVD PLAYER

Takes up little space, allows you to enjoy your favorite DVD without needing to purchase a separate player

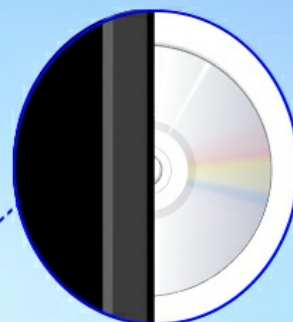

Not Support Blue-ray DVD



The integrated DVD player simplifies your entertainment setup.

ENJOY PERFECT IMAGE QUALITY

Feihe 19 inch TV with 1366 x768
Full HD Resolution in a 16:9 Aspect
Presents Stunning, High Quality Images
with Excellent Detail



Support
FHD 1366x768



16:9 Aspect Ratio



Experience excellent image quality with Full HD resolution.

5. SETUP GUIDE

5.1 Attaching the TV Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the TV stand feet with the corresponding slots on the bottom of the TV.
3. Secure the feet using the provided screws. Ensure they are firmly attached.

5.2 Power Connection


- **For Home Use:** Connect the AC power adapter to the TV's DC input port, then plug the adapter into a standard wall outlet (110-260V AC).
- **For Vehicle/RV Use:** Connect the included car charger adapter to the TV's DC input port, then plug the adapter into your vehicle's 12V DC power outlet.

5.3 Antenna Connection (for Digital TV)


1. Connect your digital antenna (not included) to the RF input port on the rear of the TV.
2. If your antenna has a USB power cable, connect it to the TV's USB port.
3. Position the antenna near an open window or in a location with good signal reception. Ensure the antenna wires are elongated and not tied.

FREE

LOCAL HD CHANNELS

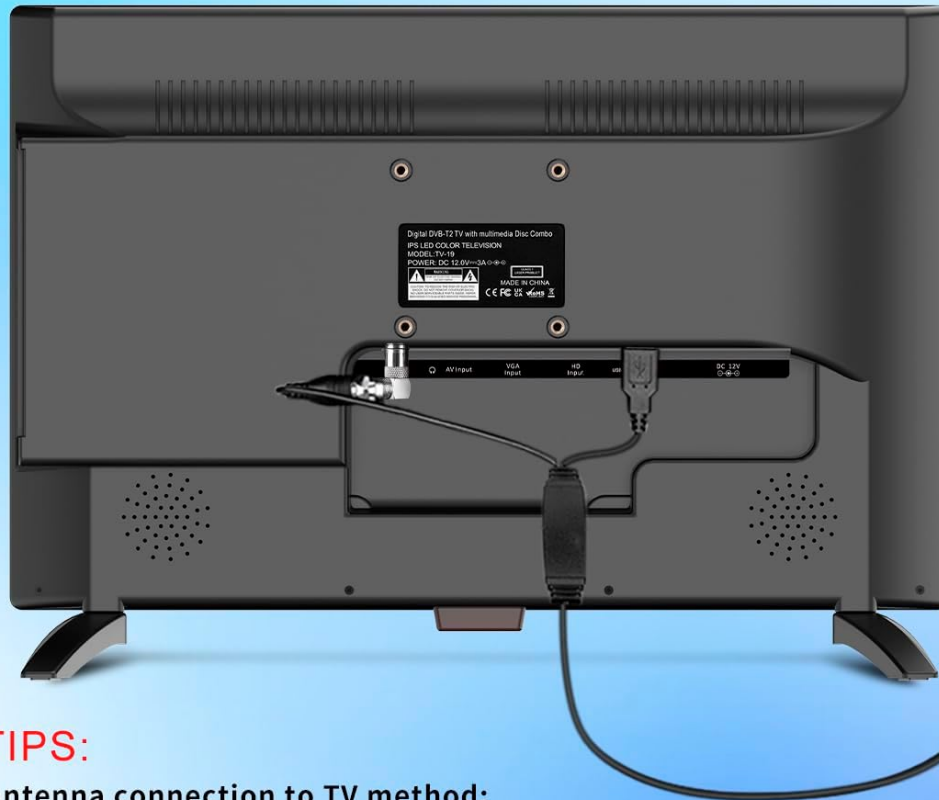

**Built-In Digital
ATSC Tuner**

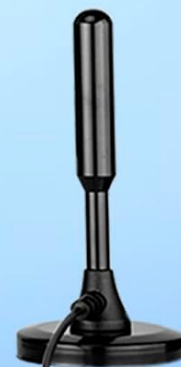

(NOT INCLUDED)

TIPS:

Antenna connection to TV method:

First: Please connect our antenna's USB port and RF port must all be connected to the TV/DVD at the same time.

Second: Please make sure the antenna's wires are in an elongated state and cannot be tied together.

Third: Please put the antenna near the open position, no shade, as close to the window as possible

Proper antenna connection is crucial for receiving local HD channels.

5.4 Connecting External Devices

The TV offers various ports for connecting external devices:

- **HDMI:** Connect Blu-ray players, gaming consoles, streaming sticks (e.g., Firestick, Roku), or laptops.
- **USB:** Play media files (photos, music, videos) from a USB flash drive.
- **AV (Audio/Video):** Connect older devices like VCRs or camcorders using RCA cables.
- **VGA:** Connect a computer for use as a monitor.
- **Headphone Jack:** Connect headphones for private listening.

MULTIPLE CONNECTIONS



The TV's multiple ports allow for connection to a wide range of devices.

5.5 Initial Setup Wizard (Channel Scan)

Upon first power-on, the TV will guide you through an initial setup wizard:

1. Select your preferred language.
2. Follow the on-screen prompts to perform an automatic channel scan. This will detect available digital TV channels in your area.
3. Once the scan is complete, your TV is ready for viewing broadcast channels.

6. OPERATING INSTRUCTIONS

6.1 Basic TV Controls

Use the included remote control or the buttons on the TV panel to operate the unit.

FULL FUNCTION REMOTE CONTROL



The full-function remote control provides easy access to all features.

- **Power:** Press the **POWER** button to turn the TV on or off.
- **Volume:** Use **VOL+** and **VOL-** buttons to adjust the volume.
- **Channel:** Use **CH+** and **CH-** buttons to change channels.
- **Mute:** Press the **MUTE** button to temporarily turn off the sound.

6.2 Input Source Selection

To switch between TV, DVD, HDMI, USB, AV, or VGA inputs:

- Press the **SOURCE** button on the remote control or TV panel.
- Use the arrow keys to navigate through the input options.
- Press **OK** or **ENTER** to confirm your selection.

6.3 DVD Playback

To play a DVD:

1. Ensure the TV is powered on.
2. Insert a DVD, VCD, or CD disc into the side-loading DVD slot with the label side facing up.
3. Press the **SOURCE** button and select the DVD input. The DVD functions only work when this source is selected.
4. The disc should begin playing automatically. If not, use the playback controls on the remote (Play, Pause, Stop, Skip).
5. To eject the disc, press the **OPEN/CLOSE** button on the TV panel or remote control.

Note: This DVD player does not support Blu-ray discs.

6.4 USB Media Playback

To play media from a USB drive:

1. Insert a USB flash drive into the USB port on the TV.
2. Press the **SOURCE** button and select the USB input.
3. Navigate through the folders and files using the arrow keys on the remote.
4. Select the desired media file (photo, music, or video) and press **OK** to play.

6.5 Menu Navigation

To access and adjust TV settings:

1. Press the **MENU** button on the remote control.
2. Use the arrow keys to navigate through menu options (e.g., Picture, Sound, Channel, Time, Setup).
3. Press **OK** or **ENTER** to enter a sub-menu or confirm a setting.
4. Use the arrow keys to adjust values or select options.
5. Press **MENU** again or **EXIT** to exit the menu.

7. MAINTENANCE AND CARE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution (do not spray directly on the screen).
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the TV for an extended period, unplug it from the power source and store it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Disc Care:** Keep DVD/VCD/CD discs clean and free of scratches. Handle discs by their edges.

8. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not working.	Ensure power cable is securely plugged in. Test the outlet with another device.
No picture/No signal	Incorrect input source selected; antenna not connected/positioned correctly; external device off.	Press SOURCE to select the correct input. Check antenna connection and position. Ensure external devices are powered on.
DVD player says "No Disc" or doesn't play	Disc inserted incorrectly; disc is dirty/scratched; disc format not supported (e.g., Blu-ray).	Ensure disc is inserted label-side up. Clean the disc. Verify it's a DVD/VCD/CD, not Blu-ray. Select DVD source.
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and TV; using incompatible remote.	Replace batteries. Ensure line of sight. Use only the remote included with the TV, as universal remotes may not be compatible.
Poor picture quality	Weak antenna signal; incorrect picture settings.	Adjust antenna position. Check picture settings (e.g., brightness, contrast, mode).

9. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	TV/DVD-002
Screen Size	18.5 Inches (19" visible diagonal)
Display Technology	LED
Resolution	1366x768 (FHD 1080P supported)
Aspect Ratio	16:9
Refresh Rate	60 Hz
Connectivity	HDMI, USB, AV, VGA, Headphone Jack, Digital TV Tuner
DVD Support	DVD/VCD/CD (Does not support Blu-ray)
Power Input	110-260V AC, 12V DC
Item Weight	7.73 pounds
Product Dimensions (DxWxH)	0.78 x 17.3 x 12.6 inches
Speaker Type	Built-In Stereo Speakers

10. WARRANTY AND SUPPORT

Feihe products are manufactured to high-quality standards. For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Feihe website. If you experience any issues that cannot be resolved using the troubleshooting guide, please contact our customer service team for assistance.

Contact Information: Please refer to your product packaging or the official Feihe website for the most up-to-date contact details for customer support.

© 2023 Feihe. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C81QSBCR>

More documents and user manuals: <https://manuals.plus/>