

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GEORGE KOVACS](#) /

› [George Kovacs P5532-420 Noho Two-Light Table Lamp Instruction Manual](#)

GEORGE KOVACS P5532-420

George Kovacs P5532-420 Noho Two-Light Table Lamp Instruction Manual

Model: P5532-420

Sections: [Introduction](#) | [Safety](#) | [Contents](#) | [Setup](#) | [Operation](#) | [Maintenance](#) | [Troubleshooting](#) | [Specifications](#) | [Warranty](#)

1. INTRODUCTION

Thank you for purchasing the George Kovacs P5532-420 Noho Two-Light Table Lamp. This manual provides essential information for the safe assembly, operation, and maintenance of your new lamp. Please read these instructions thoroughly before installation and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always disconnect the power supply before cleaning, changing light bulbs, or performing any maintenance.
- Do not use this lamp with a dimmer switch unless specifically rated for incandescent lamps.
- Ensure all connections are secure and properly insulated.
- Do not exceed the maximum wattage specified for the light bulbs (100 watts per bulb).
- This product is intended for indoor use only. Do not expose to water or excessive humidity.
- Keep flammable materials away from the lamp when in operation.
- If you are unsure about any part of the installation, consult a qualified electrician.

3. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any parts are missing or damaged, contact customer service immediately.

- Lamp Base with upright supports
- Lamp Shade (Brushed Nickel/Sand Coal)
- Instruction Manual



Figure 1: Complete George Kovacs P5532-420 Noho Two-Light Table Lamp. This image displays the fully assembled lamp, featuring its brushed nickel and sand coal finish, the perforated cylindrical shade, and the rectangular base with two upright supports.

4. SETUP AND INSTALLATION

The George Kovacs P5532-420 Noho Table Lamp typically requires minimal assembly. Follow these steps:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Place them on a clean, soft surface to prevent scratches.
- 2. Position the Base:** Place the lamp base on a stable, flat surface where you intend to use the lamp.
- 3. Install Light Bulbs:**
 - Ensure the lamp is unplugged from the power outlet.
 - Gently screw two incandescent light bulbs (not included) into the sockets located within the lamp shade. Do not exceed 100 watts per bulb.
- 4. Connect to Power:** Plug the lamp's power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

The George Kovacs P5532-420 Noho Table Lamp is operated via a switch located on its base.

- 1. Power On/Off:** Locate the toggle switch on the lamp's base. Flip the switch to the "ON" position to illuminate the lamp. Flip it to the "OFF" position to turn the lamp off.



Figure 2: Close-up view of the lamp base, showing the integrated power switch. This image highlights the rectangular base and the small toggle switch used to control the lamp's power.

6. MAINTENANCE AND CARE

Regular maintenance will help preserve the appearance and functionality of your lamp.

- Cleaning:**

- Always unplug the lamp before cleaning.
- Wipe the lamp's surfaces with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.

• **Bulb Replacement:**

- Ensure the lamp is unplugged and the bulbs have cooled completely before attempting to replace them.
- Unscrew the old bulb and screw in a new incandescent bulb, not exceeding 100 watts.



Figure 3: Angled view of the lamp shade, showcasing its perforated design and the brushed nickel finish. This perspective helps in understanding the light distribution and the aesthetic details of the shade.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not light up.	Lamp not plugged in. Light bulb is loose or burnt out. Power outlet is not functioning. Switch is in the "OFF" position.	Ensure the lamp is securely plugged into a working outlet. Tighten or replace the light bulb(s). Test the outlet with another appliance. Flip the switch to the "ON" position.
Flickering light.	Loose light bulb. Incorrect bulb type or wattage. Faulty wiring (rare).	Tighten the light bulb. Ensure bulbs are incandescent and do not exceed 100 watts. If problem persists, consult a qualified electrician.

8. PRODUCT SPECIFICATIONS

Brand:	GEORGE KOVACS
Model:	P5532-420
Finish:	Brushed Nickel/Sand Coal
Lamp Type:	Incandescent
Material:	Steel
Power Source:	Corded Electric
Number of Light Sources:	2
Max Wattage (per bulb):	100 Watts
Product Dimensions:	11.5 x 11.5 x 28 inches
Item Weight:	16.16 pounds
UPC:	844349033356

9. WARRANTY AND CUSTOMER SUPPORT

This George Kovacs P5532-420 Noho Two-Light Table Lamp is covered by a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official George Kovacs website.

For technical assistance, missing parts, or warranty claims, please contact George Kovacs customer support through their official channels. Please have your model number (P5532-420) and proof of purchase ready.

Manufacturer: George Kovacs Lighting

