

[Manuals.plus](#) /

› [GE](#) /

› GE Reveal HD+ LED A19 Light Bulb (11W) User Manual

GE 93127996

GE Reveal HD+ LED A19 Light Bulb (11W) User Manual

Model: 93127996

INTRODUCTION

The GE Reveal HD+ LED A19 Light Bulb provides pure, clean, and dimmable light. This advanced LED technology is designed to enhance colors and whiten whites for improved clarity in various indoor environments. These bulbs offer instant full brightness and are mercury-free.

Key Features:

- Reveal technology filters out dull, yellow rays, enhancing colors and patterns.
- Advanced technology improves color clarity and whitens whites.
- Energy efficient design.
- Standard medium base (E26).
- Dimmable functionality.

SAFETY INFORMATION

- Always turn off power to the fixture before installing or removing the bulb.
- Do not use with incompatible dimmer switches, as this may cause flickering or damage to the bulb.
- Suitable for indoor use only.
- Do not disassemble the bulb.
- Ensure the bulb is securely screwed into the socket.

SETUP AND INSTALLATION

1. **Prepare the Fixture:** Ensure the light fixture is turned off at the switch and, if possible, at the circuit breaker to prevent electrical shock.
2. **Remove Old Bulb (if applicable):** Carefully unscrew the existing bulb from the socket by turning it counter-clockwise. Allow hot bulbs to cool before handling.
3. **Install New Bulb:** Gently screw the GE Reveal HD+ LED A19 bulb into the empty socket by turning it clockwise until it is snug. Do not overtighten.
4. **Restore Power:** Turn the power back on at the circuit breaker (if applicable) and then at the light switch.



Image: A single GE Reveal HD+ LED A19 light bulb, showcasing its standard A19 shape and E26 medium base.

OPERATING INSTRUCTIONS

Operating the GE Reveal HD+ LED A19 Light Bulb is straightforward:

- **Turning On/Off:** Use the standard wall switch connected to the light fixture to turn the bulb on or off.
- **Dimming Functionality:** If connected to a compatible dimmer switch, adjust the dimmer control to achieve the desired light intensity. Ensure your dimmer switch is rated for LED bulbs to prevent flickering or damage.

MAINTENANCE

These LED bulbs require minimal maintenance.

- **Cleaning:** Ensure the power is off before cleaning. Use a soft, dry cloth to wipe the bulb if necessary. Do not use liquid cleaners or immerse the bulb in water.
- **Replacement:** Replace the bulb when it reaches the end of its lifespan or if it becomes damaged. Follow the

installation steps for replacement.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Bulb does not light up.	No power to the fixture, loose connection, or bulb lifespan ended.	Check power supply and switch. Ensure bulb is screwed in tightly. Replace bulb if necessary.
Bulb flickers.	Incompatible dimmer switch or faulty wiring.	Ensure dimmer switch is compatible with LED bulbs. If flickering persists, consult a qualified electrician.
Light output is too dim or too bright.	Dimmer setting is incorrect.	Adjust the dimmer switch to the desired brightness level.

SPECIFICATIONS

Feature	Detail
Brand	GE
Model Number	93127996
Light Type	LED
Wattage	11 Watts
Bulb Shape Size	A19
Bulb Base	E26 Medium
Brightness	1140 Lumens
Color Rendering Index (CRI)	80
Dimmable	Yes
Energy Efficient	Yes
Indoor/Outdoor Usage	Indoor
Material Type	Copper (internal components)
Item Weight	0.46 Pounds (for 4-pack)

WARRANTY INFORMATION

This GE Reveal HD+ LED A19 Light Bulb is covered by the manufacturer's standard limited warranty. For specific details regarding warranty duration and terms, please refer to the packaging or contact GE customer support directly. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your GE Reveal HD+ LED A19 Light Bulbs, please contact GE customer service. Contact information can typically be found on the product packaging or the official GE website.

Online Resources:

- Visit the official GE Lighting website for product information and FAQs.
- Refer to the product page on Amazon for additional details and customer reviews:[amazon.com/dp/B0C83TSDRX](https://www.amazon.com/dp/B0C83TSDRX)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C83TSDRX>

More documents and user manuals: <https://manuals.plus/>