

RC-CAR01 AV-NW30

User Manual for SZHKHXD Generic Replacement Remote Control

Model: RC-CAR01 AV-NW30

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your SZHKHXD Generic Replacement Remote Control, Model RC-CAR01 AV-NW30. This remote is designed to be compatible with various RCA, KTC, and Quart television models, including RLC3257B, RLC3273A, KTC-20T51, KTC-32T71HD, 20T51, 26LT1, 32T41, RC-E23, RC-U35, LT26, and LT-26.

Important Note:

- This is a replacement remote control. While it is designed to be compatible with the listed models, some advanced or specific functions of your original remote may not be fully supported.
- Batteries are not included with this product.
- No programming or setup is typically required; simply insert batteries and use.

PRODUCT OVERVIEW

The SZHKHXD Generic Replacement Remote Control features a standard layout for easy navigation and control of compatible televisions.



Figure 1: Front view of the remote control, showing all buttons including power, number pad, volume, channel, navigation, and function keys.

Familiarize yourself with the button layout to efficiently operate your television.

SETUP

Battery Installation

To begin using your remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Back of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

Note: The product specifications mention CR2 batteries, but the physical design of the remote control shown in the images clearly indicates the use of AAA batteries. Please refer to the markings inside your remote's battery compartment for the correct battery type.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use with compatible television models. Point the remote directly at the television's infrared (IR) receiver.

Basic Functions:

- **POWER:** Turns the television on or off.
- **NUMBER PAD (0-9):** Selects channels directly.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels sequentially.
- **MUTE:** Silences the television audio.
- **INPUT/SOURCE:** Cycles through available input sources (HDMI, AV, etc.).
- **NAVIGATION (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **MENU:** Accesses the television's main menu.
- **EXIT:** Exits the current menu or on-screen display.

Compatibility Reminder:

As a replacement remote, some advanced features or specific button functions found on your original television remote may not operate identically or may not be supported. This remote provides core functionality for television control.

MAINTENANCE

Cleaning:

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's finish or internal components.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device.

TROUBLESHOOTING

- **Remote is not working:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the television's IR receiver.
 - Ensure you are within the effective range and pointing the remote directly at the television.
- **Some functions are not working:**
 - As a generic replacement remote, certain advanced or specific functions of your original television remote may not be supported. This is normal for universal or replacement remotes.
 - Refer to your television's original manual for specific functions if this remote does not provide the desired control.

SPECIFICATIONS

Model Number	RC-CAR01 AV-NW30
Brand	Generic (Manufacturer: SZHKHXD)
Compatible Devices	RCA RLC3257B, RLC3273A; KTC KTC-20T51, KTC-32T71HD; Quart 20T51, 26LT1, 32T41, RC-E23, RC-U35, LT26, LT-26 1080P LCD LED HDTV TVs
Connectivity Technology	Infrared (IR)
Controller Type	Button Control

Color	Black
Power Source	2 x AAA Alkaline Batteries (not included)
Item Weight	Approximately 100 Grams

WARRANTY INFORMATION

This SZHKHXD Generic Replacement Remote Control comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance or troubleshooting not covered in this manual, please contact the seller directly through the platform where the product was purchased. Provide your order number and a detailed description of the issue for prompt support.