

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN RG36F-BGEF Replacement Remote Control for Midea Air Conditioners User Manual

PERFASCIN RG36F-BGEF

PERFASCIN RG36F-BGEF Replacement Remote Control User Manual

For Midea Air Conditioners

INTRODUCTION

This manual provides instructions for the PERFASCIN RG36F-BGEF replacement remote control, designed for use with various Midea Air Conditioner models. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan.



Image: Front view of the PERFASCIN RG36F-BGEF Replacement Remote Control, showing the display screen and various control buttons.

COMPATIBLE MODELS

The RG36F-BGEF remote control is compatible with a wide range of Midea Air Conditioner models, including but not limited to:

- RG36A/BGE, RG36A/BGEF, RG36A/BGEF-AR3, RG36A/BGEF-EC, RG36A/BGER
- RG36A1/BGCEF, RG36A1/BGEF, RG36A12/BGEF, RG36A2/BGCEF, RG36A2/BGEF
- RG36B(B)/BGE, RG36B/BGCE, RG36B/BGE, RG36B/BGEF, RG36B1/BGCE, RG36B1/BGE, RG36B2/BGEF,

RG36B4/BGE, RG36B4(B)/BGE

- RG36C/BGCE, RG36C/BGE, RG36C/BGEF
- RG36D/BGCE, RG36D/BGE, RG36D/BGEF
- RG36E/BGE
- RG36F/BGCEF, RG36F/BGEF, RG36F1/BGEFU1, RG36F2/BGEF, RG36F3/BGCEF, RG36F3/BGEF, RG36F4/BGCEF, RG36F4/BGEF
- RG36Y1/BGCEFU2

This remote control is designed to function as a direct replacement for the original remote controls of these models.

SETUP

Battery Installation

The remote control requires two (2) AAA Alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the battery compartment.
3. Insert two AAA Alkaline batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, showing the battery slots and proper orientation for AAA batteries.

Important:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.

OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.

Button Functions

Button	Function
ON/OFF	Powers the air conditioner on or off.
TEMP +/-	Adjusts the temperature setting. The display shows temperature in both Fahrenheit and Celsius.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).

Button	Function
SWING (Up/Down)	Controls the vertical louver swing direction.
SWING (Left/Right)	Controls the horizontal louver swing direction.
SILENCE / FP	Activates Silence mode for quiet operation or the Freeze Protection (FP) function.
FAN SPEED	Adjusts the fan speed (e.g., Auto, Low, Medium, High).
TIMER ON/OFF	Sets the timer for automatic power on or off.
SLEEP / FRESH	Activates Sleep mode for comfortable night operation or the Fresh air function.
INTELLIGENT EYE	Activates the Intelligent Eye sensor, if available on your AC unit, to detect human presence and optimize operation.
LED / FOLLOW ME	Controls the display LED on the AC unit or activates the Follow Me function, which senses temperature at the remote's location.
TURBO / SELF CLEAN	Activates Turbo mode for rapid cooling/heating or initiates the Self Clean function.
LOCK / RESET	Locks the remote control settings or resets the remote to default settings.

Note: Not all functions may be available on every Midea Air Conditioner model. Refer to your air conditioner's manual for specific feature availability.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote control.

Battery Care

If the remote control will not be used for an extended period (e.g., more than one month), remove the batteries to prevent potential leakage and corrosion. Store the remote control in a cool, dry place.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are correctly installed with the proper polarity.
 - Replace the batteries with new AAA Alkaline batteries.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm the remote control is pointed directly at the air conditioner.

- **Display is dim or blank:**
 - This usually indicates low battery power. Replace both AAA Alkaline batteries.
- **Air conditioner not responding to specific functions:**
 - Some advanced functions may not be supported by all Midea Air Conditioner models. Refer to your air conditioner's original manual.

SPECIFICATIONS

Feature	Detail
Model Number	RG36F-BGEF
Brand	PERFASCIN
Compatible Devices	Midea Air Conditioners (various models)
Power Source	2 x AAA Alkaline Batteries (not included)
Rated Voltage	3V DC
Product Dimensions	6 x 3 x 0.5 inches (approximately)
Item Weight	2 ounces (without batteries)
Special Features	Fahrenheit and Celsius display, Green Backlight





Image: Back view of the remote control, displaying the model number RG36F/BGEF and rated voltage 3V DC.

SUPPORT

For any questions or further assistance regarding the PERFASCIN RG36F-BGEF replacement remote control, please contact our customer support. We are committed to providing the best possible service.

Contact information is typically provided by the seller or manufacturer at the point of purchase.

© 2024 PERFASCIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C84YWKQ1>

More documents and user manuals: **<https://manuals.plus/>**