

[Manuals.plus](#) /

> [AerWo](#) /

> AerWo 6ft Christmas Inflatables Outdoor Decorations: Funny Snowman with Dog Instruction Manual

AerWo Inflatable Snow

AerWo 6ft Christmas Inflatables Outdoor Decorations: Funny Snowman with Dog Instruction Manual

Brand: AerWo | Model: Inflatable Snow

1. INTRODUCTION

Thank you for choosing the AerWo 6ft Christmas Inflatables Outdoor Decoration. This product features a unique design of a snowman with a playful dog, equipped with super bright LED lights to enhance your outdoor holiday display. This manual provides essential information for safe and proper setup, operation, and maintenance of your inflatable decoration.



Image 1: The AerWo 6ft Christmas Inflatable Snowman with Dog illuminated at night.

2. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to ensure safe operation and prevent damage to the product or injury.

- Always follow the manufacturer's instructions for proper inflation and anchoring.
- Keep the inflatable away from heat sources and open flames.
- Do not operate in high winds. Strong winds can cause the inflatable to detach from its anchors and potentially cause damage or injury.
- Ensure all electrical connections are dry and protected from moisture.
- Do not attempt to repair damaged electrical components. Contact qualified personnel for repairs.
- This product has an IP44 waterproof rating, and both UL and CE certifications. However, the plug and vent of the product are not waterproof and must be protected from direct water exposure.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Inflatable Snowman with Dog
- 1 x UL Approved Plug/Adapter
- 1 x Color Rotating LED Light (built-in)
- 2 x Cloth Bags (for sandbags)
- 2 x Fastened Ropes
- 6 x Ground Stakes
- 1 x Instruction Manual



Image 2: Contents of the AerWo Inflatable package.

4. SETUP INSTRUCTIONS

Follow these steps to set up your inflatable decoration:

1. **Unpack and Position:** Carefully remove the inflatable from its packaging. Lay it flat on a clean, dry surface in your desired outdoor location. Ensure the area is clear of sharp objects or debris.
2. **Secure with Sandbags:** Locate the zipper on the bottom of the inflatable. Open the zipper and place the provided cloth bags (filled with sand, not included) inside the designated sandbag storage areas. Close the zipper securely. This adds weight for stability.
3. **Connect Ropes and Stakes:** Attach the provided ropes to the fabric loops on the inflatable. Secure the other end of each rope to a ground stake and firmly push the stakes into the ground. Distribute the stakes evenly around the base for maximum stability.
4. **Inflate:** Plug the UL approved adapter into a standard electrical outlet. The built-in fan will begin to inflate the decoration automatically. The inflatable should fully expand within minutes.



Image 3: Installation steps for securing the inflatable.

Setup Video Demonstration

Your browser does not support the video tag.

Video 1: A demonstration of the AerWo 6ft Christmas Inflatable Snowman with Dog being inflated and set up outdoors.

Your browser does not support the video tag.

Video 2: Another demonstration showing the inflation process and outdoor display of a similar snowman and dog inflatable.

5. OPERATING INSTRUCTIONS

Operating your AerWo inflatable is straightforward:

- **Power On:** Once plugged into an electrical outlet, the inflatable will automatically begin to inflate and the internal LED lights will illuminate.
- **LED Lights:** The snowman features 3 super bright colorful LED lights that rotate, creating a dynamic visual effect. These lights are integrated and operate automatically when the unit is powered.
- **Power Off:** To deflate and turn off the lights, simply unplug the adapter from the electrical outlet.



Image 4: The inflatable snowman and dog illuminated at night.

6. MAINTENANCE

Proper maintenance will extend the life of your inflatable decoration:

- **Cleaning:** To clean the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** After use, unplug the inflatable and allow it to fully deflate. Fold or roll it neatly and store it in a cool, dry place, away from direct sunlight and pests. The original packaging can be used for storage.
- **Material:** The inflatable is made of high-quality waterproof Oxford cloth, designed to be weather-resistant, fade-resistant, and tear-resistant.



Image 5: Features of the inflatable, including waterproof fabric and LED lights.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

- **Inflatable does not inflate:**

- Ensure the power adapter is securely plugged into a working electrical outlet.
- Check that the zipper on the bottom of the inflatable is fully closed.
- Verify there are no obstructions blocking the air intake of the built-in fan.

- **LED lights are not working:**

- Confirm the inflatable is powered on and fully inflated.
- Check for any visible damage to the light wiring. If damaged, discontinue use and contact support.

- **Inflatable is unstable or falls over:**

- Ensure all sandbags are properly placed and filled.
- Verify that all ground stakes are firmly inserted into the ground and ropes are taut.
- Avoid placing the inflatable in areas prone to strong winds.

8. SPECIFICATIONS

Feature	Detail
Brand	AerWo
Theme	Christmas

Cartoon Character	Snowman
Color	White
Occasion	Christmas
Material	Oxford Cloth
Item Dimensions (L x W x H)	55 x 29 x 70 inches
Light Color	Bright White (Rotating LED)
Special Feature	Durable, Waterproof
Item Weight	2.12 pounds
Item Model Number	Inflatable Snow



Image 6: Product dimensions and size comparison.

9. WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official AerWo website. Please retain your proof of purchase for any warranty-related services.

© 2025 AerWo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question