

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AerWo](#) /

› [AerWo 12FT Giant Inflatable Snowman Outdoor Decoration with LED Lights and Cardinal Instruction Manual](#)

## AerWo Inflatable Snow

# AerWo 12FT Giant Inflatable Snowman Outdoor Decoration with LED Lights and Cardinal

MODEL: INFLATABLE SNOW

## 1. Introduction

Thank you for choosing the AerWo 12FT Giant Inflatable Snowman. This instruction manual provides essential information for the safe and proper setup, operation, and maintenance of your outdoor decoration. Please read this manual thoroughly before use and retain it for future reference.



*Image 1.1: The AerWo 12FT Giant Inflatable Snowman in an outdoor setting.*

## 2. Safety Information

---

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Always follow the manufacturer's instructions for proper inflation and anchoring.
- Keep the product away from heat sources and open flames.
- Do not operate in high winds. Strong winds can damage the inflatable and pose a safety risk.
- Ensure all electrical connections are dry and protected from moisture. Use a ground fault circuit interrupter (GFCI) for outdoor use.
- Do not attempt to modify or repair the product. Contact customer support for assistance.
- Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement.

## 3. Package Contents

---

Verify that all components are present in the package:

- 1 x 12FT Inflatable Snowman with built-in LED lights and fan

- 1 x UL Approved Adapter
- 2 x Cloth Bags (for sand/weight)
- 8 x Ground Stakes
- 2 x Fastened Ropes



Image 3.1: Overview of included accessories.

#### 4. Setup

Follow these steps to set up your inflatable snowman:

1. **Unpack and Position:** Carefully remove the inflatable from its packaging. Lay it flat on a clean, dry surface in the desired outdoor location. Ensure the air intake of the built-in fan is clear of obstructions.
2. **Secure the Zipper:** Locate the zipper on the inflatable. Ensure it is completely closed before proceeding with inflation.
3. **Add Weight (Optional but Recommended):** If desired, fill the two provided cloth bags with sand or other suitable weight material and place them inside the base of the inflatable for added stability.
4. **Connect Power:** Plug the UL Approved Adapter into the inflatable's power cord, then plug the adapter into a suitable outdoor power outlet. The fan will begin to inflate the snowman.

5. **Inflation:** The snowman will inflate rapidly, typically within minutes. Ensure all parts of the inflatable are expanding correctly.
6. **Anchor the Inflatable:** Once fully inflated, use the provided ground stakes and fastened ropes to secure the snowman to the ground. Attach the ropes to the designated tabs on the inflatable and secure them with stakes into the ground. Distribute the stakes evenly to provide maximum stability.



Image 4.1: Powerful blower for quick inflation.



Image 4.2: Installation steps and features, illustrating securing methods.

Your browser does not support the video tag.

Video 4.1: Demonstration of the AerWo 12FT Giant Inflatable Snowman, showing its inflation process and overall appearance.


## 5. Operating Instructions

The AerWo Inflatable Snowman is designed for simple operation:

- **Power On/Off:** The inflatable will automatically inflate and illuminate when plugged into a power source. To turn off, simply unplug the adapter from the power outlet.
- **LED Lights:** The snowman features five super bright colorful LED lights that activate automatically when powered, creating a festive glow.



*Image 5.1: The inflatable snowman illuminated at night.*

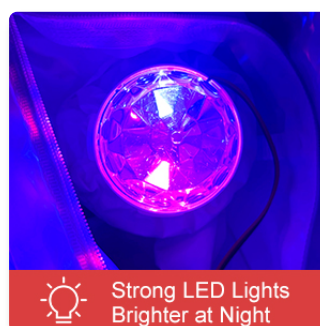

*Image 5.2: Detail of the strong LED lights.*

## 6. Maintenance

Proper maintenance will extend the life of your inflatable snowman:

- **Cleaning:** If the inflatable becomes dirty, gently wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect the fabric for any tears or damage. Small tears can often be repaired with a patch kit (not included).

- **Weather Resistance:** The inflatable is made of high-quality waterproof Oxford cloth, designed to be weather-resistant. However, for extreme weather conditions (heavy rain, snow, or strong winds), it is recommended to deflate and store the product to prevent damage.



Image 6.1: Waterproof fabric for weather resistance.

## 7. Storage

When not in use, follow these steps for proper storage:

1. **Deflation:** Unplug the power adapter. The snowman will deflate on its own.
2. **Drying:** Ensure the inflatable is completely dry before folding to prevent mold or mildew.
3. **Folding:** Fold the inflatable neatly to minimize its size.
4. **Storage Location:** Store the inflatable in a cool, dry place, away from direct sunlight and extreme temperatures. The compact design allows for easy storage.

## 8. Troubleshooting

If you encounter issues with your AerWo Inflatable Snowman, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Inflatable does not inflate fully or at all.	<ul style="list-style-type: none"> <li>• Power not connected.</li> <li>• Zipper not fully closed.</li> <li>• Air intake blocked.</li> <li>• Fan malfunction.</li> <li>• Tear in fabric.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure power adapter is securely plugged in.</li> <li>• Check that the zipper is completely closed.</li> <li>• Clear any obstructions from the fan's air intake.</li> <li>• Inspect the fabric for tears; repair if necessary.</li> <li>• If fan is not working, contact customer support.</li> </ul>
LED lights are not working.	<ul style="list-style-type: none"> <li>• Power not connected.</li> <li>• Light malfunction.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure power is connected and the fan is operating.</li> <li>• If lights remain off, contact customer support.</li> </ul>

Problem	Possible Cause	Solution
Inflatable falls over easily.	<ul style="list-style-type: none"> <li>• Insufficient anchoring.</li> <li>• High winds.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure all ground stakes and ropes are properly secured.</li> <li>• Add additional weight to the base using the cloth bags.</li> <li>• Deflate and store during strong winds.</li> </ul>

## 9. Specifications

Key specifications for the AerWo 12FT Giant Inflatable Snowman:

- **Brand:** AerWo
- **Model:** Inflatable Snow
- **Theme:** Christmas
- **Character:** Snowman
- **Color:** White
- **Material:** Polyester (Waterproof Oxford Cloth)
- **Dimensions (L x W x H):** 83 x 51 x 144 inches (approximately 6.9 x 4.25 x 12 feet)
- **Item Weight:** 4.4 pounds
- **Light Color:** Bright White (with colorful LED effects)
- **Special Features:** Durable, Waterproof, Built-in Fan, LED Lights
- **Certifications:** IP44 waterproof rating, UL and CE certifications



Image 9.1: Product dimensions and scale.

## 10. Warranty and Support

For warranty information, technical support, or any questions regarding your AerWo 12FT Giant Inflatable Snowman, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for any warranty claims.