

Satisfyer 360579

Satisfyer Triple Lover Vibrator Instruction Manual

Model: 360579

1. INTRODUCTION

The Satisfyer Triple Lover is a versatile 2-in-1 device designed for personal pleasure. Crafted from soft, body-friendly silicone, it features three powerful motors that deliver intense vibrations. This device can be utilized as a rabbit vibrator for simultaneous G-spot and clitoral stimulation, or as a massager for broader sensual application. It offers 12 distinct vibration programs and is fully waterproof (IPX7), allowing for use in various environments.

2. SAFETY INFORMATION

- Consult a healthcare professional before use if you have any medical conditions or concerns.
- Do not use the device if it appears damaged or if the silicone is torn.
- Keep out of reach of children.
- Use only water-based lubricants with this device to prevent damage to the silicone material.
- Discontinue use immediately if you experience any discomfort, pain, or skin irritation.
- Ensure the charging port is completely dry before connecting the charging cable.

3. PRODUCT OVERVIEW

The Satisfyer Triple Lover combines multiple features into one ergonomic design. It includes a rounded, voluminous shaft, a teardrop-shaped clitoral tickler, and a massage head, each housing a motor for targeted stimulation.





Sf.



Hybrid
Vibrator



**Triple
Lover**
Hybrid Vibrator

15
YEARS



Image 3.1: Main view of the Satisfyer Triple Lover vibrator, showcasing its ergonomic shape and dual-purpose design.





Image 3.2: Top-down view of the Satisfyer Triple Lover, highlighting the control panel with power and intensity buttons.



Image 3.3: The Satisfyer Triple Lover illustrating its '2 in 1 Wand + Rabbit' functionality.

4. SETUP

4.1 Initial Cleaning

Before the first use, thoroughly clean the device with warm water and a mild, toy-friendly soap or a specialized toy cleaner. Rinse thoroughly and allow it to air dry completely.

4.2 Charging the Device

The Satisfyer Triple Lover comes with integrated rechargeable Lithium-Ion batteries. To charge:

1. Locate the magnetic charging contacts on the device.

2. Connect the included USB charging cable to these contacts. Ensure a secure connection.
3. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer's USB port.
4. The indicator light on the device will illuminate or flash to indicate charging. Refer to the device's specific light patterns for charging status.
5. A full charge typically takes a few hours. Disconnect the charger once fully charged.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the device on, press and hold the power button (often indicated by a wave symbol or a central button) for a few seconds until the vibrations begin. To turn it off, press and hold the same button until the vibrations cease.

5.2 Adjusting Vibration Programs and Intensity

The Satisfyer Triple Lover offers 12 varied vibration programs. The functions of the rabbit vibrator and the massager can be controlled separately.

- **Changing Programs:** Short press the wave symbol button to cycle through the different vibration patterns.
- **Adjusting Intensity:** Use the '+' and '-' buttons to increase or decrease the vibration intensity within the selected program.

Experiment with different programs and intensity levels to discover your preferred settings.

6. MAINTENANCE AND CARE

6.1 Cleaning

After each use, clean the device thoroughly. As per product care instructions, hand wash the device with warm water and a mild, toy-friendly soap. Rinse it completely to remove all soap residue. The device is waterproof (IPX7), allowing for easy cleaning under running water or in the shower.

6.2 Drying and Storage

Pat the device dry with a lint-free cloth or allow it to air dry completely before storing. Store the Satisfyer Triple Lover in a clean, dry place, away from direct sunlight and extreme temperatures. The practical silicone cap allows for safe and hygienic transport and storage, protecting the device from dust and damage.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to the charger and wait for the charging indicator to confirm power.
- **Weak vibrations:** The battery level may be low. Recharge the device fully.
- **Buttons unresponsive:** Ensure the device is not locked (if applicable, refer to specific model features). Try charging the device. If issues persist, contact customer support.
- **Skin irritation:** Discontinue use immediately. Ensure you are using a water-based lubricant and that

the device is thoroughly cleaned before and after each use.

8. SPECIFICATIONS

- **Model Number:** 360579
- **Brand:** Satisfyer
- **Material:** Medical-grade Silicone
- **Product Dimensions (L x W x H):** 10.91 x 4.65 x 2.6 inches
- **Weight:** 1.12 Pounds
- **Batteries:** 1 Lithium Ion battery (included)
- **Water Resistance:** Waterproof (IPX7)
- **Care Instructions:** Hand Wash

9. WARRANTY AND SUPPORT

Satisfyer offers a 15-year warranty on this product, ensuring long-lasting satisfaction and peace of mind.



Image 9.1: Satisfyer's 15-year warranty commitment.

For warranty claims, technical support, or any inquiries regarding your Satisfyer Triple Lover, please visit the official Satisfyer website or contact their customer service department. You can also find more information and support resources on the [Satisfyer Store on Amazon](#).