

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FACETEL](#) /

› [FACETEL Android 13 Tablet 10-inch User Manual \(Model MT8766\)](#)

FACETEL MT8766

FACETEL Android 13 Tablet 10-inch User Manual

Model: MT8766

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your FACETEL Android 13 Tablet. Please read this guide thoroughly to ensure proper use and to maximize your tablet's performance.

Package Contents

Verify that all items are present in your package:

- FACETEL Android 13 Tablet
- Wireless Mouse
- Bluetooth Keyboard
- Protective Case
- Screen Protector (pre-applied or separate)
- Power Charger
- Type-C Charging Cable
- OTG Converter
- User Manual



Image 1: Overview of the FACETEL Android 13 Tablet highlighting its 10.1-inch FHD display, Android 13 OS, Octa-Core processor, 8MP rear camera, 12GB RAM, 128GB ROM, 6000mAh battery, slim design, and 5G Wi-Fi capabilities.

2. SETUP

2.1 Initial Charging

Before first use, fully charge the tablet using the provided power charger and Type-C cable. The charging port is typically located on the side or bottom edge of the tablet. A full charge ensures optimal battery performance.

2.2 Power On/Off

- **To Power On:** Press and hold the Power button (usually on the side) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Restart:** From the same menu, select "Restart."

2.3 Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your tablet:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, password).

2.4 Connecting Accessories

Your tablet comes with a Bluetooth keyboard and mouse for enhanced productivity.

- **Bluetooth Keyboard:** Turn on the keyboard and put it into pairing mode (refer to the keyboard's specific instructions). On your tablet, go to **Settings > Connected devices > Bluetooth**, turn Bluetooth on, and select the keyboard from the list of available devices to pair.
- **Wireless Mouse:** The wireless mouse typically connects via a USB dongle. Insert the OTG converter into the tablet's Type-C port, then plug the mouse's USB dongle into the OTG converter. The tablet should automatically detect the mouse.



Image 2: The FACETEL tablet configured with its accompanying Bluetooth keyboard and wireless mouse, demonstrating a typical setup for productivity.

3. OPERATING YOUR TABLET

3.1 Android 13 Operating System

Your tablet runs on Android 13, offering enhanced privacy controls, improved performance, and a user-friendly interface. Key features include:

- **Privacy Dashboard:** Monitor and manage app permissions for your personal data.
- **Material You:** Customize your tablet's interface with dynamic color themes.
- **Optimized Performance:** Experience smoother multitasking and faster app loading.



Android 13

Dernières améliorations du système d'exploitation

Sécurité des tablettes Android 13
Permissions de confidentialité
Les utilisateurs peuvent mieux
comprendre et limiter

 **Android 13**
Simplifier les Interactions

 **Code système optimisé**
Travailler plus facilement et plus rapidement

 **Renforcer la Sécurité**
L'accès aux données est limité

 **Le play GMS Store**
Pré - installation

Image 3: A visual representation of the Android 13 operating system interface on the FACETEL tablet, showcasing its modern design and various applications.

3.2 Navigation and Gestures

Navigate your tablet using standard Android gestures:

- **Tap:** Select an item.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-Zoom:** Enlarge or reduce content on the screen.
- **Long Press:** Access contextual menus or move icons.

3.3 Connectivity

- **Wi-Fi:** Connect to 2.4GHz or 5GHz Wi-Fi networks via **Settings > Network & internet > Wi-Fi**.
- **Bluetooth 5.0:** Pair with headphones, speakers, or other Bluetooth devices via **Settings > Connected devices > Bluetooth**.



5g wifi stable et rapide

Restez connecté avec le WiFi 5G, la tablette Q6 WiFi vous aide à gérer des connexions réseau et des chargements de pages web plus rapides.



Bluetooth 5.0



5G WiFi

Bluetooth 5.0

Puissante technologie Bluetooth 5.0, connexion stable, qualité sonore haute définition, vous permettant de profiter de chaque note.

Image 4: Illustration of the tablet's 5G Wi-Fi and Bluetooth 5.0 capabilities, indicating fast and stable wireless connections.

3.4 Camera Usage

The tablet features a 5MP front camera and an 8MP rear camera.

- Open the Camera app from the home screen or app drawer.
- Tap the shutter button to take photos.
- Switch between front and rear cameras using the camera icon.
- Select video mode to record videos.



Image 5: Depiction of the tablet's 5MP front camera and 8MP rear camera, suitable for video calls and capturing moments.

3.5 Storage Management

The tablet includes 128GB of internal storage, expandable up to 1TB using a Micro SD card.

- Insert a Micro SD card into the designated slot (refer to the tablet's physical layout for location).
- Manage storage via **Settings > Storage** to view usage and free up space.



Image 6: Visual representation of the tablet's 12GB RAM and 128GB ROM, with an indication of Micro SD card expandability up to 1TB.

4. MAINTENANCE

4.1 Cleaning

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid abrasive materials or harsh chemicals.

- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

4.2 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures (hot or cold).
- Use only the provided charger or a certified compatible charger.

4.3 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to **Settings > System > System update**.

5. TROUBLESHOOTING

5.1 Tablet Not Powering On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for 10-15 seconds to force a restart.

5.2 Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in **Settings > Network & internet > Wi-Fi**.
- Restart your Wi-Fi router.
- Forget the network and reconnect by re-entering the password.

5.3 Slow Performance

- Close unused applications running in the background.
- Clear cache data for frequently used apps (**Settings > Apps > [App Name] > Storage & cache > Clear cache**).
- Ensure sufficient storage space is available.
- Restart the tablet.

6. SPECIFICATIONS

Key technical specifications for the FACETEL Android 13 Tablet (Model MT8766):

Feature	Detail
Brand	FACETEL
Model Number	MT8766
Operating System	Android 13
Processor	Octa-Core, 2.0 GHz (Allwinner)
RAM	12 GB (6 GB physical + 6 GB extended)
Internal Storage (ROM)	128 GB
Expandable Storage	Up to 1 TB via Micro SD card
Screen Size	10.1 Inches

Feature	Detail
Screen Resolution	1280 x 800 Pixels (HD IPS)
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	6000 mAh
Average Battery Life	6 hours (usage dependent)
Connectivity	5G Wi-Fi (802.11a/b/g/n/ac), Bluetooth 5.0
Ports	USB 3.0 Type-C, 3.5mm Audio Jack
Weight	490 Grams
Color	Silver-1



Image 7: The 10.1-inch display of the FACETEL tablet, illustrating its 1280x800 pixel resolution for a clear visual experience.



Image 8: A visual representation of the tablet's 6000mAh battery, emphasizing its capacity for extended use.

7. WARRANTY AND SUPPORT

FACETEL offers permanent service for its products. If you encounter any questions or issues with your tablet, please contact us directly through Amazon. We are committed to providing technical assistance and support. For further assistance, please visit the [FACETEL Brand Store on Amazon](#).

