

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 18V AC/DC Adapter Instruction Manual for Brookstone Big Blue Party 360 Speaker

UPBRIGHT 18V AC/DC Adapter

UpBright 18V AC/DC Adapter Instruction Manual

Compatible with Brookstone Big Blue Party 360 Indoor-Outdoor Bluetooth Speaker

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your UpBright 18V AC/DC Adapter. This power supply is designed to provide reliable power to compatible devices, specifically the Brookstone Big Blue Party 360 Indoor-Outdoor Bluetooth Speaker models KDS65-180-3500, KDS65-1803500, KDS651803500, and KD565-180-3500.

Please read this manual thoroughly before using the adapter to ensure proper operation and to prevent damage to the product or connected devices.



Figure 1: UpBright 18V AC/DC Adapter with its connected cables.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, always follow these safety guidelines:

- Use the adapter only with devices that require 18V DC input and a current draw of 3.5A or less. Using it with incompatible devices may cause damage.
- Ensure the adapter is connected to a power outlet with the correct voltage (100-240VAC, 50/60Hz).
- Do not expose the adapter to water, moisture, or extreme temperatures. Use it in a dry, well-ventilated area.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not disassemble, modify, or attempt to repair the adapter. Refer all servicing to qualified personnel.
- Keep the adapter and its cables away from heat sources, sharp objects, and heavy foot traffic.
- Unplug the adapter from the wall outlet when not in use for extended periods.

- The adapter features Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to safeguard your devices.

3. SETUP

Follow these steps to set up your UpBright AC/DC Adapter:

1. **Inspect the Adapter:** Before connecting, visually inspect the adapter and its cables for any signs of damage. Do not use if any damage is observed.
2. **Connect to Device:** Plug the DC output connector (barrel connector) of the adapter firmly into the power input port of your Brookstone Big Blue Party 360 Speaker.
3. **Connect to Power Outlet:** Plug the AC input cable into the adapter, then plug the AC power plug into a standard wall outlet (100-240VAC).
4. **Verify Connection:** Ensure all connections are secure. The speaker should now receive power.



Figure 2: The adapter and its cables ready for connection.

4. OPERATING INSTRUCTIONS

Once properly connected, the UpBright 18V AC/DC Adapter operates automatically to provide power to your compatible device. There are no user-adjustable settings on the adapter itself.

- Simply ensure the adapter is plugged into a live power outlet and connected to your device.
- The adapter will supply the necessary 18V DC power for your Brookstone Big Blue Party 360 Speaker to function.
- To power off the device, use the device's own power controls or unplug the adapter from the wall outlet.

5. MAINTENANCE

Proper maintenance helps prolong the life of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping cables too tightly around the adapter body.
- **Cable Inspection:** Periodically check the AC and DC cables for fraying, cuts, or bends, especially near the connectors. Replace the adapter if cables are damaged.

6. TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

- **Device Not Powering On:**
 - Ensure the adapter is securely plugged into a working wall outlet.
 - Verify the DC connector is fully inserted into your device's power port.
 - Check if the wall outlet is functional by plugging in another device.
 - Inspect the adapter and cables for any visible damage. If damaged, discontinue use.
- **Adapter Feels Warm:**
 - It is normal for power adapters to feel warm during operation.
 - If the adapter becomes excessively hot to the touch or emits a burning smell, immediately unplug it from the wall outlet and discontinue use. Contact support.


If these steps do not resolve the issue, please contact UpBright customer support.

7. SPECIFICATIONS

Feature	Detail
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	18V DC

Feature	Detail
Output Current	3.5A (3500mA)
Wattage	63W
Protection Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Compatible Devices	Brookstone Big Blue Party 360 Indoor-Outdoor Bluetooth Speaker (Models: KDS65-180-3500, KDS65-1803500, KDS651803500, KD565-180-3500)
Connector Type	Proprietary DC Barrel Connector
Product Dimensions	Approximately 6 x 4 x 2 inches
Item Weight	Approximately 9 ounces
Included Components	1 x AC Adapter, 1 x AC Power Cord

Come With A Suitable AC Power Cord (Only One)
to Fit Your Country/Area

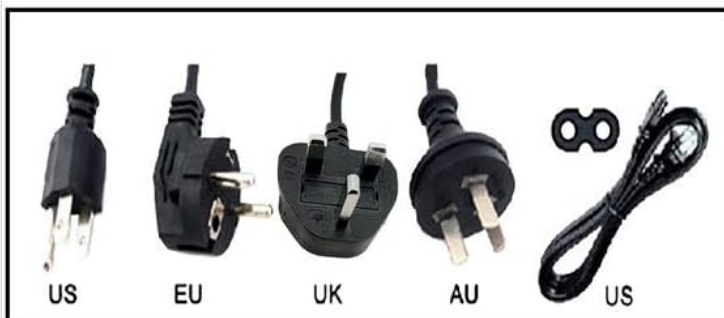

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY



Figure 3: The adapter comes with a suitable AC power cord for your region, and includes a warranty certificate.

8. WARRANTY AND SUPPORT

Your UpBright 18V AC/DC Adapter is backed by the manufacturer's warranty:

- **Refund Policy:** 30 days refund from the date of purchase.
- **Exchange Policy:** 24 months exchange from the date of purchase.

For warranty claims, technical support, or any inquiries regarding your UpBright product, please contact the manufacturer, UpBright, directly through their official support channels or the retailer where the product was purchased.

© 2024 UpBright. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C85NQY1B>

More documents and user manuals: <https://manuals.plus/>