



Manuals.plus /

› Max Factory /

› Max Factory Chiikawa Usagi Nendoroid Action Figure Instruction Manual

Max Factory M06892

Max Factory Chiikawa Usagi Nendoroid Action Figure Instruction Manual

Model: M06892

1. PRODUCT OVERVIEW

The Max Factory Chiikawa Usagi Nendoroid Action Figure brings the beloved character Usagi from the "Chiikawa" series to life. This Nendoroid features magnetic arm and leg parts for seamless posing, three interchangeable face plates to capture various expressions, and optional accessories including a staff, waving arm parts, and crossed arms. It allows for recreating delightful scenes and expressions from the series.



Image: Front view of the Usagi Nendoroid Action Figure displaying a cheerful, open-mouthed expression with rosy cheeks.

Video: A product overview video showcasing various Chiikawa characters, including Usagi, and their features. This video provides a general look at the product line.

2. FEATURES

- **Authentic Design:** A genuine Max Factory import, faithfully reproducing the character Usagi from the "Chiikawa" series.
- **Interchangeable Face Plates:** Includes three distinct face plates to express a range of emotions and scenes.

- **Optional Accessories:** Comes with a staff, waving arm parts, and crossed arm parts for diverse posing options.
- **Magnetic Joints:** Features magnetic arm and leg parts for smooth, natural, and easy posing.

3. SETUP

1. **Unboxing:** Carefully remove the Nendoroid figure and all accessories from the packaging. Retain the packaging for future storage or reference.
2. **Base Assembly:** Attach the clear display stand to the figure's back or feet as appropriate for stability. Ensure it is securely fitted.
3. **Attaching Face Plates:** Gently remove the default face plate. Align the desired face plate with the pegs on the figure's head and press firmly until it clicks into place.
4. **Attaching Optional Parts:** Use the magnetic joints to attach the staff, waving arm parts, or crossed arm parts as desired. Ensure a snug fit.

4. OPERATING INSTRUCTIONS (POSING)

The Usagi Nendoroid is designed for dynamic posing thanks to its magnetic joints and interchangeable parts.

1. **Changing Expressions:** To change Usagi's expression, gently pull off the current face plate and replace it with one of the other two included face plates.
2. **Posing Arms:** The arms feature magnetic connections. Gently pull an arm to detach it and replace it with a different arm part (e.g., waving arm, crossed arm). Adjust the angle of the arms to achieve desired poses.
3. **Using the Staff:** If using the staff accessory, carefully place it into Usagi's hand. Ensure it is held securely.
4. **Adjusting Body Position:** The figure can be gently rotated at the neck and waist to create various body postures. Avoid excessive force to prevent damage.



Image: The Usagi Nendoroid Action Figure holding its yellow staff, demonstrating an accessory in use.



Image: The Usagi Nendoroid Action Figure with its arms crossed, showcasing another interchangeable arm part.

5. MAINTENANCE

- **Cleaning:** To clean the figure, gently wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the figure away from direct sunlight, extreme temperatures, and high humidity to prevent discoloration or material degradation. Keep small parts in a secure container to avoid loss.
- **Handling:** Always handle the figure by its main body. Avoid pulling on small or delicate parts with excessive force.

6. TROUBLESHOOTING

- **Loose Joints:** If a joint feels loose, ensure the part is fully inserted. For magnetic joints, ensure no debris is obstructing the connection.
- **Parts Not Fitting:** If a part does not fit, check for proper alignment. Do not force parts together, as this may cause damage. Refer to the product images for correct assembly.
- **Lost Small Parts:** In case of lost small parts, carefully check the surrounding area. Replacement parts may

not be available.

7. SPECIFICATIONS

Attribute	Detail
Brand	Max Factory
Model Number	M06892
Product Dimensions	7.5 x 5.5 x 3.8 inches
Item Weight	9.2 ounces
Manufacturer Recommended Age	15 years and up
Release Date	April 24, 2024
Language	English
What's in the Box	Figure

8. WARRANTY AND SUPPORT

Warranty information for the Max Factory Chiikawa Usagi Nendoroid Action Figure is not provided in the product data. Please refer to the retailer's return policy or contact Max Factory directly for specific warranty details.

For product support or inquiries, please visit the official Max Factory website or contact their customer service department.