

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TAB](#) /

› [TAB ErasePro H6 Portable Carpet Cleaner User Manual](#)

TAB H6-3

TAB ErasePro H6 Portable Carpet Cleaner User Manual

INTRODUCTION

Thank you for choosing the TAB ErasePro H6 Portable Carpet Cleaner. This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not immerse the appliance in water or other liquids.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only non-foaming cleaning solutions specifically designed for carpet cleaners.
- Ensure tanks are properly secured before operation.
- Do not tilt the machine or use it upside down.

PACKAGE CONTENTS

Verify that all items are present in your package:

- TAB ErasePro H6 Portable Carpet Cleaner Unit
- PowerBrush Attachment
- Extend Hose with cleaning head
- Type-C Charging Cable



Image: The TAB ErasePro H6 Portable Carpet Cleaner shown with its main unit, PowerBrush, and extendable hose attachment.



Image: Close-up of the extendable hose and its cleaning head, which are included with the cleaner.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your TAB ErasePro H6:

- **Main Unit:** Houses the motor, battery, and control panel.
- **Clean Water Tank (350ml):** Holds fresh water and cleaning solution.
- **Dirty Water Tank (260ml):** Collects dirty water and debris.
- **PowerBrush:** Integrated brush head for agitating and lifting stains.
- **Extend Hose:** For cleaning hard-to-reach areas.
- **LED Digital Display:** Shows battery level, hose connection status, and brush switch status.

Removable Dual Water Tank

Seperate water tank,always work with clean water.



Image: Close-up of the cleaner's LED digital display, indicating battery level, spray function, hose connection, and power brush status.

LED Display

Real-time Battery Monitoring



Image: Diagram showing the separate 350ml clean water tank and 260ml dirty water tank, highlighting their removable design.

SETUP

Charging the Battery

Before first use, fully charge the appliance. The LED display will show the battery percentage.

1. Locate the Type-C charging port on the cleaner.
2. Connect the provided Type-C charging cable to the port and a 5V/2A adapter (not included).
3. The LED display will show charging progress. A full charge provides up to 20 minutes of runtime.



Image: Close-up of the Type-C charging port on the cleaner, with the charging cable connected.

Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean water. You may add a non-foaming cleaning solution as recommended by the solution manufacturer. Do not overfill.
3. Securely close the cap and reinsert the tank into the cleaner until it clicks into place.

OPERATING INSTRUCTIONS

General Operation

1. Ensure the clean water tank is filled and the dirty water tank is empty and properly installed.
2. Press the power button to turn on the cleaner.
3. To activate the PowerBrush, press the dedicated PowerBrush button. The brush will rotate to agitate stains.
4. To spray cleaning solution, press the spray button.
5. Move the cleaner slowly over the stained area, allowing the PowerBrush and suction to work.

Extended Hose Design Clean Wherever You Want



Image: The PowerBrush mechanism shown in operation, highlighting its high-speed automatic washing action for better cleaning.

Cordless Rechargeable Spot Cleaner



Image: The cleaner demonstrating its strong suction power on a carpet, suitable for various fabric surfaces like mattresses and sofas.

Cleaning Different Surfaces

- **Carpets & Rugs:** Use the main PowerBrush head directly on the carpet. For deep stains, pre-treat the area if necessary.
- **Upholstery & Car Interiors:** For delicate fabrics or hard-to-reach spots, attach the Extend Hose. Ensure the hose is securely connected; the LED display will indicate proper connection.
- **Pet Stains:** The PowerBrush is effective for agitating and lifting pet messes. Apply cleaning solution, scrub gently, and then suction up the dirty liquid.

Instant Pet Stain Removal

Spot, Erase, Done



Image: The cleaner being used to remove a pet stain from a carpet, illustrating its effectiveness for quick spot cleaning.

Strong Suction Power

Suitable for mattresses, fabric sofa, fabric chairs, carpets, etc.



Image: A user demonstrating the use of the extended hose to clean curtains, showcasing its ability to reach various areas.

Automatically Power Brush

High-speed automatic washing, provide better cleaning.



Image: The cordless cleaner being used to clean a car seat, emphasizing its portability and 20-minute run time for on-the-go cleaning.

Official Product Video: Usage Demonstration

Your browser does not support the video tag.

Video: This official product video demonstrates the TAB ErasePro H6 Portable Carpet Cleaner in action, showing its effectiveness on various stains and surfaces, including the PowerBrush and extended hose features. It also illustrates the ease of use and maintenance.

MAINTENANCE

Emptying and Cleaning Tanks

For optimal performance and hygiene, empty and clean both water tanks after each use.

1. Remove the dirty water tank from the main unit.
2. Open the tank and dispose of the dirty water. Rinse the tank thoroughly with clean water.

- 3. Remove the clean water tank and rinse it if any cleaning solution residue remains.
- 4. Allow both tanks to air dry completely before reassembling.



Image: A visual representation of the clean and dirty water tanks, indicating their positions on the cleaner for easy removal and cleaning.

Cleaning the PowerBrush

Regularly inspect and clean the PowerBrush to prevent hair and debris buildup.

- 1. Detach the PowerBrush head from the main unit.
- 2. Remove any tangled hair or debris from the brush bristles.
- 3. Rinse the brush under running water.
- 4. Allow the PowerBrush to air dry completely before reattaching.



Image: A close-up view of the detachable PowerBrush component, showing its bristles for effective cleaning and ease of maintenance.

TROUBLESHOOTING

If you encounter issues with your TAB ErasePro H6, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Cleaner does not turn on.	Battery is low or depleted.	Charge the battery fully.

Problem	Possible Cause	Solution
No spray or weak spray.	Clean water tank is empty or improperly installed. Nozzle is clogged.	Refill clean water tank. Reinstall tank correctly. Clean the spray nozzle.
Poor suction.	Dirty water tank is full. Dirty water tank is improperly installed. Suction nozzle is blocked.	Empty dirty water tank. Reinstall tank correctly. Clear any blockages from the suction nozzle.
PowerBrush not rotating.	PowerBrush button not pressed. Brush is jammed by debris.	Press the PowerBrush button. Remove any hair or debris from the brush.
Cleaner leaks.	Water tanks are not properly sealed or installed.	Ensure tank caps are securely closed and tanks are correctly seated in the unit.

SPECIFICATIONS

Feature	Specification
Brand	TAB
Model Name	H6-3
Special Feature	Portable Carpet Cleaner
Filter Type	Foam
Clean Water Tank Capacity	0.35 Liters (350ml)
Dirty Water Tank Capacity	0.26 Liters (260ml)
Battery Wattage	2200 milliamp_hours
Runtime	Up to 20 minutes
Recommended Uses	Carpet, Upholstery, Stairs, Car
Form Factor	Handheld
Noise Level	80 dB
Item Weight	4.4 pounds
Package Dimensions	17.28 x 13.07 x 6.69 inches







WARRANTY AND SUPPORT

Your TAB ErasePro H6 Portable Carpet Cleaner comes with a standard manufacturer's warranty. For detailed warranty information, product support, or to purchase replacement parts, please visit the official TAB website or contact customer service through your retailer.

For further assistance, please refer to the contact information provided with your purchase documentation.

© 2023 TAB. All rights reserved.

Related Documents - H6-3

	<p>TAB R6 Carpet Cleaner Machine User Manual</p> <p>User manual for the TAB R6 Carpet Cleaner Machine, providing comprehensive instructions for safe operation, maintenance, and troubleshooting.</p>
	<p>TAB R6 Carpet Cleaner Machine User Manual</p> <p>Comprehensive user manual for the TAB R6 Carpet Cleaner Machine, covering safety instructions, product introduction, preparation, operating instructions, maintenance, and troubleshooting.</p>
	<p>TAB T6-Pro Smart Cordless Wet Dry Vacuum Cleaner and Mop User Manual</p> <p>Comprehensive user manual for the TAB T6-Pro Smart Cordless Wet Dry Vacuum Cleaner and Mop, covering safety instructions, assembly, operation, maintenance, and troubleshooting.</p>
	<p>EG200/EG300 Series Product Information and Refurbished Item Guide</p> <p>Information regarding EG200 and EG300 series products, including notes on accessories, model variations, and guidelines for refurbished units. This document serves as an instruction or support guide.</p>
	<p>TAB EG200/EG300 Series Product Information and Notes</p> <p>Overview of TAB EG200, EG300 series products, including models EG201, EG351, and EG351A. This document provides general information and important notes regarding accessories, illustrative images, and the handling of refurbished units.</p>
	<p>TAB e.module L5.1 Lithium-ion Energy Storage System Operation Manual</p> <p>This manual provides comprehensive instructions for the installation, operation, and safety precautions for the TAB e.module L5.1 Lithium-ion Energy Storage System. Learn about its features, specifications, front panel controls, and proper handling procedures.</p>

