

PURE CLEAN PUCWM23.5

PURE CLEAN Compact Home Washer & Dryer Instruction Manual

Model: PUCWM23.5

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power supply matches the appliance's requirements (110V). Do not operate with a damaged power cord or plug. Avoid using extension cords. Unplug the appliance when not in use or before cleaning.
- **Water Safety:** Do not immerse the appliance in water. Ensure proper drainage to prevent water accumulation. Do not operate if water leaks are detected.
- **Placement:** Place the washer on a firm, level surface to prevent vibration and noise. Ensure adequate space around the appliance for ventilation and operation.
- **Operation:** Do not overload the machine. Do not open the lid during operation, especially during the spin cycle. Keep hands and feet away from moving parts.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Maintenance:** Only perform maintenance as described in this manual. For repairs, contact qualified service personnel.

PRODUCT OVERVIEW AND PARTS IDENTIFICATION

The PURE CLEAN Compact Home Washer & Dryer is a 2-in-1 portable mini washing machine designed for smaller laundry loads. It features twin tubs for washing and spin-drying, offering convenience and efficiency.

PARTS IDENTIFICATION

Portable Mini Washing Machine and Spin Dryer

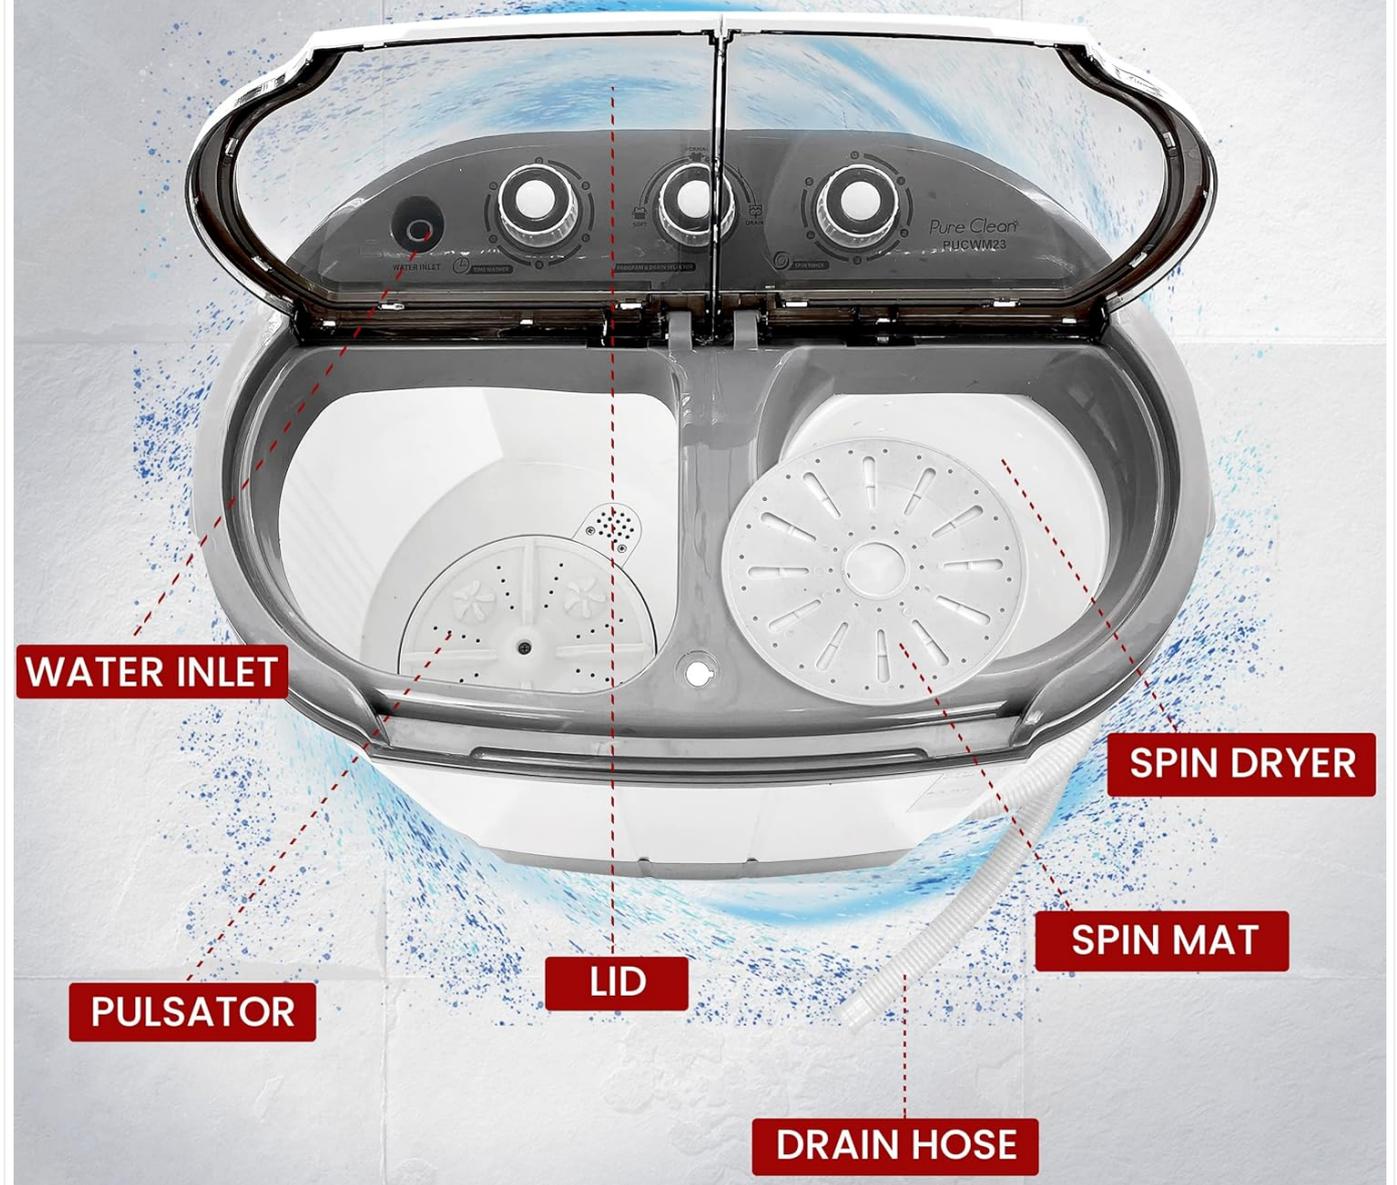


Figure 1: Key components of the Portable Mini Washing Machine and Spin Dryer. This diagram highlights the water inlet, pulsator in the wash tub, the lid covering both tubs, the spin dryer tub, the spin mat used in the spin dryer, and the drain hose.

Main Components:

- **Water Inlet:** Point for adding water to the wash tub.
- **Pulsator:** Located at the bottom of the wash tub, responsible for agitating clothes.
- **Lid:** Transparent cover for both wash and spin dryer tubs.
- **Spin Dryer:** Separate tub for spin-drying clothes.
- **Spin Mat:** A circular accessory placed on top of clothes in the spin dryer to keep them in place during the spin cycle.
- **Drain Hose:** Used to discharge water from the machine.
- **Control Panel:** Features rotary controls for wash timer, program/drain selector, and spin timer.

WHAT'S IN THE BOX

Upon unpacking, please ensure all listed components are present and undamaged.



Figure 2: Unboxed components of the PURE CLEAN Compact Home Washer & Dryer. The image shows the main unit, a spin mat, the drain hose, and four rubber pads. The machine's dimensions are labeled as 23.6 inches (height), 22.2 inches (width), and 13.9 inches (depth).

Included Components:

- 1 x PURE CLEAN Compact Home Washer & Dryer Unit
- 1 x Spin Mat
- 1 x Drain Hose
- Rubber Pads (for stability)

SETUP AND INSTALLATION

The PURE CLEAN Compact Home Washer & Dryer is designed for easy setup without special plumbing. Follow these steps for initial installation.

1. **Placement:** Choose a stable, level surface near a power outlet and a drain point (sink, bathtub, or floor drain). Ensure the machine is not exposed to direct sunlight or extreme temperatures.
2. **Drain Hose Connection:** Connect the provided drain hose to the drain outlet on the machine. Position the other end of the drain

hose into a suitable drain. Ensure the hose is not kinked or blocked.

3. **Power Connection:** Plug the power cord into a standard 110V electrical outlet.
4. **Water Supply:** The machine does not have an automatic water inlet. Water must be manually added to the wash tub using a bucket or hose.



Figure 3: The top-loading design allows for convenient and easy access to load laundry. The machine has a wash capacity of 11 lbs and a spin capacity of 4 lbs, suitable for items like T-shirts, towels, underwear, and socks.

OPERATING INSTRUCTIONS

This section guides you through the washing and spin-drying processes.

1. Washing Cycle:

1. **Load Laundry:** Open the lid and place clothes into the wash tub. Do not exceed the maximum wash-load capacity of 7.7 lbs.
2. **Add Detergent:** Pour the appropriate amount of laundry detergent directly into the wash tub.
3. **Add Water:** Manually fill the wash tub with water to the desired level, ensuring clothes are submerged.

4. **Set Wash Timer:** Turn the "TIME WASHER" knob to select the desired wash time (e.g., 0-15 minutes).
5. **Start Washing:** The machine will begin agitating. You can observe the washing process through the translucent lid.



Figure 4: The top panel features easy-to-use rotary controls for managing the wash time, selecting the program (wash/drain), and setting the spin timer. The water inlet is also visible.



HIGH-POWERED WASHING MOTOR

High-speed motor cleans the dirt effectively

Figure 5: The high-powered 250-watt washing motor ensures effective cleaning of dirt from your laundry. The image shows the vigorous water movement inside the wash tub during operation.

2. Draining Water:

1. Once the wash cycle is complete, turn the "PROGRAM & DRAIN SELECTOR" knob to the "DRAIN" setting. The water will begin to drain out through the drain hose.

3. Spin Drying Cycle:

1. **Transfer Laundry:** Carefully transfer the washed clothes from the wash tub to the spin dryer tub. Distribute them evenly to ensure balance.
2. **Place Spin Mat:** Place the provided spin mat on top of the clothes in the spin dryer tub. This helps to secure the clothes during the high-speed spin.
3. **Set Spin Timer:** Close the lid and turn the "SPIN TIMER" knob to select the desired spin time (e.g., 0-5 minutes). Do not exceed the spin-dryer capacity of 3.3 lbs.
4. **Start Spin:** The spin dryer will begin to rotate at high speed to remove excess water. Do not open the lid until the spin cycle has completely stopped.



Figure 6: The spin-dry mat is essential for safe and effective spin drying. Place it on top of the laundry in the spin tub before starting the spin cycle.

Recommended Laundry Types:

This machine is ideal for smaller laundry items. Examples include:

- Underwear
- Socks
- T-Shirts
- Towels (small to medium size)

2 IN 1 WASHER & DRYER

Perfect for Underwear,
Socks, T-Shirts
& Towels



Figure 7: This 2-in-1 washer and dryer is perfect for small, everyday laundry items such as underwear, socks, t-shirts, and towels, making it suitable for various living situations.

MAINTENANCE AND CARE

Regular cleaning and proper care will extend the life of your appliance.

- **After Each Use:**

- Ensure all water is drained from both tubs.
- Wipe the interior of the tubs with a clean, damp cloth to remove any detergent residue or lint.
- Leave the lids open for a short period to allow the interior to air dry and prevent odors.

- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface.

- **Drain Hose:** Periodically check the drain hose for blockages or kinks. Clean if necessary.

- **Storage:** If storing the machine for an extended period, ensure it is completely dry. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; lid not closed properly; timer not set.	Check power connection; check circuit breaker; ensure lid is fully closed; set timer knob.
Water does not drain.	Drain hose kinked or blocked; drain selector not set to 'DRAIN'.	Straighten drain hose, clear any blockages; turn program selector to 'DRAIN'.
Excessive vibration or noise during spin.	Machine not level; laundry unevenly distributed in spin tub; too much laundry.	Place machine on a level surface; redistribute laundry evenly; reduce load size.
Water leaks.	Drain hose not properly connected; overfilling the tub.	Ensure drain hose is securely attached; do not fill water above the maximum level.

If the problem persists after trying these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

Detailed specifications for the PURE CLEAN Compact Home Washer & Dryer.

Feature	Specification
Model Number	PUCWM23.5
Power Supply	110V
Washing Motor Power	250 Watt
Wash-Load Capacity	7.7 lbs.
Spin-Dryer Power	120 Watt
Spin-Dryer Capacity	3.3 lbs.
Product Dimensions (L x W x H)	22.2" x 13.9" x 23.6" inches
Item Weight	7.7 lbs.
Drainage Hose Length	2.2 ft.
Control Type	Rotary Control Knobs
Access Location	Top Load
Color	Gray
UPC	842893161761

WARRANTY INFORMATION


This PURE CLEAN appliance comes with a **3-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the documentation provided with your product or contact customer support.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact PURE CLEAN customer support. While specific contact details are not provided in this manual, you can typically find support information on the manufacturer's official website or through your retailer. When contacting support, please have your product model number (PUCWM23.5) and proof of purchase readily available.

© 2023 PURE CLEAN. All rights reserved.

Related Documents

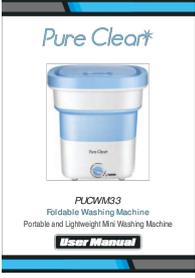	<p>Pure Clean PUCWM33 Foldable Washing Machine User Manual</p> <p>User manual for the Pure Clean PUCWM33 foldable and portable mini washing machine, covering safety precautions, installation, operation, maintenance, and troubleshooting.</p>
	<p>Pure Clean PUCRC90EU/PUCRC90UK Smart Robot Vacuum User Manual</p> <p>This user manual provides comprehensive instructions for the Pure Clean PUCRC90EU and PUCRC90UK Smart Robot Vacuum Cleaner. It covers safety precautions, product parts identification, operating procedures including setup, charging, cleaning modes, scheduling, maintenance, and troubleshooting.</p>
	<p>Pure Clean PUCRC660 Smart Robot Vacuum Cleaner User Manual</p> <p>User manual for the Pure Clean PUCRC660 Smart Robot Vacuum Cleaner, detailing setup, operation via app and remote, maintenance, safety, and troubleshooting.</p>
	<p>Pureclean PUCRC45 Robotic Vacuum Cleaner User Manual</p> <p>Comprehensive user manual for the Pureclean PUCRC45 Robotic Vacuum Cleaner, covering setup, operation, troubleshooting, and technical specifications.</p>