

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BARBERBOSS](#) /

› [BarberBoss Professional Beard Trimmer, Hair Clipper for Men, Ear and Nose Trimmer, 39 Cutting Lengths, Combs, Precision Dial, Waterproof Design, LED Display, QR-6083](#)

BARBERBOSS QR-6083

BARBERBOSS QR-6083 Multi-Grooming Kit

INSTRUCTION MANUAL

[Information](#) [Components](#) [Setup](#) [Operation](#) [Maintenance & Support](#) [Introduction](#) [Safety](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. Introduction

Thank you for choosing the BARBERBOSS QR-6083 Multi-Grooming Kit. This professional 5-in-1 grooming tool is designed for precision and versatility, featuring a high-quality ceramic and stainless steel blade, a precision control dial for 39 cutting lengths, an intuitive LED display, and a fully waterproof design for both wet and dry use. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new grooming kit.

2. Important Safety Information

- Read all instructions before using this appliance.
- Do not immerse the charging cable or adapter in water.
- Keep the appliance away from children. This is not a toy.
- Always unplug the appliance from the power outlet before cleaning.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- Only use the provided USB charging cable.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.
- Ensure the appliance is fully dry before charging.

3. Product Components

Your BARBERBOSS QR-6083 Multi-Grooming Kit includes the following items:

- Main Trimmer Unit
- Hair Clipper Head

- Beard Blade Head
- Detail Trimmer Head
- Body Groomer Head
- Nose & Ear Trimmer Head
- Precision Combs (various lengths)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- Hairdressing Cape
- Comb
- Charging Stand



Image 1: All components included in the BarberBoss QR-6083 kit, including the main trimmer, various interchangeable heads, guide combs, charging cable, cleaning brush, oil, hairdressing cape, and comb.

4. Setup

4.1 Charging the Appliance

1. Ensure the trimmer is dry before charging.
2. Connect the USB charging cable to the charging port at the bottom of the trimmer.

3. Plug the other end of the USB cable into a 5V 1A USB power source (e.g., wall adapter, computer USB port, power bank).
4. The LED display will show the battery level and charging status. A full charge takes approximately 2 hours and provides up to 150 minutes of cordless use.



Image 2: The BarberBoss QR-6083 trimmer connected to a USB cable for charging, illustrating the USB-C port at the base of the unit.

4.2 Attaching and Detaching Trimmer Heads

1. To attach a head: Align the desired trimmer head (Hair Clipper, Beard Blade, Detail Trimmer, Body Groomer, or Nose & Ear Trimmer) with the main unit and press firmly until it clicks into place.
2. To detach a head: Hold the main unit firmly and gently pull the trimmer head upwards to remove it.



Image 3: The BarberBoss QR-6083 main unit displayed with its five interchangeable heads: Hair Clipper, Detail Trimmer, Beard Blade, Body Groomer, and Nose & Ear Trimmer.

5. Operating Instructions

5.1 Powering On/Off

- Press the power button once to turn the trimmer on. The LED display will illuminate.
- Press the power button again to turn the trimmer off.
- To activate the travel lock, long press the power button for 3 seconds. The lock icon will appear on the LED display. Repeat to unlock.

5.2 Adjusting Cutting Lengths

- The precision control dial allows for fine-tuning of cutting lengths from 0.5mm (without guide comb) up to 20mm (with guide combs).
- Rotate the dial to select your desired length setting. The selected length will be indicated on the dial.
- Attach the appropriate guide comb for lengths above 0.5mm. The kit includes combs for various ranges (e.g., 1-10mm, 11-20mm).



Image 4: Close-up of the BarberBoss QR-6083 showing the precision dial with 39 length settings, allowing for precise control over cutting length.

5.3 Using Different Trimmer Heads

- **Hair Clipper Head:** Ideal for general hair cutting and styling. Use with guide combs for desired lengths.
- **Beard Blade Head:** Perfect for shaping and trimming beards and mustaches.
- **Detail Trimmer Head:** For precise lines, edges, and intricate detailing around the beard, hairline, or sideburns.
- **Body Groomer Head:** Designed for safe and comfortable trimming of body hair.
- **Nose & Ear Trimmer Head:** Gently and effectively removes unwanted nose and ear hair.



Image 5: The BarberBoss QR-6083 being used for both beard trimming and hair clipping, demonstrating its versatility.

5.4 Wet and Dry Use

The BARBERBOSS QR-6083 is fully waterproof, allowing for convenient wet or dry use. You can use it in the shower or bath for a smoother, more comfortable trim. Ensure the trimmer is unplugged from any power source before using it in wet conditions.



Image 6: The BarberBoss QR-6083 shown with water droplets, highlighting its waterproof design suitable for wet use and easy cleaning.

6. Maintenance and Cleaning

6.1 Cleaning the Trimmer Heads

1. Turn off the trimmer and detach the trimmer head.
2. Use the provided cleaning brush to remove any loose hairs from the blades and the inside of the head.
3. Rinse the trimmer head under running water. The waterproof design allows for easy rinsing.
4. Allow the head to air dry completely before reattaching or storing.

6.2 Oiling the Blades

For optimal performance and longevity, it is recommended to regularly oil the blades after cleaning, especially if you rinse them with water. Apply a few drops of the provided lubricating oil to the blades and run the trimmer for a few seconds to distribute the oil evenly. Wipe off any excess oil.

6.3 Storage

Store the appliance in a cool, dry place, away from direct sunlight and out of reach of children. Use the charging stand for convenient and organized storage.

7. Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted. Travel lock is activated.	Charge the trimmer. Long press the power button for 3 seconds to deactivate the travel lock.
Poor cutting performance.	Blades are dirty or not oiled. Hair buildup.	Clean the blades and apply lubricating oil. Remove any hair buildup from the trimmer head.
Trimmer makes unusual noise.	Blades need oiling. Head not properly attached.	Apply lubricating oil to the blades. Ensure the trimmer head is securely attached.
LED display not working.	Appliance is off or battery is completely dead.	Turn on the appliance. Charge the appliance.

8. Product Specifications

Model Number	QR-6083
Brand	BARBERBOSS
Blade Material	Ceramic and Stainless Steel (Titanium Ceramic)
Power Source	Battery Powered (Rechargeable)
Battery Type	1 AA (included)
Charge Time	2 hours
Operating Time	Up to 150 minutes
Cutting Lengths	0.5mm (no comb) to 20mm (with combs), 39 settings
Waterproof Rating	Fully Waterproof
Dimensions (Package)	27 x 18.2 x 11.7 cm
Weight (Package)	730 grams

9. Warranty and Support

BARBERBOSS stands behind the quality of its products. Your QR-6083 Multi-Grooming Kit comes with a 100% guarantee, ensuring your satisfaction. For any questions, concerns, or warranty claims, please contact BARBERBOSS customer support through the retailer where you purchased the product or visit the official BARBERBOSS brand store online.

You can visit the BARBERBOSS store at: [BARBERBOSS Amazon Store](#)