



Manuals.plus /

› Zopsc /

› Zopsc Dual Screens Waterproof Digital Camera User Manual

Zopsc Zopsciq5vw3oedu-13

Zopsc Dual Screens Waterproof Digital Camera User Manual

Model: Zopsciq5vw3oedu-13

1. INTRODUCTION

Thank you for purchasing the Zopsc Dual Screens Waterproof Digital Camera. This manual provides essential information for the safe and effective use of your camera. Please read it thoroughly before operating the device and keep it for future reference.

2. SAFETY INFORMATION

- **Waterproof Seal:** Before each underwater use, carefully ensure that the battery door is securely locked. Failure to do so will compromise the camera's waterproof integrity and may cause damage.
- **Depth and Duration:** The camera is waterproof up to 10 feet (3 meters) for approximately one hour per use without an additional case. Do not exceed these limits.
- **Temperature:** Avoid exposing the camera to extreme temperatures.
- **Cleaning:** After underwater use, rinse the camera with fresh water and dry thoroughly with a soft cloth. Do not use chemical cleaners.
- **Battery:** Use only the specified battery type. Do not attempt to open or modify the battery.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:


- 1 x Zopsc Dual Screens Waterproof Digital Camera (Host)
- 1 x Hand Rope
- 1 x Charging Cable (Micro USB)
- 1 x Storage Bag
- 1 x User Manual



This image shows the Zopsc Digital Camera along with its included accessories: a hand rope, a charging cable, and a storage bag.

4. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.

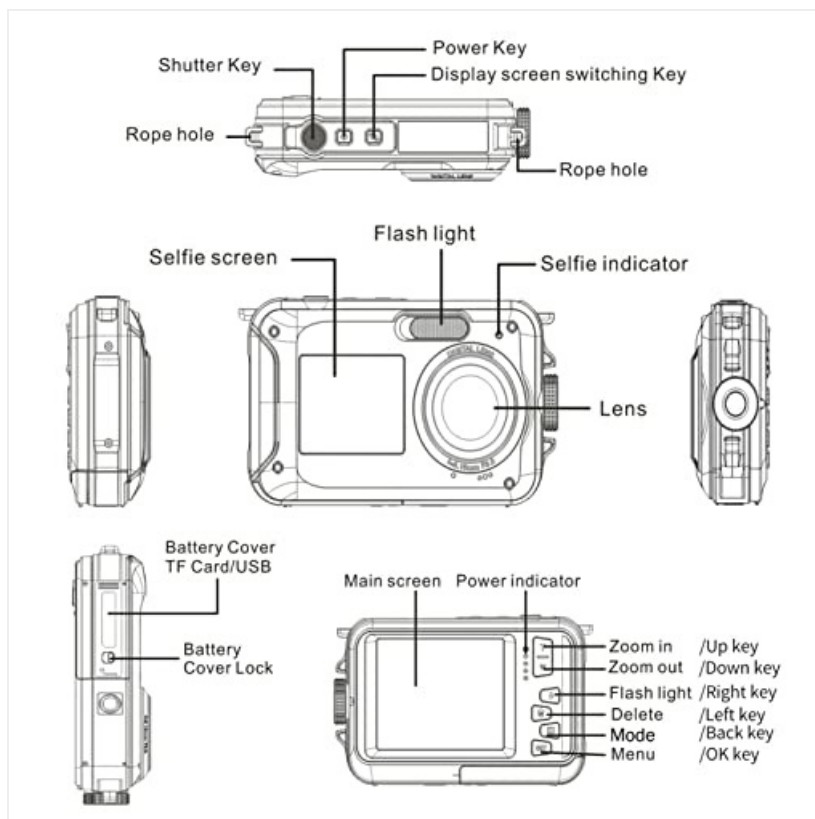

This detailed diagram labels the various parts and controls of the Zopsc Digital Camera, including the shutter key, power key, display screen switching key, rope holes, selfie screen, flash light, lens, battery cover, USB port, main screen, power indicator, zoom buttons, flash light button, delete button, mode button, and menu button.

Dual Screen Design

The camera features a rear 2.7-inch TFT LCD (4:3) for general viewing and a front 1.8-inch TFT LCD (4:3) for convenient selfies.



This image displays the Zopsc Dual Screens Waterproof Digital Camera, highlighting both the larger rear 2.7-inch LCD and the smaller front 1.8-inch LCD, demonstrating its dual-screen capability for easy selfies and viewing.

5. SETUP

5.1. Battery Installation and Charging

1. Locate the battery compartment on the side of the camera.
2. Press the cover lock with one hand and slide the battery cover outwards with the other hand to open the battery door.
3. Insert the provided 650mAh BP 5m Lithium Ion Battery, ensuring correct polarity.
4. Close the battery door securely until it clicks into place. Ensure it is fully locked, especially before underwater use.
5. To charge, connect the camera to a power source using the Micro USB charging cable. The power indicator light will show charging status.

5.2. Memory Card Installation

The camera supports Micro SD cards up to 128GB (not included, purchase separately).

1. Open the battery compartment door as described above.
2. Locate the Micro SD card slot inside the compartment.
3. Insert the Micro SD card into the slot until it clicks.
4. Close the battery door securely.

HD waterproof camera 48MP 2.7K1080P 128GB



This image displays the Zopsc Digital Camera alongside a 128GB Micro SD card, indicating its compatibility with high-capacity storage for extended shooting.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

Press and hold the **Power Key** to turn the camera on or off.

6.2. Taking Photos

In photo mode, press the **Shutter Key** to capture a 48MP image. The camera supports various image resolutions including 48M, 30M, 24M, 20M, 16M, 12M, 8M, 7M, 5M, 2M.



This image highlights the camera's ability to capture high-resolution 48MP photos and record 2.7K video, suitable for various outdoor and underwater activities.

6.3. Recording Videos

Switch to video mode using the **Mode** button. Press the **Shutter Key** to start recording 2.7K (2688x1520P/20fps) or 1080P (1920x1080P/30fps) video. Press again to stop recording.

6.4. Using Dual Screens (Selfie Mode)

Press the **Display Screen Switching Key** to toggle between the rear and front LCD screens. The front screen is ideal for framing selfies. Built-in selfie timers (2, 5, 10 seconds) are available in the settings.

6.5. Digital Zoom

Use the **Zoom In** and **Zoom Out** buttons to adjust the 16X digital zoom. Note that digital zoom may reduce image quality.



This image illustrates the 16X digital zoom capability of the Zopsc camera, showing a subject at 1X, 4X, and 16X magnification.

6.6. Flash Modes

The camera features a built-in flash. Use the **Flash Light** button to cycle through flash modes: Auto, On/Fill, and Off.

6.7. Underwater Use

Ensure the battery door is securely locked before submerging the camera. The camera is waterproof up to 10 feet (3 meters) for up to one hour per session. It is designed for outdoor activities and underwater photography.



This image shows the Zopsc Digital Camera in use underwater, demonstrating its waterproof design for capturing moments during swimming or snorkeling.

6.8. Recording While Charging

The camera supports recording while charging, allowing for extended use when connected to a power source.

7. MAINTENANCE

- **Cleaning:** After each use, especially after exposure to saltwater, rinse the camera with fresh water. Wipe the body and screens with a soft, lint-free cloth. Do not use abrasive materials or chemical solvents.
- **Seals:** Regularly inspect the rubber seals around the battery compartment for any signs of damage, dirt, or debris. Clean them gently if necessary. Damaged seals can compromise waterproofing.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery compartment is dry before closing for long-term storage.
- **Battery Care:** If storing for an extended period, remove the battery. Recharge the battery periodically to maintain its health.

8. TROUBLESHOOTING

- **Camera does not power on:**
 - Ensure the battery is correctly installed and fully charged.
 - Check if the battery door is securely closed.
- **Water leakage:**
 - Immediately remove the camera from water.

- Check the battery door seal for proper closure and any damage or debris.
- Do not use the camera if water has entered the compartment. Contact support.
- **Poor image/video quality:**
 - Ensure the lens is clean and free from smudges or water droplets.
 - Check lighting conditions.
 - Digital zoom (16X) can reduce image clarity; try to shoot without maximum zoom if possible.
- **Memory card error:**
 - Ensure the memory card is correctly inserted.
 - Try formatting the memory card (this will erase all data).
 - Test with a different compatible Micro SD card.
- **Controls are unresponsive or fiddly:**
 - Ensure your fingers are dry and clean.
 - Practice using the controls to become familiar with their operation.

9. SPECIFICATIONS

Feature	Specification
Image Resolution	Up to 48MP (48M, 30M, 24M, 20M, 16M, 12M, 8M, 7M, 5M, 2M)
Image Format	JPEG
Video Resolution	FHD 2.7K (2688x1520P/20fps), FHD 1920x1080P/30fps, HD 1280x720P/30fps, VGA, QVGA
Video Format	AVI
Dual Screen	Rear: 2.7 Inch TFT LCD (4:3); Front: 1.8 Inch TFT LCD (4:3)
Digital Zoom	16X
Waterproof Depth	10ft (3 meters)
Battery Capacity	650mAh BP 5m Lithium Ion Battery
Interface	Micro USB 2.0
Memory Support	Micro SD card up to 128GB (not included)
Continuous Shooting	Yes
Microphone	Built-in
Material	ABS, Metal
Weight	Approx. 258g / 9.1oz

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.