

John Timberland 135P8

John Timberland Titan Outdoor Wall Light Fixtures

Model: 135P8

INTRODUCTION

Thank you for purchasing the John Timberland Titan Modern Outdoor Wall Light Fixtures. This set of two rectangular box frame lights features a mystic black finish and clear glass panels, designed to enhance the exterior of your home. This manual provides essential information for safe installation, operation, and maintenance of your new lighting fixtures. Please read all instructions carefully before beginning installation.

SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Use only UL/cUL listed wire connectors.
- This fixture is rated for wet locations. Ensure all connections are properly sealed to prevent water intrusion.
- Do not exceed the maximum wattage specified for the bulb (60 watts).
- Handle glass components with care to prevent breakage.

WHAT'S IN THE BOX

Your package should contain the following items:

- 2 x John Timberland Titan Outdoor Wall Light Fixtures
- Mounting Hardware (screws, wire nuts, mounting plate)

Note: Bulbs are not included. Each fixture requires one standard-medium base (E26) bulb, maximum 60 watts.



Image: Two John Timberland Titan outdoor wall light fixtures, black rectangular frames with clear glass panels, shown with Edison-style bulbs.

SPECIFICATIONS

Brand	John Timberland
Model Name	Titan Outdoor Wall Light
Model Number	135P8
Dimensions (Each)	20" High x 7" Wide x 9.25" Extension from wall
Weight (Each)	8.4 lbs
Material	Metal frame, Clear Glass panels
Finish	Mystic Black
Bulb Base	E26 (Standard-Medium)
Max Wattage	60 Watts per bulb
Voltage	120 Volts
Indoor/Outdoor Usage	Outdoor (Wet Location Rated)

Extends 9 1/4"



Image: Dimensional diagram of the light fixture.

SETUP AND INSTALLATION

Professional installation is recommended. Ensure power is OFF at the circuit breaker before proceeding.

1. **Prepare the Area:** Turn off the main power supply at the circuit breaker. Clear the installation area of any obstructions.
2. **Attach Mounting Plate:** Secure the mounting plate (crossbar) to the junction box using the provided screws. Ensure it is firmly attached.
3. **Wiring:** Connect the fixture's wires to your household electrical wires.
 - Connect the black wire (hot) from the fixture to the black wire (hot) from the junction box.
 - Connect the white wire (neutral) from the fixture to the white wire (neutral) from the junction box.

- Connect the green or bare copper wire (ground) from the fixture to the ground wire from the junction box.

Use wire nuts to secure all connections and wrap them with electrical tape for added safety. Carefully tuck all wires into the junction box.

4. **Mount the Fixture:** Align the fixture's backplate with the mounting plate and secure it using the provided screws. Ensure the fixture is flush against the wall and stable.
5. **Install Bulb:** Insert one E26 base bulb (max 60 watts, not included) into the socket. The fixture is designed for the bulb to face downwards.
6. **Restore Power:** Turn the main power supply back ON at the circuit breaker. Test the light fixture.



Image: Detail of the fixture's mounting area.





Image: Detail of the bulb socket and clear glass panels.

OPERATING INSTRUCTIONS

The John Timberland Titan Outdoor Wall Light Fixtures operate via a standard wall switch connected to your home's electrical system. Once installed and power is restored, simply use the wall switch to turn the lights ON or OFF.



Image: Fixture installed and illuminated on an exterior wall.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass.
- **Bulb Replacement:** Ensure power is off before replacing the bulb. Allow the bulb to cool completely before touching. Unscrew the old bulb and screw in a new E26 base bulb, not exceeding 60 watts.
- **Glass Panels:** Periodically check the clear glass panels for any cracks or damage. Replace if necessary to maintain the wet location rating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Light does not turn ON	1. Power is off 2. Bulb is faulty 3. Loose wiring connection	1. Check circuit breaker and wall switch 2. Replace bulb 3. Turn off power, check wiring connections
Light flickers	1. Loose bulb 2. Loose wiring connection 3. Incorrect bulb type	1. Tighten bulb 2. Turn off power, check wiring connections 3. Ensure bulb is compatible (E26, max 60W)
Water inside fixture	1. Improper sealing during installation 2. Damaged glass panel	1. Turn off power, reseal connections and mounting area 2. Turn off power, replace damaged glass panel

WARRANTY AND SUPPORT

This John Timberland product comes with a limited 1-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or normal wear and tear.

For warranty claims or technical support, please contact John Timberland customer service through the retailer where the product was purchased or visit the official John Timberland website for contact information.

Your browser does not support the video tag.

Video: An official brand video showcasing various John Timberland outdoor lighting styles and fountains. This video provides an overview of the brand's product aesthetics and quality.