



[Manuals.plus](#) /

› [Furniwell](#) /

› Furniwell Massage Recliner Chair FN2472P0-M User Manual

Furniwell FN2472P0-M

Furniwell Massage Recliner Chair User Manual

Model: FN2472P0-M | Brand: Furniwell

INTRODUCTION

Thank you for choosing the Furniwell Massage Recliner Chair. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new recliner. Please read it thoroughly before use and retain it for future reference.



Image: The Furniwell Massage Recliner Chair in Grey Textile, showcasing its design and integrated remote control.

SAFETY INFORMATION

Please follow the assembly instructions carefully to avoid injury. Do not exceed the maximum weight recommendation of 265 pounds.

- Ensure all components are securely fastened before use.
- Keep children and pets away from the chair during assembly and operation.
- Do not stand on the chair or use it as a step stool.
- Avoid placing the chair near heat sources or in direct sunlight to prevent material damage.

- Unplug the chair from the power outlet when not in use or before cleaning.

PACKAGE CONTENTS

Verify that all parts are present before beginning assembly:

- Main Recliner Body (Seat and Armrests)
- Backrest
- 4 Chair Legs/Feet
- Power Adapter
- Remote Control for Massage Function
- Instruction Manual (this document)

SETUP AND ASSEMBLY

Assembly of the Furniwell Massage Recliner Chair is designed to be straightforward and typically takes approximately 5 minutes. All parts are clearly marked with letters or numbers to guide you through the process.

1. **Attach the Legs:** Carefully turn the main recliner body upside down. Screw each of the four chair legs into the designated threaded holes at the bottom corners of the chair. Ensure they are tightened securely.
2. **Connect the Backrest:** Align the metal brackets on the backrest with the corresponding slots on the main recliner body. Slide the backrest down firmly until it clicks into place. Ensure both sides are securely engaged.
3. **Connect Power and Remote:** Locate the power cable extending from the chair and connect it to the provided power adapter. Plug the power adapter into a standard electrical outlet. Connect the remote control cable to the designated port on the chair.
4. **Secure Remote Cable:** Tuck any excess remote control cable into the side pocket or secure it to prevent tripping hazards.



Image: A diagram illustrating the chair's dimensions and key assembly points, including the attachment of legs and backrest.

OPERATING INSTRUCTIONS

Reclining Function

The recliner features an adjustable backrest and footrest, allowing for various comfortable positions from 90 to 160 degrees. To recline, simply lean back gently while applying pressure to the backrest. The footrest will extend automatically. To return to an upright position, lean forward and push the footrest down with your legs until it locks into place.

ENJOY ALL KINDS OF STATES

Easily adjust the Angle of the recliner sofa to create a comfortable life.



Image: A visual guide demonstrating the chair's adjustable reclining angles suitable for various activities like reading, watching a film, or napping.

Massage Function

The integrated massage function provides relaxation and comfort. Use the wired remote control to operate the massage features.

REMOTE CONTROL ADJUST



Image: A close-up of the remote control, highlighting buttons for 8 massage modes, intensity adjustment, timer settings (15/30 minutes), and power on/off.

- **Power On/Off:** Press the power button (circle icon) to turn the massage function on or off.
- **Massage Modes:** Use the up/down arrow buttons next to the body diagram to cycle through 8 different massage modes. The illuminated numbers (1-8) indicate the active mode.
- **Intensity Adjustment:** Use the '+' and '-' buttons to increase or decrease the massage intensity.
- **Timer Setting:** Press the timer button (clock icon) to set the massage duration to 15 or 30 minutes.

8 MASSAGE MODE FUNCTION



Simulation Massage •



Remote Control •



Image: A graphic detailing the 8 massage mode functions, including simulation massage, controlled via the remote.

MAINTENANCE

- **Cleaning:** For fabric upholstery, gently spot clean with a damp cloth and mild soap. For leatherette, wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Movement:** When moving the chair, lift it rather than dragging to prevent damage to the legs or frame.

TROUBLESHOOTING

- **Chair does not recline:** Ensure the backrest is fully engaged and locked into the main body. Check for any obstructions.
- **Massage function not working:** Verify that the power adapter is securely plugged into both the chair and the wall outlet. Ensure the remote control cable is properly connected. Try pressing the power button on the remote.
- **Unstable chair:** Check that all four legs are securely tightened. Ensure the chair is placed on a flat, even surface.

SPECIFICATIONS

Brand	Furniwell
Model Name	Massage Recliner Chair
Item Model Number	FN2472P0-M
Color	Grey
Product Dimensions	29.1"D x 20.5"W x 38.5"H
Seat Height	17.7 Inches
Seat Depth	38.5 inches
Item Weight	54.9 pounds
Maximum Weight Recommendation	265 Pounds
Material Type	Foam (Fill Material), Suede (Upholstery Fabric Type)
Reclining Position Count	More than 2 (90-160 degrees)
Special Feature	Adjustable, Massage Function

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Furniwell customer service through the retailer where the product was purchased or visit the official Furniwell website. Please have your model number (FN2472P0-M) and purchase date available when contacting support.

