

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DJGA-JDFH](#) /

› [Mini Electric Household Sewing Machine User Manual](#)

DJGA-JDFH UFR 705

Mini Electric Household Sewing Machine User Manual

Model: UFR-705

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your DJGA-JDFH Mini Electric Household Sewing Machine, Model UFR-705. Please read this manual thoroughly before using the machine to ensure proper function and longevity.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the machine from the electrical outlet immediately after using and before cleaning, removing, or replacing any parts.
- Do not allow children to operate the machine without supervision.
- Use this appliance only for its intended use as described in this manual.
- Never operate the machine if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always use the proper needle plate. The wrong plate can cause the needle to break.
- Do not pull or push fabric while stitching. This may deflect the needle, causing it to break.
- Turn the sewing machine off when making any adjustments in the needle area, such as threading the needle, changing the needle, or changing the presser foot.
- Always unplug the machine when removing covers, lubricating, or making any other adjustments mentioned in this instruction manual.

3. PRODUCT COMPONENTS AND FEATURES

Familiarize yourself with the various parts of your sewing machine for optimal operation.



Figure 3.1: Front view of the Mini Electric Household Sewing Machine. This image displays the overall design, including the needle area, presser foot, stitch selector dial, and power switch.



Figure 3.2: A user demonstrating the operation of the sewing machine, showing how fabric is guided under the needle.

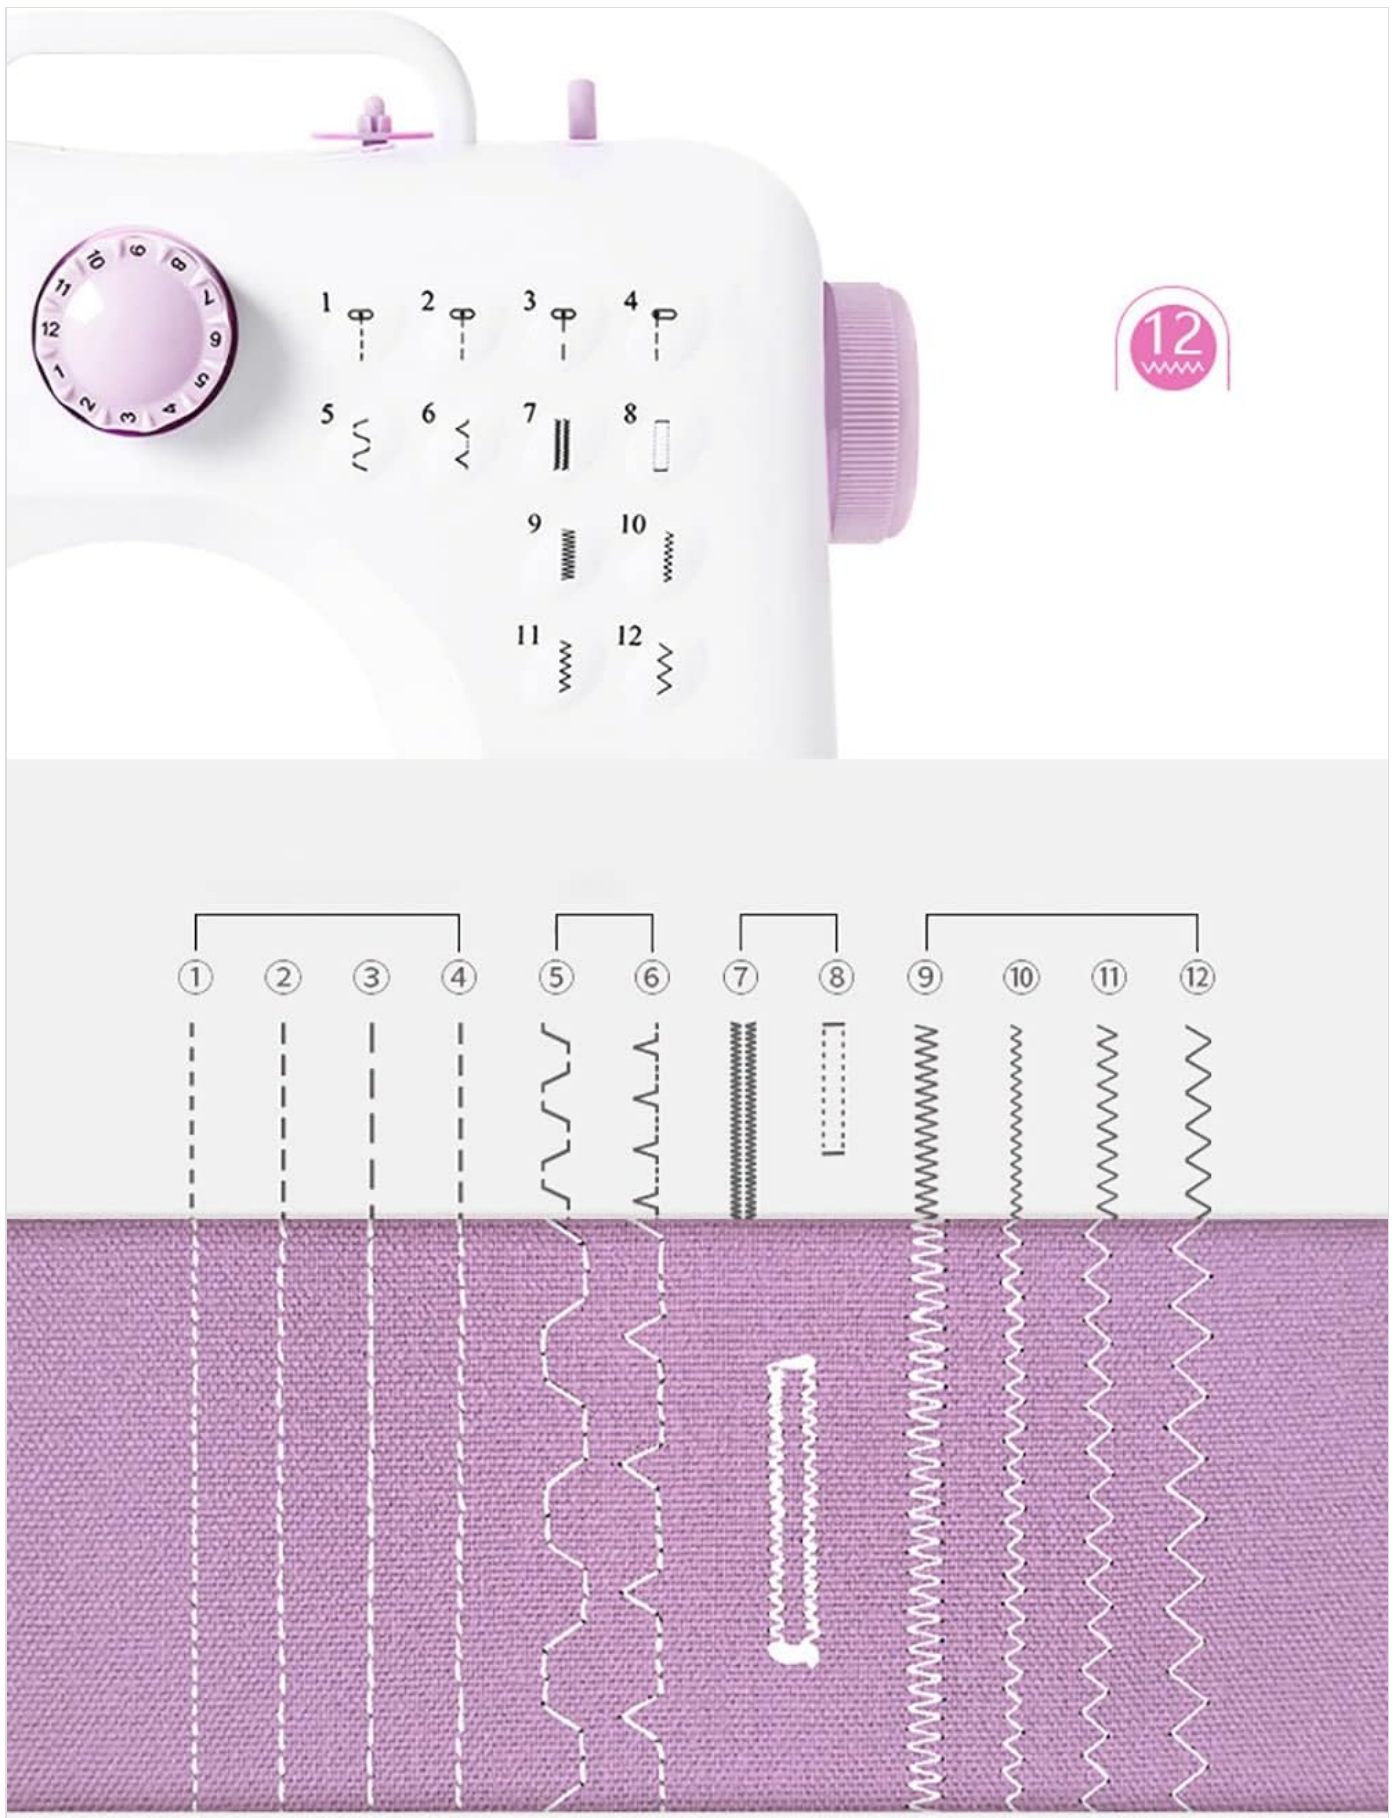


Figure 3.3: The sewing machine displayed with its original packaging, power adapter, foot pedal, and various sewing accessories such as bobbins and thread spools.



Figure 3.4: Diagram illustrating the dimensions of the sewing machine: 10.83 inches (width), 4.76 inches (depth), and 10.24 inches (height).

4. SETUP AND INITIAL USE

4.1 Powering the Machine

The sewing machine can be powered by either the included AC adapter or 4 AA batteries (not included).

- **AC Adapter:** Insert the small end of the AC adapter into the DC input jack on the back of the machine. Plug the other end into a standard electrical outlet (AC 100-240V).
- **Batteries:** Open the battery compartment on the bottom of the machine. Insert 4 AA batteries, ensuring correct polarity. Close the compartment securely.



Figure 4.1: Image showing the power adapter and the battery compartment located on the underside of the sewing machine.

4.2 Threading the Machine

Proper threading is crucial for consistent stitching. Follow these steps carefully:

1. Place a spool of thread on the spool pin.
2. Guide the thread through the upper thread guide.
3. Pass the thread through the tension adjustment dial.
4. Thread the needle from front to back.
5. Raise the presser foot lever.
6. Insert a pre-wound bobbin into the bobbin case under the needle plate. Ensure the thread unwinds in the correct direction.
7. Pull the bobbin thread up through the needle plate opening using the upper thread.
8. Lower the presser foot.

4.3 Attaching the Foot Pedal

The foot pedal provides hands-free speed control. Plug the foot pedal cable into the designated port on the side of the machine.

5. OPERATING INSTRUCTIONS

5.1 Selecting a Stitch Pattern

This machine offers 12 different stitch patterns. Rotate the stitch selector dial to choose your desired stitch. Refer to the stitch guide for visual representation of each pattern.



Figure 5.1: Close-up view of the stitch selector dial and the visual guide displaying the 12 available stitch patterns, including straight stitches, zigzag stitches, and buttonhole stitches.

5.2 Adjusting Sewing Speed

The machine has two speed settings: Low (L) and High (H). Use the speed switch located on the front of the machine to select the appropriate speed for your project. For beginners or intricate work, the Low speed is recommended.

5.3 Starting and Stopping Sewing

- Place the fabric under the presser foot.
- Lower the presser foot lever.
- Slowly press the foot pedal or slide the power switch to the 'ON' position to begin sewing.
- To stop, release the foot pedal or slide the power switch to the 'OFF' position.
- Raise the presser foot and gently pull the fabric away from the machine.
- Cut the threads using the built-in thread cutter.

5.4 Reverse Sewing

To reinforce stitches at the beginning and end of a seam, press and hold the reverse lever/button while sewing. Release to continue forward stitching.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and smooth operation of your sewing machine.

6.1 Cleaning

- Always unplug the machine before cleaning.
- Use a soft brush to remove lint and dust from the bobbin area and feed dogs.
- Wipe the exterior of the machine with a soft, dry cloth. Do not use liquid cleaners or harsh chemicals.

6.2 Needle Replacement

Replace the needle regularly, especially if it becomes bent, dull, or if you experience skipped stitches. Ensure the flat side of the needle faces the back of the machine when inserting.

6.3 Storage

When not in use, store the machine in a dry, dust-free environment. It is recommended to cover the machine to protect it from dust.

7. TROUBLESHOOTING GUIDE

This section addresses common issues you might encounter and their solutions.

Problem	Possible Cause	Solution
Machine not turning on	No power supply; Power switch off; Batteries drained.	Check AC adapter connection; Ensure power switch is ON; Replace batteries.
Skipped stitches	Incorrectly threaded; Bent or dull needle; Wrong needle size for fabric.	Re-thread the machine; Replace needle; Use appropriate needle for fabric type.
Thread breaking	Too much tension; Poor quality thread; Needle inserted incorrectly.	Adjust tension dial; Use good quality thread; Re-insert needle correctly.
Fabric not feeding	Presser foot not lowered; Lint under feed dogs.	Lower presser foot; Clean feed dogs.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Product Name	Multifunctional Sewing Machine
Model	UFR-705
Input Voltage	AC 100-240V
Applicable Object	Fabric, Cotton, Canvas, Denim
Applicable Thickness Range	Up to 6 layers of denim

Feature	Detail
Stitches	12 types
Weight	2.5 KG
Product Dimensions (L x W x H)	275 x 121 x 260 MM (10.83" x 4.76" x 10.24")
Color	Purple
Is Electric	Yes

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation. Keep your proof of purchase for any warranty claims.

Manufacturer: DJGA-JDFH

