

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZEBRONICS](#) /

› [ZEBRONICS Roxor 100W Multi-Connectivity Speaker User Manual](#)

ZEBRONICS Zeb-Roxor

ZEBRONICS Roxor 100W Multi-Connectivity Speaker User Manual

Model: Zeb-Roxor | Brand: ZEBRONICS

INTRODUCTION

This user manual provides comprehensive instructions for the operation, setup, and maintenance of your ZEBRONICS Roxor 100W Multi-Connectivity Speaker. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your audio experience. The ZEB-Roxor is a powerful DJ Party Speaker designed for versatile audio playback and entertainment.

PRODUCT OVERVIEW

Key Features

- 100W Power Output with Dolby Audio support.
- Multi-connectivity options: Bluetooth v5.0, HDMI (ARC), Optical, USB, AUX In, AUX Out.
- Built-in rechargeable battery providing up to 5 hours of playback (at 50% volume & LED off).
- Dual full-range 13.33 cm drivers for comprehensive frequency response.
- True Wireless Stereo (TWS) function for connecting two ZEB-Roxor speakers.
- Karaoke function with included Wireless UHF Microphone.
- Recording function (via Type-C connectivity, refer to manual for details).
- Dynamic RGB LED lights for enhanced ambiance.
- Remote control for convenient operation, including treble, equalizer, and karaoke options.
- Supports USB pen drives up to 32GB for MP3 playback.
- Dedicated mic and guitar inputs.

What's in the Box

- 1 x DJ Speaker (ZEB-Roxor)
- 1 x Remote Control
- 1 x Wireless UHF Microphone
- 1 x Power Cord



Figure 1: ZEBRONICS Roxor Speaker with included accessories.



Figure 2: Top panel controls and rear connectivity ports of the ZEB-Roxor speaker.

Dual Full Range Drivers

13.33cm
DRIVER

100Watt
RMS

Dolby Audio

Figure 3: Internal structure highlighting dual full-range drivers and Dolby Audio capabilities.

SETUP

- Unpacking:** Carefully remove the speaker and all accessories from the packaging. Retain the packaging for future transport or storage.
- Placement:** Place the speaker on a stable, flat surface. Ensure adequate ventilation around the unit.
- Charging:** Before first use, fully charge the speaker's built-in battery using the provided power cord. Connect the power cord to the speaker's power input and then to a suitable power outlet. The LED indicator will show charging status. A full charge takes approximately 1.5 hours.
- Power On:** Press and hold the power button on the top panel or remote control to turn on the speaker.

OPERATING INSTRUCTIONS

Basic Controls (Top Panel)

LED Lights



Wireless UHF Mic



Remote Control



BT v5.0



Figure 4: Top panel controls and mobile/tablet holder.

- **Power Button:** Press and hold to turn on/off.
- **Volume Knob:** Rotate to adjust the master volume.
- **Play/Pause Button:** Press to play or pause audio playback.
- **Previous/Next Track Buttons:** Press to skip to the previous or next track.
- **Light Button:** Press to cycle through LED light modes or turn them off.
- **TWS Button:** Used for True Wireless Stereo pairing (see TWS section).

Remote Control

Controls (LED Indicator)



Mobile / Tablet Holder



Figure 5: Included remote control for the ZEB-Roxor speaker.

The remote control provides full functionality, including power, volume, track control, input mode selection, equalizer presets, treble/bass adjustment, and karaoke functions. Ensure line of sight to the speaker's IR receiver for optimal performance.

CONNECTIVITY



HDMI(ARC)

Optical In

USB

AUX In

AUX Out

Mic In x 1

Guitar/Mic In x 1

Figure 6: Connectivity options on the ZEB-Roxor speaker.

- **Bluetooth (BT v5.0):**

1. Turn on the speaker and switch to Bluetooth mode. The LED indicator will flash, indicating pairing mode.
2. Enable Bluetooth on your smartphone or device and search for "ZEB-ROXOR".
3. Select the speaker from the list to pair. Once connected, the LED indicator will stop flashing.

- **HDMI (ARC):**

Connect an HDMI cable from your TV's HDMI ARC port to the speaker's HDMI ARC port for high-quality audio transmission.

- **Optical In:**

Use an optical cable to connect compatible audio sources (e.g., TV, gaming console) to the speaker for digital audio input.

- **USB:**

Insert a USB pen drive (up to 32GB) containing MP3 audio files into the USB port. The speaker will automatically detect and play the music.

- **AUX In:**

Connect external audio devices (e.g., MP3 player, laptop) using a 3.5mm AUX cable to the AUX In port.

- **AUX Out:**


Connect another audio device or speaker to the AUX Out port to extend your audio setup.

- **Mic In / Guitar/Mic In:**

Plug in the wireless UHF microphone or a wired microphone/guitar into the respective input jacks for karaoke or live performance.

SPECIAL FEATURES

Karaoke Function

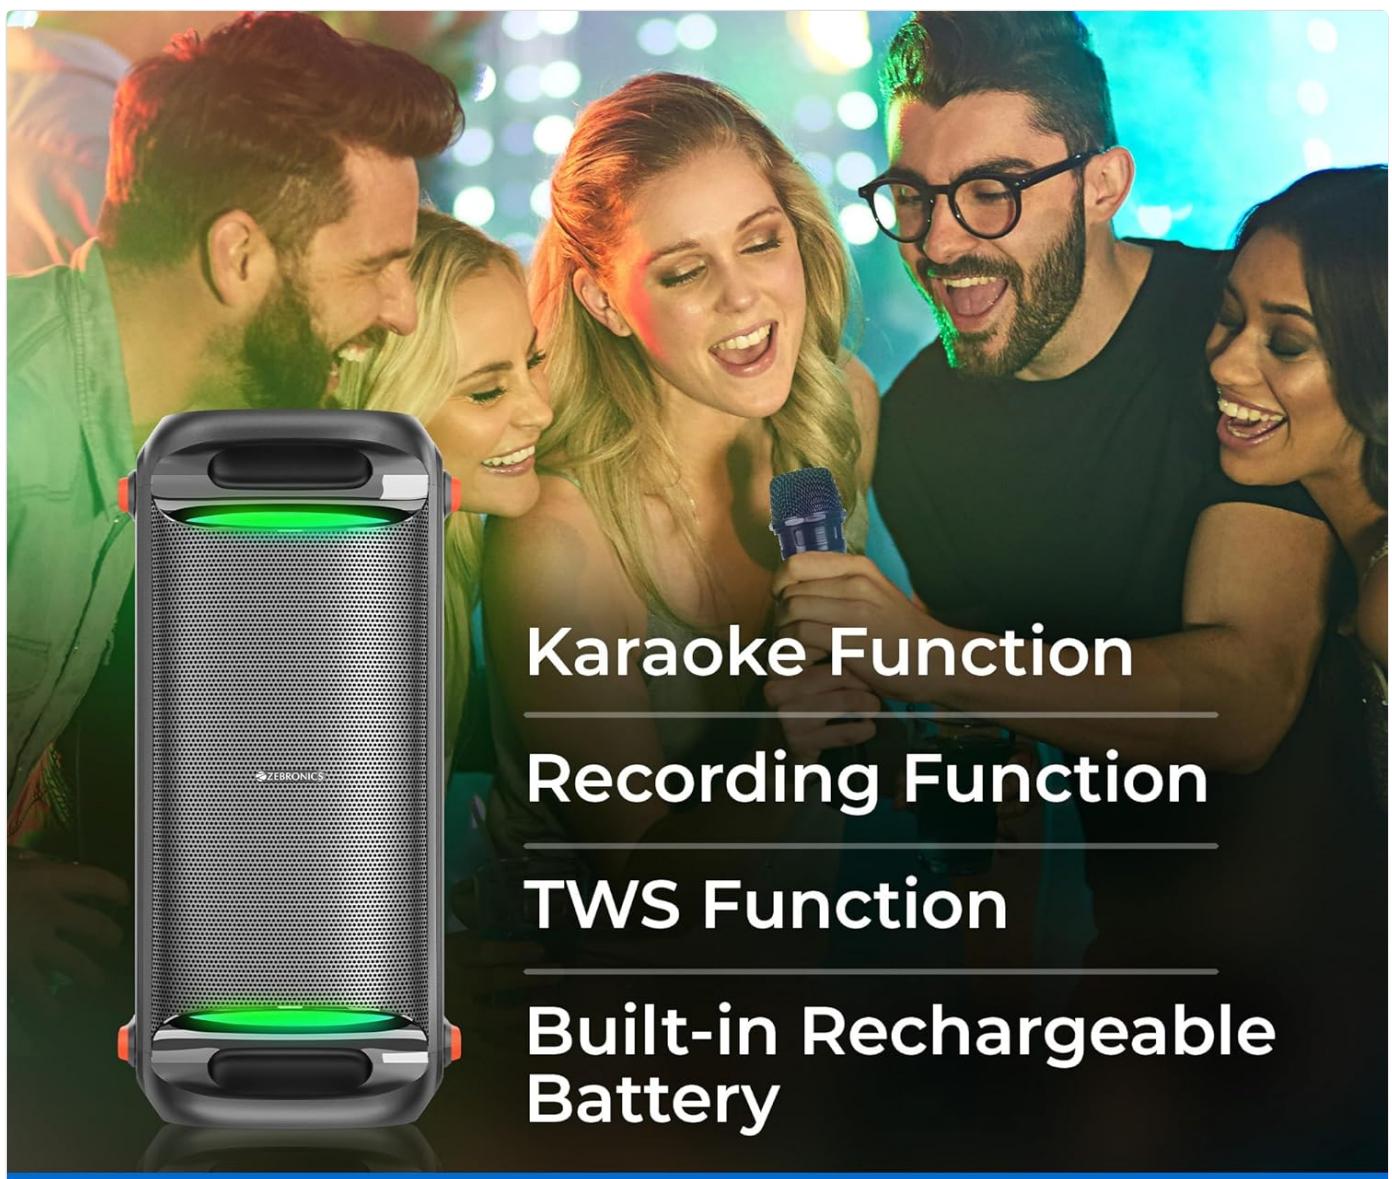

****Recording can be done using Type-C connectivity, refer to the user manual for more details**

Figure 7: The ZEB-Roxor supports karaoke for entertainment.

The ZEB-Roxor comes with a wireless UHF microphone for karaoke. Simply connect the microphone to the speaker, play your favorite tracks, and sing along. Adjust microphone volume and echo effects using the controls on the speaker or

remote.

True Wireless Stereo (TWS)

The TWS function allows you to connect two ZEB-Roxor speakers wirelessly for a stereo sound experience.

1. Ensure both ZEB-Roxor speakers are powered on and in Bluetooth mode.
2. On one speaker, press and hold the "TWS" button. You will hear an indication sound.
3. The speakers will automatically search and pair with each other. Once paired, you will hear a confirmation sound.
4. Connect your device to one of the paired speakers via Bluetooth. Audio will now play through both speakers in stereo.

Recording Function

The speaker supports a recording function, typically via Type-C connectivity. For detailed instructions on how to use the recording feature, please refer to the specific section in the full user manual or the product's official support page.

LED Lights

The ZEB-Roxor features dynamic RGB LED lights that can be controlled via the "Light" button on the top panel or remote. Cycle through various lighting modes to match your mood or party ambiance.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in active use.
- **Ventilation:** Ensure the speaker's vents are not blocked to prevent overheating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery discharged; Power cord not connected.	Charge the speaker; Ensure power cord is securely connected.
No sound	Volume too low; Incorrect input mode; Device not connected properly.	Increase volume; Select correct input mode (Bluetooth, AUX, USB, etc.); Reconnect device.
Bluetooth not connecting	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is in BT pairing mode; Turn on device Bluetooth; Move device closer to speaker (within 10 meters).
Microphone not working	Microphone off; Low microphone battery; Incorrect input selected.	Turn on microphone; Replace microphone batteries; Ensure Mic input is selected.
Distorted sound	Volume too high; Audio source issue.	Reduce volume; Check audio source quality.

SPECIFICATIONS

Feature	Detail
Model Name	Zeb Roxor
Speaker Type	Outdoor
Mounting Type	Floor Standing
Audio Output Mode	Stereo, Dolby Audio
Speaker Maximum Output Power	100 Watts
Frequency Response	20 KHz
Signal-to-Noise Ratio	70 dB
Noise Level	85 dB
Connectivity Technology	Bluetooth v5.0, HDMI (ARC), Optical, USB, AUX In, AUX Out
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered
Battery Life	5 Hours (at 50% volume & LED off)
Charging Time	1.5 Hours
Product Dimensions	27.7D x 27.7W x 56H Centimeters
Item Weight	9 kg
Included Components	DJ Speaker - 1 unit, Remote - 1 unit, Wireless Mic - 1 unit, Power Cord - 1 unit
Color	Black
Is Waterproof	TRUE

WARRANTY AND SUPPORT

The ZEBRONICS Roxor speaker comes with a **One Year Carry-in Warranty** to the service center. For any technical assistance, troubleshooting, or warranty claims, please contact ZEBRONICS customer support. Keep your purchase receipt as proof of purchase for warranty services.

For further support, visit the official ZEBRONICS website or refer to the contact information provided with your product packaging.

Related Documents - Zeb-Roxor



[Zebronics Roxor Pro DJ Speaker User Manual - Features, Operation, Specifications](#)

Comprehensive user manual for the Zebronics Roxor Pro DJ Speaker. Discover its 120W power, Dolby Audio, karaoke features, Bluetooth connectivity, and detailed operation instructions.



[Zebronics ZEB-JUKE BAR 9550 PRO DOLBY 5.2 Soundbar User Manual](#)

User manual for the Zebronics ZEB-JUKE BAR 9550 PRO DOLBY 5.2 Soundbar, detailing setup, operation, features, and troubleshooting.



[Zebronics ZEB-JUKE BAR 700 Soundbar User Manual](#)

User manual for the Zebronics ZEB-JUKE BAR 700 Soundbar, covering safety instructions, setup, product representation, remote control, positioning, mounting, operation, features, specifications, and troubleshooting.



[Zebronics ZEB-JUKE BAR 4102 Soundbar User Manual](#)

Comprehensive user manual for the Zebronics ZEB-JUKE BAR 4102 Soundbar, covering setup, operation, features, specifications, and troubleshooting. Learn how to connect and use your soundbar via Bluetooth, USB, AUX, HDMI ARC, and Optical inputs.



[Zebronics ZEB-JUKE BAR 3902 Soundbar User Manual](#)

User manual for the Zebronics ZEB-JUKE BAR 3902 Soundbar, covering safety instructions, product features, operation, troubleshooting, and specifications.



[Zebronics ZEB-JUKE BAR 4100 Soundbar User Manual](#)

Comprehensive user manual for the Zebronics ZEB-JUKE BAR 4100 Soundbar, covering setup, operation, features, and troubleshooting. Learn how to connect via Bluetooth, USB, AUX, Optical, and HDMI ARC.