

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [YOORLEAY](#) /

> [YOORLEAY 5-in-1 Electric Knife Sharpener User Manual \(Model B0C89KTDP4\)](#)

YOORLEAY B0C89KTDP4

YOORLEAY 5-in-1 Electric Knife Sharpener User Manual

Model: B0C89KTDP4

1. PRODUCT OVERVIEW

The YOORLEAY 5-in-1 Electric Knife Sharpener is designed to restore the sharpness of various cutting tools. It features multiple sharpening slots and adjustable rotational speeds to accommodate different blade types and conditions.



Figure 1: YOORLEAY 5-in-1 Electric Knife Sharpener. This image displays the sharpener unit alongside its packaging, highlighting its compact design and the various sharpening slots.

2. SAFETY INSTRUCTIONS

- Always place the sharpener on a stable, flat surface before use.
- Keep fingers away from the sharpening slots during operation.
- Ensure the sharpener is unplugged when not in use or during cleaning.
- Do not immerse the unit in water or any other liquid.
- Keep out of reach of children.
- Use only as directed for sharpening knives and tools.

3. SETUP

1. **Unpack:** Carefully remove the sharpener from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Position the sharpener on a clean, dry, and stable countertop or work surface. Ensure there is adequate space around the unit for safe operation.
3. **Power Connection:** Plug the power cord into a standard electrical outlet. The display should illuminate, indicating the unit is ready for use.

4. **Initial Inspection:** Before first use, inspect the sharpening slots and the ceramic polishing rod for any obstructions or damage.

4. OPERATING INSTRUCTIONS

4.1 Understanding the Sharpening Slots

The sharpener features a 5-in-1 slot design, each serving a specific purpose:

- **Slot 1 (Left and Right):** Diamond grinding wheel for restoring the sharpness of dull blades.
- **Slot 2 (Left and Right):** Diamond grinding wheel for refining the edge and further restoring sharpness.
- **Slot 3 (Polish):** Removable ceramic polishing rod for fine-tuning edges and polishing special-shaped tools.
- **Slot 4 (Scissor Slot):** Diamond grinding wheel specifically for sharpening scissors.
- **Slot 5 (Left and Right, Convertible):** Features pull-out baffles to enlarge the slot angle to 32.5°, suitable for wider blades like chop bone knives and sushi knives.

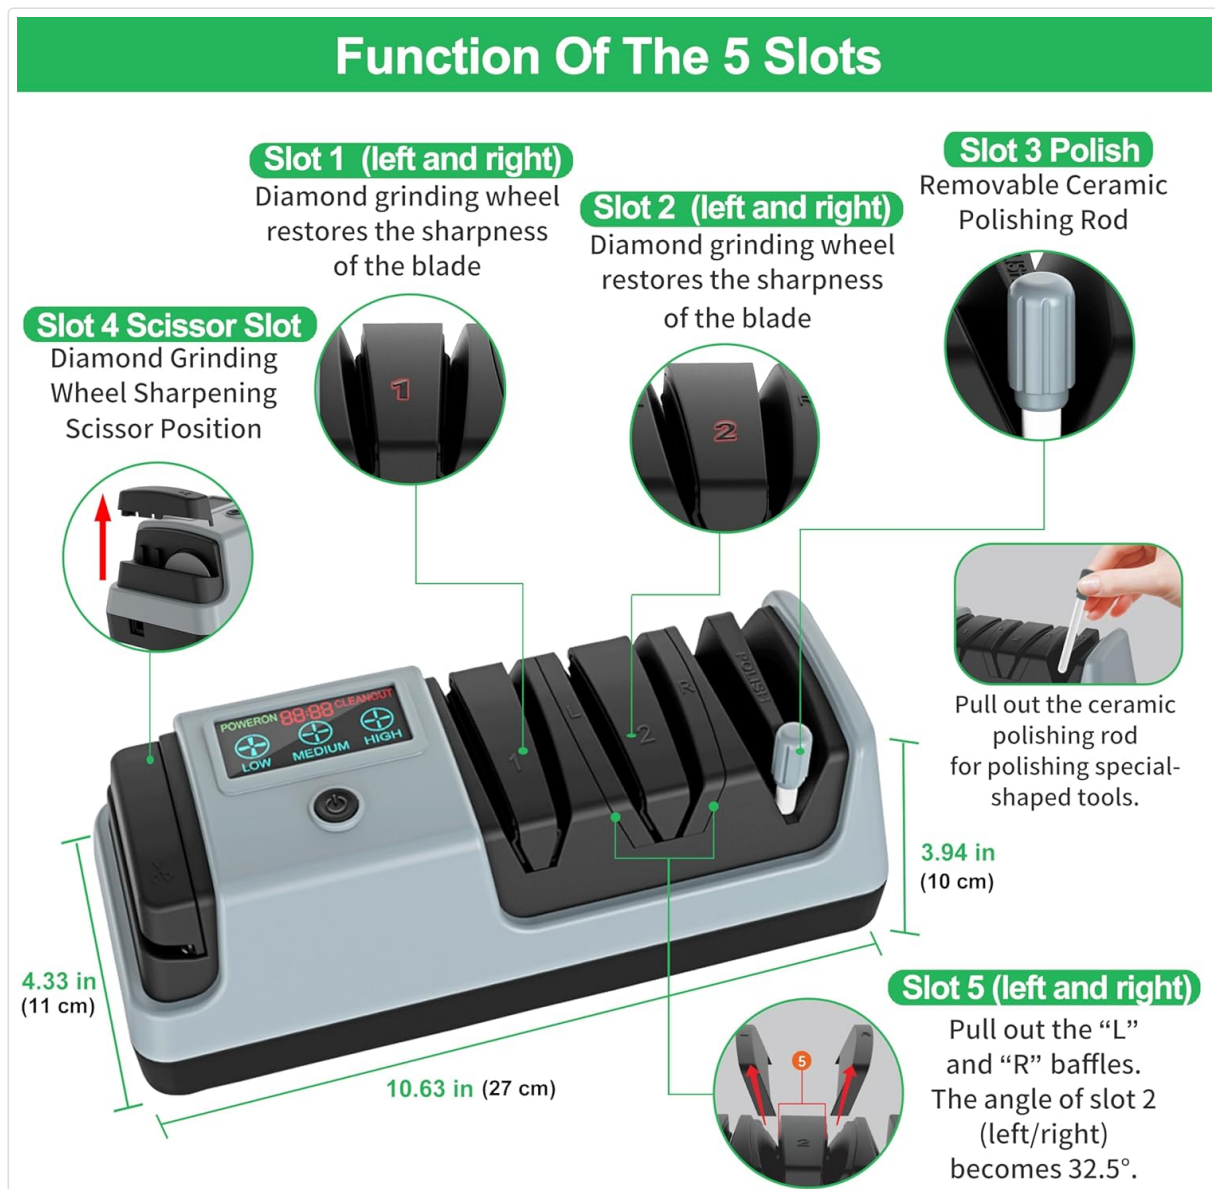


Figure 2: Detailed diagram of the 5 sharpening slots, including their dimensions and specific functions for different blade types.

4.2 Selecting Rotational Speed

The sharpener offers three rotational speed settings: LOW, MEDIUM, and HIGH. Select the appropriate speed based on the type of blade and desired sharpening intensity.



Figure 3: Control panel displaying LOW, MEDIUM, and HIGH speed options, along with the power button and 'CLEANOUT' indicator.

4.3 Sharpening Knives (Straight, Serrated, Ceramic)

For straight blade knives (chef, forged, meat cleaver, sushi), serrated knives, and ceramic knives:

1. Select the appropriate rotational speed (LOW, MEDIUM, or HIGH).
2. For dull knives, begin with **Slot 1**. Gently insert the knife blade into the slot, ensuring it is centered.
3. Pull the knife slowly and steadily towards you, maintaining light, consistent pressure. Do not push the knife away from you.
4. Repeat this motion 3-5 times for each side of the blade (left and right slots).
5. Proceed to **Slot 2** to refine the edge, repeating the same pulling motion 3-5 times per side.
6. For a polished finish, use **Slot 3 (Polishing Rod)**. Gently pull the blade across the ceramic rod a few times.
7. For wider blades like chop bone knives or sushi knives, pull out the baffles in **Slot 5** to adjust the angle to 32.5° before sharpening.

5 in 1 Multi-function Electric Knife Sharpener

Straight Blade Knife



Ceramic Knife



Serrated Knife



Figure 4: Visual guide demonstrating the sharpening process for straight blade, ceramic, and serrated knives using the designated slots.

Convertible Slot

Pull out the baffles. The slot angle (left/right) enlarges to 32.5°, suitable for regular chop bone knife, sushi knife, etc.



Figure 5: The convertible slot with baffles pulled out, illustrating how it accommodates wider blades such as chop bone knives and sushi knives.

4.4 Sharpening Scissors and Other Tools

For scissors (kitchen, garden) and axes:

1. Use **Slot 4 (Scissor Slot)**.
2. Open the scissors and insert one blade into the slot.
3. Pull the blade through the slot, maintaining a consistent angle and pressure.
4. Repeat for the other blade.
5. For axes or other special-shaped tools, the removable ceramic polishing rod (Slot 3) can be used for manual grinding and polishing.

Various Uses of Scissors Slot



Figure 6: Examples of sharpening scissors, garden shears, and an axe using the dedicated scissors slot and the manual polishing rod.

Important: Always clean the blade thoroughly after sharpening to remove any metal particles.

5. MAINTENANCE

5.1 Cleaning the Sharpener

Regular cleaning is essential for optimal performance and longevity.

1. **Unplug:** Always unplug the sharpener from the power outlet before cleaning.
2. **Remove Metal Particles:** The sharpener is equipped with a magnetic collection system for metal particles. Periodically, a 'CLEANOUT' indicator may appear on the display. To clean, locate the removable bottom cover (refer to Figure 7 for typical location). Open the cover and carefully remove accumulated metal dust and particles, often attracted to a magnet. Ensure all particles are cleared.
3. **Wipe Down:** Use a soft, dry cloth to wipe the exterior of the sharpener. Do not use abrasive cleaners or immerse the unit in water.
4. **Reassemble:** Securely reattach the bottom cover after cleaning.



Figure 7: An example of a removable cover on the sharpener, which may indicate access for cleaning or maintenance of internal components.

5.2 Storage

Store the sharpener in a dry, cool place, away from direct sunlight and moisture. Ensure it is unplugged and clean before storing.

6. TROUBLESHOOTING

• Sharpener Not Turning On:

- Ensure the power cord is securely plugged into both the sharpener and a working electrical outlet.
- Check if the power button is pressed.

• 'CLEANOUT' Notice Persists After Cleaning:

- Verify that the bottom cover was securely reattached.
- Ensure all metal particles were thoroughly removed from the magnetic collection area. Sometimes, stubborn particles may remain.
- If the issue persists, contact customer support.

• Grinding Wheels Lock Up or Stop Rotating:

- This can occur if excessive pressure is applied to the blade during sharpening. Use light, consistent pressure.
- Check for any foreign objects or excessive metal shavings obstructing the grinding wheels. Unplug the unit and carefully inspect the slots.
- If the problem continues, discontinue use and contact customer support.

• Knives Not Sharpening Effectively:

- Ensure you are using the correct slots (Slot 1 for initial sharpening, Slot 2 for refining).
- Verify that the appropriate rotational speed is selected for the blade type.
- Confirm that you are pulling the knife through the slot 3-5 times per side with consistent, light pressure.
- Very dull or damaged blades may require more passes or professional sharpening.

7. SPECIFICATIONS

Brand	YOORLEAY
Model	B0C89KTDP4

Material	Acrylonitrile Butadiene Styrene
Color	Gray
Product Dimensions	4.33"L x 10.63"W x 3.94"H
Item Weight	2.16 Pounds
Grit Type	Medium
Number of Items	1

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This YOORLEAY product is covered by a **2-year warranty period** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow operating instructions.

8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your YOORLEAY 5-in-1 Electric Knife Sharpener, please contact YOORLEAY customer support. Refer to the product packaging or the official YOORLEAY website for the most current contact information.

9. VIDEO RESOURCES

No official product videos from the seller were available for embedding based on the provided data. Please refer to the product listing page for any available video demonstrations.