

NOTABRICK RM



NOTABRICK Portable Wireless Speaker RM Instruction Manual

Model: RM | Brand: NOTABRICK

INTRODUCTION

Thank you for choosing the NOTABRICK Portable Wireless Speaker Model RM. This manual provides essential information for setting up, operating, and maintaining your speaker. The NOTABRICK RM speaker is designed for portability and durability, featuring splashproof, rainproof, dustproof, and sandproof capabilities, making it perfect for various outdoor environments. It is IPX6 rated, meaning it is resistant to mild water spray and splashing, but should not be partially or fully submerged in water.



Image: The NOTABRICK Portable Wireless Speaker Model RM, a compact black cylindrical device with a mesh grille and control buttons on top.

SETUP GUIDE

Charging the Speaker

Before first use, fully charge your NOTABRICK RM speaker.

1. Locate the charging port on the speaker, typically protected by a silicone flap.
2. Connect the provided USB charging cable to the speaker's Type-C port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The LED indicator will illuminate during charging and change color or turn off once fully charged.

Pairing with Bluetooth

Follow these steps to connect your speaker to a Bluetooth-enabled device:

1. Press and hold the Power button () on the speaker to turn it on. The Bluetooth indicator light will start flashing, indicating it's in pairing mode.
2. On your device (smartphone, tablet, etc.), go to the Bluetooth settings.

3. Search for available devices and select "NOTABRICK RM" from the list.
4. Once connected, the Bluetooth indicator light on the speaker will stop flashing and remain solid.
5. You can now play audio through your NOTABRICK RM speaker.

OPERATING INSTRUCTIONS

Controls Overview

The NOTABRICK RM speaker features intuitive button controls on its top panel:

- **Power Button** (): Press and hold to turn on/off.
- **Play/Pause Button** (▶): Press to play or pause audio.
- **Volume Up** (+): Press to increase volume.
- **Volume Down** (-): Press to decrease volume.
- **Next Track** (>>): Press and hold Volume Up (+) to skip to the next track.
- **Previous Track** (<<): Press and hold Volume Down (-) to go to the previous track.
- **EQ Button (EQ)**: Press to cycle through different equalizer modes (if available).

Waterproofing for Shower Use

The NOTABRICK RM speaker is IPX6 rated, making it suitable for use in the shower or near water. Ensure the silicone flap covering the charging port is securely closed to maintain its water resistance.

Your browser does not support the video tag.

Video: A demonstration of the NOTABRICK Portable Wireless Speaker being used in a shower environment, highlighting its waterproof capabilities.

KEY FEATURES

- **Battery Life**: Enjoy up to 15 hours of continuous playback on a single charge, providing extended listening pleasure.
- **Power Output**: Delivers 15 Watts of audio power for clear and robust sound.
- **Water Resistance**: IPX6 rated for splashproof, rainproof, dustproof, and sandproof performance. It can withstand jets of water but should not be submerged.
- **Sound Quality**: The cylindrical design provides sound in almost every direction, offering a fuller sound with better bass compared to directional speakers.
- **Portability**: Compact and lightweight design (0.93 Pounds) with a convenient strap for easy carrying.

Your browser does not support the video tag.

Video: A comparison between two NOTABRICK waterproof speakers, the MS (rectangular) and KI (cylindrical) models, discussing battery life, power, sound directionality, and waterproofing ratings.

CARE AND MAINTENANCE

- **Cleaning**: Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Water Exposure**: After exposure to water, ensure the charging port flap is dry before opening to prevent water damage. Allow the speaker to air dry completely.

- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
Speaker does not turn on	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair via Bluetooth	Make sure the speaker is in pairing mode (flashing LED). Turn off and on your device's Bluetooth. Move the speaker closer to your device.
No sound or low volume	Check volume levels on both the speaker and your connected device. Ensure the speaker is properly paired.
Sound distortion	Reduce the volume on both the speaker and your device. Ensure the speaker is not too far from the connected device.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	NOTABRICK
Model Name	RM
Speaker Maximum Output Power	15 Watts
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS), Metal
Speaker Type	Outdoor
Additional Features	Portable
Controller Type	Button
Color	MetallicBlack
Is Waterproof	True
Water Resistance Level	Waterproof (IPX6)
Item Dimensions (D x W x H)	5.12"D x 3.15"W x 3.15"H
Item Weight	0.93 Pounds
Power Source	Battery Powered

Feature	Detail
Number of Batteries	1 Lithium Ion (included)
UPC	768420307047

PACKAGE CONTENTS

The NOTABRICK Portable Wireless Speaker RM package includes:

- 1 x NOTABRICK Portable Wireless Speaker RM
- 1 x USB Charging Cable
- 1 x User Manual

WARRANTY AND SUPPORT

The NOTABRICK Portable Wireless Speaker RM comes with a **Limited Warranty**. For detailed warranty information, please refer to the warranty card included in your package or visit the official NOTABRICK website.

For technical support, troubleshooting assistance, or any questions regarding your product, please contact NOTABRICK customer service through the contact information provided on the official website or your purchase platform.