

Vactidy T7

Vactidy T7 Robot Vacuum and Mop Combo User Manual

Model: T7 | Brand: Vactidy

1. INTRODUCTION

Thank you for choosing the Vactidy T7 Robot Vacuum and Mop Combo. This intelligent cleaning device is designed to provide efficient and convenient floor cleaning for your home. It combines powerful vacuuming with effective wet mopping, making it suitable for various hard floor types, pet hair, and carpets. Please read this manual thoroughly before use to ensure proper operation and maintenance.



The Vactidy T7 Robot Vacuum and Mop Combo, featuring its sleek design and included accessories.

2. PACKAGE CONTENTS

Ensure all items are present and in good condition upon unpacking:

- Robot Vacuum and Mop: 1 unit
- 2-in-1 Dustbin & Water Tank: 1 unit
- Mopping Cloth: 2 units
- Hepa Filters: 2 units
- Cleaning Tool: 1 unit
- Side Brushes: 4 units
- Remote Control: 1 unit
- Adapter: 1 unit
- Charging Base: 1 unit

- User Manual: 1 unit



Visual representation of all items included in the Vactidy T7 package.

3. SETUP

3.1 Charging the Robot Vacuum

Before first use, fully charge the robot vacuum. Place the charging base against a wall in an open area, ensuring no obstacles within 1 meter to the sides and 2 meters in front. Connect the adapter to the charging base and a power outlet. The robot will automatically return to the charging base when its battery is low or cleaning is complete.



The robot vacuum automatically docks and charges on its charging base.

3.2 Connecting to the Vactidy Smart App

For enhanced control and scheduling, connect your robot vacuum to the Vactidy Smart App. Note: The APP only supports 2.4GHz WiFi.

1. Download the Vactidy APP from your app market.
2. Add your T7 robot vacuum to the APP.
3. Ensure T7 is on and charging in the charging dock.
4. Press and hold the start button for 5 seconds.
5. Connect to the 2.4GHz WiFi network.
6. Select and connect the WiFi of "SL-Vactidy-XXXX".
7. Wait for the robot to pair successfully.



Step-by-step guide for connecting the robot vacuum to the Vactidy Smart App.

4. OPERATING MODES

The Vactidy T7 offers multiple cleaning modes to suit different needs, accessible via the remote control or the Vactidy Smart App:

- **Auto Cleaning:** The robot intelligently navigates and cleans the entire floor area.
- **Spot Cleaning:** Focuses on a specific dirty area, cleaning in a spiral pattern.
- **Edge Cleaning:** Cleans along walls and furniture edges.
- **Zig-zag Cleaning:** Covers the largest area efficiently, reducing missed spots and increasing efficiency by 30%.



Illustrations of the different cleaning patterns for Auto, Spot, Edge, and Zig-zag modes.

Voice Control

The robot vacuum is compatible with Alexa and Google Assistant, allowing you to start and stop cleaning using voice commands.



works with Google assistant

works with Amazon alexa

works with Siri

16:07

< Add Siri Shortcut Commands

- Auto Clean
- Spot Cleaning
- Edge Clean
- Pause
- Suction I
- Suction II
- Suction III
- Recharge

Voice Assistant & User-friendly App

Control your Vactidy T7 using voice commands through compatible smart assistants.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Vactidy T7.

5.1 Emptying the Dustbin and Water Tank

The 2-in-1 dustbin and water tank should be emptied and cleaned after each use, especially after mopping. Remove the

tank, dispose of debris, and rinse thoroughly with water. Allow to air dry completely before reinserting.



The dustbin and water tank are easily removable for cleaning.

5.2 Cleaning Brushes and Filters

Periodically inspect and clean the main brush and side brushes. Remove any tangled hair or debris. The HEPA filters should also be cleaned regularly by tapping them to remove dust. Replace filters as needed to maintain suction power. The product includes two replacement side brushes and two replacement HEPA filters for convenience.

6. TROUBLESHOOTING

If you encounter issues with your Vactidy T7, please refer to the following common solutions:

- **Robot not charging:** Ensure the charging base is properly connected to power and the robot is correctly aligned with the charging contacts. Clean the charging contacts on both the robot and the base.
- **Reduced suction power:** Check if the dustbin is full, the main brush or side brushes are tangled, or the filters are clogged. Clean or replace components as necessary.
- **Robot getting stuck frequently:** Clear obstacles from the cleaning path. The robot has advanced 3D precise obstacle avoidance, but some small items or loose cables may still cause issues.
- **App connection issues:** Ensure your WiFi network is 2.4GHz. Restart your router, the robot, and your phone. Try re-pairing the device through the app.
- **Mopping not effective:** Ensure the water tank is filled and the mopping cloth is properly attached and wet. Check for clogs in the water dispenser.

For persistent issues, please contact Vactidy customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Vactidy
Model Name	T7 (Nimble)

Feature	Specification
Suction Power	2800Pa
Water Tank Capacity	200ml (Electric Control)
Battery Capacity	2500mAh
Runtime	Up to 120 minutes
Product Dimensions	16"L x 13"W x 4"H (2.89" slim design)
Control Method	Touch, Remote Control, Vactidy Smart App, Voice Control (Alexa, Google Home)
Filter Type	Cartridge (HEPA)
Connectivity	2.4GHz WiFi
Item Weight	5.4 pounds

8. WARRANTY AND SUPPORT

Vactidy products come with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or replacement parts, please contact Vactidy customer service through the contact information provided in your product documentation or on the official Vactidy website.

Online Resources:

- Official Vactidy Store: [Vactidy Amazon Store](#)
- User Manual (PDF): [Download PDF](#)