

[Manuals.plus](#) /

› [Bontempi](#) /

› Bontempi RockMaster Electronic Rock Guitar and Wireless Amplifier with Microphones Instruction Manual

## Bontempi 60 2410

# Bontempi RockMaster Electronic Rock Guitar and Wireless Amplifier with Microphones Instruction Manual

Model: 60 2410 | Brand: Bontempi

## INTRODUCTION

Welcome to the world of rock music with your new Bontempi RockMaster Electronic Rock Guitar and Wireless Amplifier set. This unique combination provides an immersive musical experience, designed to inspire creativity and cognitive development. This manual will guide you through the setup, operation, and maintenance of your instrument to ensure years of musical enjoyment.

The RockMaster set features:

- 6 metal strings for authentic rock sounds.
- 8 pre-recorded tracks for effortless rock music performance.
- Stylish and comfortable shoulder strap for playing anywhere.
- Amplified performance: Connect to the speaker for powerful sound (cable included).
- Wireless and versatile amplifier with condenser microphone and multiple ports for an unlimited musical experience.

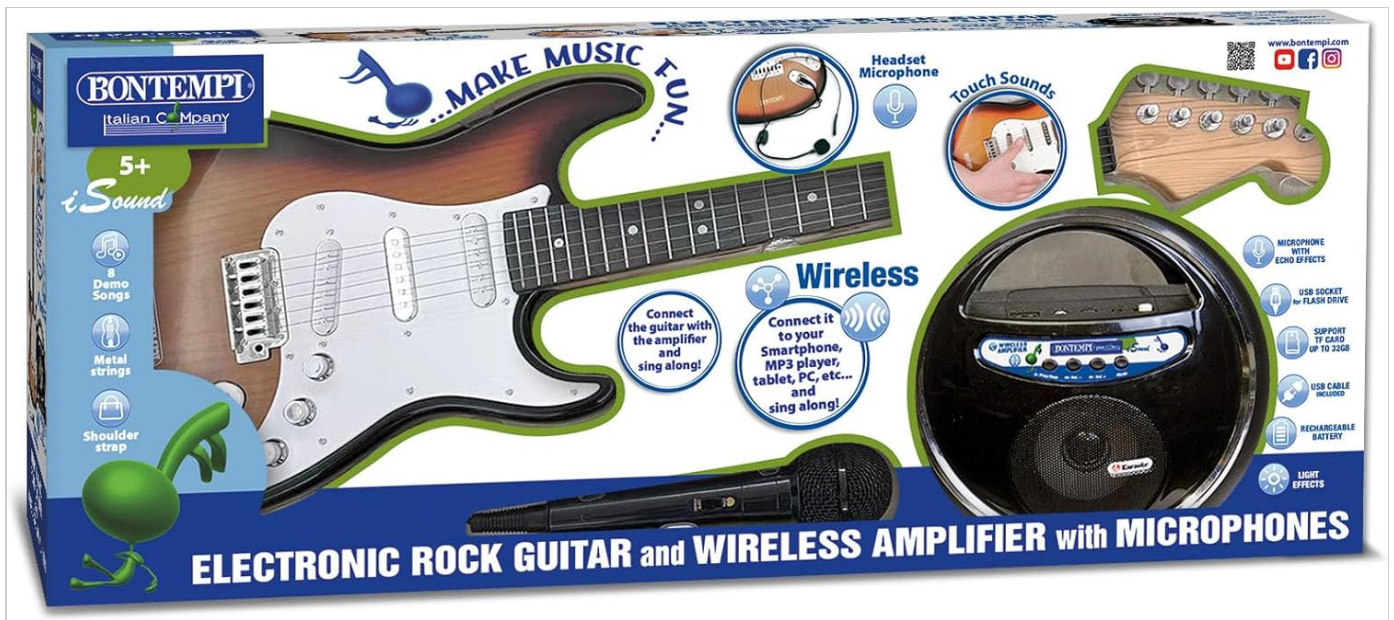


Image: The product packaging illustrating key features and connectivity options of the Bontempi RockMaster set.

## PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Bontempi Electronic Rock Guitar
- 1 x Wireless Amplifier
- 1 x Microphone
- 1 x Shoulder Strap
- 1 x Connection Cable (for guitar to amplifier)



Image: The complete Bontempi RockMaster set, including the electronic guitar, wireless amplifier, microphone, and product packaging.

## SETUP INSTRUCTIONS

### 1. **Battery Installation:**

The guitar and amplifier each require 3 x 1.5V AA batteries. Locate the battery compartments on the back of the guitar and the amplifier. Insert the batteries, ensuring correct polarity (+/-). Close the battery covers securely.



Image: Close-up of the electronic guitar and wireless amplifier, illustrating their design and potential battery compartment locations.

## 2. **Attach Shoulder Strap:**

Connect the shoulder strap to the strap buttons located on the top and bottom of the electronic guitar body. Ensure it is securely fastened for comfortable playing.

## 3. **Connect Guitar to Amplifier:**

Use the provided connection cable. Plug one end into the output jack on the electronic guitar and the other end into the guitar input jack on the wireless amplifier.

## 4. **Connect Microphone:**

Plug the microphone cable into the microphone input jack on the wireless amplifier.

# OPERATING INSTRUCTIONS

### 1. Power On/Off:

Locate the power switch on both the guitar and the amplifier. Switch them to the "ON" position to power on the devices. Switch to "OFF" when not in use to conserve battery life.

### 2. Playing the Guitar:

Strum or pluck the 6 metal strings to produce guitar sounds. Use the various buttons and controls on the guitar (if present) to change tones or effects. Refer to the markings on the guitar for specific functions.

### 3. Using Pre-recorded Tracks:

The guitar features 8 pre-recorded tracks. Press the designated button (often labeled "Demo" or "Track") to cycle through and play these tracks. You can play along with them.

### 4. Amplifier Functions:

- **Volume Control:** Adjust the master volume knob on the amplifier to control the overall sound output.
- **Microphone Usage:** Speak or sing into the connected microphone. Adjust the microphone volume knob (if available) on the amplifier.
- **External Device Connection:** The amplifier supports connection to smartphones, MP3 players, tablets, or PCs. Use an appropriate audio cable (not included, unless specified) to connect your external device to the amplifier's AUX input. This allows you to play music through the amplifier and sing along.
- **Light Effects:** The amplifier may feature light effects. These typically activate automatically when sound is played or can be toggled with a dedicated button.

## MAINTENANCE

- **Cleaning:** Wipe the guitar and amplifier with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the instrument in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries from both the guitar and amplifier if the device will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.
- **String Care:** The metal strings are durable, but avoid excessive force. If a string breaks, it may be replaceable with similar gauge strings (check manufacturer for compatibility).

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from guitar/amplifier.	Batteries are dead or incorrectly inserted. Power switch is off. Volume is too low. Connection cable is loose or faulty.	Replace batteries or ensure correct polarity. Turn on power switches for both guitar and amplifier. Increase volume on amplifier and guitar. Check cable connections; try a different cable if available.
Microphone not working.	Microphone not plugged in correctly. Microphone volume is too low.	Ensure microphone is fully inserted into its jack. Increase microphone volume on the amplifier.
Distorted sound.	Volume set too high. Low batteries.	Reduce volume. Replace batteries.

## SPECIFICATIONS

Brand	Bontempi
-------	----------

<b>Model Number</b>	60 2410
<b>Product Type</b>	Electronic Guitar with Wireless Amplifier
<b>Material</b>	Metal
<b>Color</b>	Standard
<b>Item Dimensions (LxWxH)</b>	22 x 66.5 x 5 cm
<b>Number of Strings</b>	6
<b>Age Range</b>	Child (Minimum Manufacturer Age: 60 months)
<b>Battery Requirements</b>	3 x 1.5V AA batteries for guitar, 3 x 1.5V AA batteries for amplifier (total 6 AA batteries required)
<b>Assembly Required</b>	No
<b>UPC</b>	047663336350
<b>GTIN</b>	047663336350

## SAFETY INFORMATION

- This product is intended for children aged 5 years and older.
- Adult supervision is recommended during use.
- Do not expose the product to water or excessive moisture.
- Do not attempt to disassemble or modify the product.
- Keep small parts away from young children to prevent choking hazards.
- Use only the specified battery type and ensure correct insertion.
- Remove batteries if the product is not used for a long time.

## WARRANTY AND SUPPORT

Specific warranty details for the Bontempi RockMaster Electronic Rock Guitar and Wireless Amplifier are not provided in the product information. Please refer to the retailer or manufacturer's website for any available warranty information or customer support contacts.

