

## Bernini Fountains LG6725

# Bernini Grandiose 3-Tier Urn Planter Water Fountain

## User Instruction Manual

### 1. INTRODUCTION

Thank you for choosing the Bernini Grandiose 3-Tier Urn Planter Water Fountain. This innovative product combines the soothing sounds of a water feature with the functionality of a self-watering planter, designed for both outdoor and indoor use. Its unique cordless operation provides unparalleled flexibility in placement, allowing you to enhance any space without the constraints of power outlets or plumbing.

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your new fountain. Please read it thoroughly before initial use and retain it for future reference.

### 2. SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of injury, electric shock, or damage to the product.

- Do not operate the fountain if any part is damaged or appears to be malfunctioning.
- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Keep children and pets away from the fountain during operation to prevent accidental spills or injuries.
- Only use clean water in the fountain. Do not add chemicals or other substances that could damage the pump or materials.
- Disconnect power (if using plug-in option) or remove batteries before performing any maintenance or cleaning.
- Protect the fountain from freezing temperatures. Drain all water and store indoors during winter months to prevent damage.

### 3. PACKAGE CONTENTS

Please check to ensure all components are present and in good condition:

- Bernini Grandiose 3-Tier Urn Planter Water Fountain Unit
- Rechargeable Battery Pack (pre-installed or separate)
- Battery Charger
- Instruction Manual
- Optional Plug-in Conversion Kit (if included)

### 4. ASSEMBLY INSTRUCTIONS

The Bernini Grandiose fountain is designed for easy assembly. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Position the Fountain:** Place the main fountain unit on a firm, level surface where you intend to use it. Ensure it is stable.
3. **Install Battery (if not pre-installed):** Locate the battery compartment, typically at the back or base of the fountain. Insert the fully charged battery pack.
4. **Fill with Water:** Fill the main reservoir with clean, distilled water. The fountain holds approximately 13.5 gallons of water. Do not overfill.
5. **Initial Operation:** Press the power button to start the water flow. Allow a few moments for the water to circulate and the flow to stabilize.



Image 1: The Bernini Grandiose 3-Tier Urn Planter Water Fountain in its complete form.



Image 2: Rear view of the fountain, highlighting the battery compartment access panel.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering the Fountain

Your Bernini Grandiose fountain can be operated using its rechargeable battery or an optional plug-in conversion kit.

- **Battery Operation:** The fountain is designed for cordless use, offering up to 200 days of battery life on a single charge, depending on usage. Ensure the battery is fully charged before first use. The battery compartment is easily accessible for charging or replacement.
- **Optional Plug-in Conversion:** If continuous operation is desired, an optional plug-in kit may be used. Refer to the kit's instructions for installation.

### 5.2 Auto-Watering Planter Feature

The integrated planter utilizes an advanced bottom-up watering system, which provides water to the plant

roots from below, leaving an air gap for healthy soil aeration. This method promotes robust plant growth.



Image 3: The fountain functioning as a planter, demonstrating its auto-watering capability with a thriving tomato plant.

### 5.3 Setting the Timer

The fountain features a daily repeat timer for automated operation. Consult the control panel (Image 4) for specific button functions (A, B, C, D) to set your desired operating schedule.



Image 4: Close-up of the control buttons (A, B, C, D) for setting the fountain's timer and functions.

### 5.4 Product Overview Video

Watch this official product video for a visual guide on the features and operation of the Bernini Grandiose 3-Tier Urn Planter Water Fountain.

Your browser does not support the video tag.

Video 1: An overview of the Bernini Fountains 3-Tier Urn Planter Water Fountain, demonstrating its auto-watering feature, cordless design, and tranquil waterfall sounds.

## 6. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your fountain.

- **Water Level:** Check the water level daily. The deep reservoir holds 13.5 gallons, minimizing frequent refills, but evaporation will occur. Refill with clean, distilled water as needed.
- **Cleaning:** Periodically clean the fountain and pump to prevent mineral buildup and algae growth. Disconnect power/remove batteries before cleaning. Use a soft brush and mild soap if necessary. Rinse thoroughly.
- **Pump Care:** The pump should be cleaned regularly. Refer to the pump's individual instructions for detailed cleaning procedures.
- **Winterization:** For outdoor use in cold climates, drain all water from the fountain and pump before the first frost. Clean and dry all components thoroughly. Store the fountain and pump indoors in a dry, protected area during winter.



Image 5: Top-down view of the fountain's basins, illustrating the water flow and reservoir area for cleaning and refilling.

## 7. TROUBLESHOOTING

If you encounter issues with your fountain, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No water flow or weak flow	Low water level, clogged pump, kinked tubing, low battery.	Check water level and refill. Clean the pump and tubing. Ensure battery is charged or plug-in power is connected.
Fountain making unusual noise	Low water level, debris in pump, pump not properly seated.	Add water. Clean pump of any debris. Ensure pump is securely placed.
Water splashing excessively	Fountain not level, water level too high.	Ensure fountain is on a level surface. Adjust water level if too high.
Battery not holding charge	Battery old or faulty, charger not working.	Replace battery. Check charger connection and functionality.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	LG6725
Dimensions (L x W x H)	22" x 22" x 25"
Weight	34 pounds
Color	White
Power Source	Corded Electric (with optional kit) / Battery-powered
Water Capacity	13.5 gallons
Special Feature	Cordless, Self-watering Planter

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Bernini Fountains website. Keep your proof of purchase for any warranty claims.

