

Vega VHTH-31, VHDH-20

Vega Smartone S2 Beard Trimmer (VHTH-31) & Insta Glam 1000W Hair Dryer (VHDH-20) User Manual

Comprehensive instructions for safe and effective use of your Vega grooming appliances.

1. INTRODUCTION

This manual provides detailed instructions for the operation, maintenance, and safety of your Vega Smartone S2 Beard Trimmer (Model VHTH-31) and Vega Insta Glam 1000W Hair Dryer (Model VHDH-20). Please read all instructions carefully before using the appliances to ensure proper function and to prevent injury or damage.



Image 1.1: Vega Smartone S2 Beard Trimmer and Insta Glam 1000W Hair Dryer.

This image displays both the Vega Smartone S2 Beard Trimmer and the Vega Insta Glam 1000W Hair Dryer together, showcasing the complete product package.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of electric shock, burns, fire, or injury to persons:

- Read all instructions before using the appliance.
- Keep the appliance away from water. Do not use while bathing or showering.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Always unplug the appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use an extension cord with this appliance.
- Ensure the voltage indicated on the appliance corresponds to the local mains voltage before connecting.

3. PRODUCT OVERVIEW

3.1. Vega Smartone S2 Beard Trimmer (VHTH-31)

The Vega Smartone S2 Beard Trimmer is designed for precise beard styling with advanced features for convenience and performance.



Image 3.1.1: Key features of the Vega Smartone S2 Beard Trimmer.

This image illustrates the main features of the Vega Smartone S2 Beard Trimmer, including its three speed modes, Smart Memory Function, Titanium Blade, 160 minutes runtime, 90 minutes charging time, 5 minutes quick charge, IPX7 waterproof rating, rubberized grip, and travel lock.

- **Titanium Blade:** Ensures precise and efficient trimming.
- **3 Speed Modes:** Eco (Light Blue), Pro (Green), and Max (Dark Blue) for varied trimming needs.
- **Smart Memory Function:** Recalls the last used speed setting.

- **IPX7 Waterproof:** Allows for wet use and easy cleaning under running water.
- **Rubberized Grip:** Provides comfortable and secure handling.
- **Travel Lock:** Prevents accidental activation during transport.

3.2. Vega Insta Glam 1000W Hair Dryer (VHDH-20)

The Vega Insta Glam 1000W Hair Dryer is designed for quick and efficient hair drying and styling.



Image 3.2.1: Vega Insta Glam 1000W Hair Dryer.

This image shows the Vega Insta Glam 1000W Hair Dryer in its full form, highlighting its design and color.

Features



Image 3.2.2: Key features of the Vega Insta Glam 1000W Hair Dryer.

This image details the features of the Vega Insta Glam 1000W Hair Dryer, including its foldable handle, detachable nozzle, 1000W quick dry capability, 2 heat/speed settings, cord guard with hanging loop, and safety automatic overheat cut.

- **1000W Power:** For ultra-fast hair drying.
- **2 Heat/Speed Settings:** Low and High for flexible drying and styling.
- **Foldable Handle:** For compact storage and portability.
- **Detachable Nozzle:** For concentrated airflow and precise styling.
- **Safety Automatic Overheat Cut:** Automatically shuts down to prevent overheating.

4. SETUP AND CHARGING (VEGA SMARTONE S2 BEARD TRIMMER)

4.1. Initial Charging

1. Before first use, ensure the trimmer is fully charged. Connect the charging cable to the trimmer and a suitable power adapter.
2. Plug the adapter into a power outlet. The charging indicator light will illuminate.

3. A full charge takes approximately 90 minutes.
4. Once fully charged, the indicator light may change color or turn off, depending on the model.

4.2. Quick Charge Function

The trimmer features a 5-minute quick charge function, providing approximately 10 minutes of runtime for urgent use.

1. Connect the trimmer to the charger for 5 minutes.
2. After 5 minutes, disconnect and use for a quick trim.

5. OPERATING INSTRUCTIONS (VEGA SMARTONE S2 BEARD TRIMMER)

5.1. Turning On/Off

- To turn on, press and hold the power button for a few seconds.
- To turn off, press and hold the power button again.

5.2. Adjusting Speed Modes

The trimmer offers three speed modes: Eco, Pro, and Max.

- After turning on, press the power button briefly to cycle through the speed modes.
- The indicator light will change color to reflect the selected mode: Light Blue for Eco, Green for Pro, and Dark Blue for Max.

5.3. Smart Memory Function



Image 5.3.1: Smart Memory Function indicator on the trimmer.

This image highlights the Smart Memory Function feature on the Vega Smarttone S2 Beard Trimmer, indicating its ability to remember the last used speed setting.

The trimmer automatically remembers your last used speed setting. When you turn it on again, it will start in the previously selected mode.

5.4. Using the Travel Lock

To activate the travel lock, press and hold the power button for an extended period (e.g., 3-5 seconds) until the lock indicator appears. Repeat the process to deactivate it.

6. SETUP AND OPERATION (VEGA INSTA GLAM 1000W HAIR DRYER)

6.1. Attaching the Nozzle

- Ensure the hair dryer is unplugged and cool.
- Align the detachable nozzle with the front opening of the hair dryer.
- Gently push until it clicks into place. To remove, pull it off carefully.

6.2. Operating the Hair Dryer

1. Unfold the handle until it locks into position.
2. Plug the hair dryer into a suitable electrical outlet.
3. Use the switch on the handle to select your desired heat and speed setting (Low or High).
4. Direct the airflow towards your hair, maintaining a safe distance to prevent heat damage.
5. After use, switch off the appliance and unplug it. Allow it to cool before folding the handle for storage.



Image 6.2.1: Vega Insta Glam 1000W Hair Dryer with its foldable handle.

This image demonstrates the foldable handle feature of the Vega Insta Glam 1000W Hair Dryer, illustrating its compact design for storage and travel.

7. MAINTENANCE AND CLEANING

7.1. Vega Smartone S2 Beard Trimmer

- **Cleaning the Blades:** After each use, brush off any loose hairs from the blades. Since the trimmer is IPX7 waterproof, you can rinse the blade head under running water. Ensure the trimmer is turned off before

rinsing.

- **Drying:** Allow the trimmer to air dry completely before storing or recharging.
- **Lubrication:** Periodically apply a small drop of clipper oil (not included) to the blades to maintain optimal performance.

7.2. Vega Insta Glam 1000W Hair Dryer

- **Cleaning the Air Filter:** Regularly check and clean the rear air filter to prevent lint and dust buildup, which can affect performance and trigger the overheat protection. Ensure the dryer is unplugged and cool before cleaning.
- **Wiping the Exterior:** Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- **Storage:** Store the hair dryer in a cool, dry place. The foldable handle allows for compact storage. Do not wrap the cord tightly around the appliance. Use the hanging loop for convenient storage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer not turning on/charging.	Battery depleted, charger not connected properly, travel lock active.	Ensure charger is securely connected. Allow for initial charge. Deactivate travel lock by pressing and holding the power button.
Trimmer blades pulling hair.	Blades are dull, dirty, or not lubricated.	Clean blades thoroughly. Apply clipper oil. If problem persists, blades may need replacement.
Hair Dryer stops working during use.	Overheat protection activated, air filter blocked.	Unplug and allow to cool for several minutes. Clean the air filter at the back of the dryer. Ensure proper ventilation.
Hair Dryer airflow is weak.	Air filter blocked.	Clean the air filter to remove lint and dust buildup.

9. SPECIFICATIONS

9.1. Vega Smartone S2 Beard Trimmer (VHTH-31)

- **Model:** VHTH-31
- **Blade Type:** Titanium
- **Speed Settings:** 3 (Eco, Pro, Max)
- **Runtime:** Up to 160 minutes
- **Charging Time:** Approximately 90 minutes
- **Quick Charge:** 5 minutes for 10 minutes runtime
- **Waterproof Rating:** IPX7
- **Special Features:** Smart Memory Function, Travel Lock, Rubberized Grip

9.2. Vega Insta Glam 1000W Hair Dryer (VHDH-20)

- **Model:** VHDH-20
- **Power:** 1000 Watts
- **Heat/Speed Settings:** 2 (Low, High)
- **Special Features:** Foldable Handle, Detachable Nozzle, Safety Automatic Overheat Cut, Cord Guard with Hanging Loop
- **Material:** Acrylonitrile Butadiene Styrene (ABS)

10. WARRANTY AND SUPPORT

Your Vega Smarttone S2 Beard Trimmer (VHTH-31) and Vega Insta Glam 1000W Hair Dryer (VHDH-20) are covered by a **2-year warranty** from the date of purchase.



This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

For warranty claims, technical support, or service inquiries, please contact Vega customer service. Keep your purchase receipt as proof of purchase.

For more information, visit the official Vega website or contact their customer support channels.

Related Documents - VHTH-31, VHDH-20

	VEGA VHTH-14 Rechargeable Beard Trimmer User Manual & Guide Comprehensive user manual for the VEGA VHTH-14 rechargeable beard trimmer. Learn about features, usage, cleaning, maintenance, safety, and warranty information provided by VEGA.
	Vega P1 Beard Trimmer User Manual User manual for the Vega P1 Beard Trimmer, providing instructions on usage, cleaning, maintenance, safety precautions, and warranty information.
	Kullanım Kılavuzu: WEIGHTRAC 31 Radyometrik Sensör Bu kullanım kılavuzu, VEGA WEIGHTRAC 31 radyometrik kütle akış hızı sensörünün montajı, bağlantısı, devreye alınması, bakımı ve arıza giderme işlemleri hakkında detaylı bilgiler sunar. Cihazın teknik özellikleri ve güvenli kullanımı için rehberlik eder.
	VEGAPULS 62 Radar Seviye Sensörü Kullanım Kılavuzu VEGAPULS 62 radar seviye sensörünün montajı, bağlantısı, devreye alınması, kullanımı, bakımı ve arıza giderme işlemleri hakkında detaylı bilgiler içeren resmi kullanım kılavuzu.

	<p>VEGA Salon Smooth Hair Straightener VSHS-42 User Manual</p> <p>Comprehensive user manual for the VEGA Salon Smooth Hair Straightener VSHS-42, covering maintenance, safety instructions, usage, and styling tips.</p>
	<p>VEGAPULS 31 Operating Instructions: Radar Sensor for Continuous Level Measurement</p> <p>Comprehensive operating instructions for the VEGAPULS 31 radar sensor, detailing its features, installation, setup, safety, and maintenance for continuous level measurement in industrial applications. Covers product description, electrical connections, parameterization via display, Bluetooth, and PC, diagnostics, and technical specifications.</p>