

BAOK BAOK Foldable Portable Washing Machine 8L

BAOK Foldable Portable Washing Machine (8L) Instruction Manual

Model: B0C8H132FZ

1. INTRODUCTION

Thank you for purchasing the BAOK Foldable Portable Washing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before first use and retain it for future reference.

1.1 Safety Instructions

- Ensure the power supply voltage matches the specifications of the washing machine (100-240V).
- Do not immerse the main body of the washing machine in water. Only the foldable bucket part is designed for water contact.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Do not operate the washing machine if the power cord or plug is damaged. Contact customer support for assistance.
- Avoid washing delicate items that require hand washing or dry cleaning.
- Do not overload the machine. Refer to the capacity specifications.
- Place the machine on a stable, flat surface during operation.

2. PRODUCT OVERVIEW

The BAOK Foldable Portable Washing Machine is designed for small laundry loads, offering convenience and portability. It features a one-button control for ease of use.

2.1 Components

- Main Unit (Motor Base and Foldable Bucket)
- Lid
- Drainage Hose
- Power Adapter (US Plug)
- Spin Basket (for light drying/draining)
- Hidden Carry Handle



Figure 2.1: BAKO Foldable Portable Washing Machine in its compact and expanded states.



Easy drainage, flexible
drainage



Hidden carry handle

Figure 2.2: Detail of the control panel and drainage hose connection.



Figure 2.3: Top view of the washing machine with the lid removed, revealing the spin basket.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all listed components are present.
2. **Expand the Washer:** Place the main unit on a flat, stable surface. Gently pull up the top rim of the foldable bucket until it is fully extended and locked into place.
3. **Connect Drainage Hose:** Attach the drainage hose securely to the outlet port located at the bottom side of the machine. Ensure the hose is positioned to drain water into a sink or bucket.
4. **Connect Power:** Insert the power adapter into the machine's power input port, then plug the adapter into a standard 100-240V AC power outlet.
5. **Initial Rinse (Optional):** Before first use, it is recommended to run a short cycle with clean water to remove any manufacturing residues.



Figure 3.1: The washing machine with its power adapter and US plug.

4. OPERATING INSTRUCTIONS

The BAOK Foldable Portable Washing Machine features a simple one-button control for various functions.

4.1 Washing Cycle

1. **Load Laundry:** Open the lid and place a small load of laundry (up to 8 liters capacity) into the washing machine. Do not overload.
2. **Add Water and Detergent:** Fill the machine with an appropriate amount of water, ensuring it covers the clothes. Add a small amount of liquid detergent suitable for delicate items.
3. **Select Cycle:** Press the power button on the control panel. The machine will typically start a standard washing cycle (e.g., 10 minutes). Some models may offer different cycle lengths (e.g., 5, 10, 15 minutes) or a dehydration function, indicated by icons on the control panel. Press the button repeatedly to cycle through available options if applicable.
4. **Start Washing:** The machine will begin agitating.
5. **Drain Water:** Once the cycle is complete, position the drainage hose to empty the water into a suitable receptacle.
6. **Rinse (Optional):** For a thorough rinse, refill the machine with clean water and run another short cycle without detergent. Drain the water again.

4.2 Dehydration (Spin Drying)

For light spin-drying, use the included spin basket:

1. After washing and draining, place the damp clothes into the spin basket.
2. Insert the spin basket into the washing machine.
3. Select the dehydration cycle (if available, typically a shorter cycle like 2-3 minutes) by pressing the control button.
4. The machine will spin to remove excess water. This is not a full drying function but helps reduce drying time.
5. Remove clothes and hang to air dry.



Figure 4.1: Interior view of the washing machine with the spin basket in place.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the machine before cleaning.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Rinse the interior of the foldable bucket with clean water after each use to prevent detergent residue buildup.
- Clean the spin basket regularly.

5.2 Storage

- Ensure the machine is completely dry before folding and storing.
- To fold, gently push down on the top rim of the bucket until it collapses.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- The hidden carry handle can be used for convenient transport when folded.



Figure 5.1: The washing machine in its folded state, highlighting the hidden carry handle.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Damaged power cord.	Ensure power adapter is securely plugged into both the machine and the outlet. Check power supply. Contact support if cord is damaged.
Water does not drain	Drainage hose is blocked or improperly positioned.	Check if the drainage hose is kinked or clogged. Ensure the hose is positioned lower than the machine's drain outlet.
Excessive vibration or noise	Machine is not on a stable surface; Overloaded; Uneven load.	Place the machine on a firm, level surface. Reduce laundry load. Redistribute clothes evenly inside the machine.
Poor washing results	Too much laundry; Insufficient detergent; Water level too low.	Reduce load size. Use appropriate amount of detergent. Ensure water covers the clothes.

7. SPECIFICATIONS

Feature	Specification
Brand	BAOK
Model	B0C8H132FZ

Feature	Specification
Capacity	8 Liters
Power Input	100-240V
Control Type	Push Button (One Button Control)
Access Location	Top Load
Special Feature	Portable, Foldable
Item Weight	3.53 pounds (approx. 1.6 kg)
Package Dimensions (approx.)	12.2 x 12.2 x 8.66 inches

8. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact information provided with your purchase or visit the official BAOK website.

Please have your product model number (B0C8H132FZ) and purchase date available when contacting support.