

[Manuals.plus](#) /

> [HEXEH](#) /

> HEXEH Silent Luminous Round Alarm Clock User Manual (Model ZHONGXIAOFEI2023)

## HEXEH ZHONGXIAOFEI2023

# HEXEH Silent Luminous Round Alarm Clock User Manual

Model: ZHONGXIAOFEI2023

## INTRODUCTION

Thank you for choosing the HEXEH Silent Luminous Round Alarm Clock. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new alarm clock. Designed for simplicity and reliability, this clock features a silent sweep movement and luminous hands for easy time-telling in the dark. Please read this manual thoroughly before use and retain it for future reference.

## PRODUCT OVERVIEW

The HEXEH Silent Luminous Round Alarm Clock is a battery-operated timepiece featuring a classic retro design. Its silent sweep movement ensures no ticking sound, promoting a peaceful environment. The clock face includes luminous hour and minute hands, along with luminous hour markers, allowing you to read the time in low-light conditions.



Image: Front view of the HEXEH Silent Luminous Round Alarm Clock, showcasing its classic design and clear clock face.



Image: Four HEXEH alarm clocks displayed in different colors: White, Green, Blue, and Pink, illustrating the available color options.

## PACKAGE CONTENTS

- 1 x HEXEH Silent Luminous Round Alarm Clock
- *Note: 1 x AA battery is required and not included.*

# SETUP

---

## Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Gently slide or remove the cover.
3. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover securely.

**Important:** Use only fresh AA alkaline batteries. Do not mix old and new batteries or different types of batteries. Remove batteries if the clock will not be used for an extended period.



Image: Diagram illustrating the dimensions of the alarm clock (9cm width, 6.5cm depth, 10cm height). The back of the clock, where the battery compartment and setting knobs are located, is implied.

## OPERATING INSTRUCTIONS

---

The HEXEH alarm clock features simple controls located on the back of the unit.

### Setting the Current Time

1. Locate the "TIME SET" knob on the back of the clock.
2. Rotate this knob in either direction until the hour and minute hands display the correct current time.

### Setting the Alarm Time

1. Locate the "ALARM SET" knob on the back of the clock.
2. Rotate this knob to set the desired alarm time. The alarm hand will move independently.
3. Ensure the alarm ON/OFF switch (usually a small slider or button) is in the "ON" position to activate the alarm.

**Note:** The alarm will sound at the set time. To stop the alarm, move the alarm ON/OFF switch to the "OFF" position. The alarm will reset for the next day if the switch remains in the "ON" position.

### Luminous Feature

The hour and minute hands, along with the hour markers, are coated with a luminous material. After exposure to light, these elements will glow in the dark, allowing for easy time-telling at night without needing to turn on a light. The intensity and duration of the glow depend on the amount and duration of light exposure.

## MAINTENANCE

---

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.
- **Battery Replacement:** Replace the AA battery approximately once a year, or when the clock starts to lose time or the alarm weakens.
- **Environment:** Avoid placing the clock in direct sunlight, extreme temperatures, or high humidity, which can affect its accuracy and lifespan.

## TROUBLESHOOTING

---

| Problem                              | Possible Cause   | Solution  |
|--------------------------------------|--|---|
| Clock not working / Hands not moving | Dead or incorrectly installed battery.   | Replace with a fresh AA battery, ensuring correct polarity (+/-).     |
| Alarm not sounding                   | Alarm ON/OFF switch is in the "OFF" position.<br>Alarm time not set correctly. | Ensure the alarm switch is "ON". Re-check alarm time setting.         |
| Clock losing or gaining time         | Weak battery. Extreme temperature fluctuations.                                | Replace battery. Move clock to a stable room temperature environment. |

## SPECIFICATIONS

- **Model:** ZHONGXIAOFEI2023
- **Material:** Metal, Glass, Plastic
- **Movement:** Silent Sweep Movement
- **Power Source:** 1 x AA Battery (not included)
- **Dimensions (approx.):** 9 cm (Width) x 6.5 cm (Depth) x 10 cm (Height) / 3.5 inches (Width) x 2.55 inches (Depth) x 3.9 inches (Height)
- **Weight (approx.):** 1 Grams (without battery)



Image: Close-up view of the HEXEH Silent Luminous Round Alarm Clock in green, highlighting the clock face and hands.

## WARRANTY AND SUPPORT

HEXEH products are designed for quality and reliability. While specific warranty details are not provided in this manual, if you encounter any issues or have questions regarding your HEXEH Silent Luminous Round Alarm Clock, please do not hesitate to contact our customer support. We are committed to resolving any problems as quickly as possible. For assistance, please refer to the contact information provided with your purchase or visit the official HEXEH website.

