

[Manuals.plus](#) /

› [BONTEC](#) /

› BONTEC Mobile TV Stand Instruction Manual for 32-85 Inch TVs, Model FN411-WH

BONTEC FN411-WH

BONTEC Mobile TV Stand Instruction Manual

Model: FN411-WH

INTRODUCTION

This manual provides comprehensive instructions for the safe and proper assembly, operation, and maintenance of your BONTEC Mobile TV Stand, Model FN411-WH. This universal TV stand is designed to accommodate televisions from 32 to 85 inches, supporting a maximum weight of 60 kg (132 lbs) and VESA patterns up to 600x400 mm. Please read this manual thoroughly before installation and retain it for future reference.

SAFETY INFORMATION

WARNING: Failure to read and follow all instructions may result in personal injury or property damage. Do not exceed the weight capacity of 60 kg (132 lbs) for the TV mount or 10 kg (22 lbs) for the media shelf. Use this product only for its intended purpose as described in this manual. If you have any questions, contact customer support.

- Ensure all components are present and undamaged before assembly. Do not use damaged parts.
- Always use two people for lifting and positioning the TV.
- Verify that your TV's VESA pattern and weight are within the specified limits.
- Tighten all screws securely but do not overtighten.
- Keep children away from the assembly area and ensure small parts are not swallowed.
- Do not move the stand with a TV mounted if the casters are not unlocked. Lock casters when the stand is stationary.

PACKAGE CONTENTS

Please check that all parts are included in your package. If any parts are missing or damaged, please contact BONTEC customer service.


(Note: Specific part list not provided in source data. Refer to the included physical instruction manual for a detailed list of components and hardware.)

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your BONTEC Mobile TV Stand. It is recommended to have assistance during assembly, especially when mounting the television.

Step 1: Assemble the Base and Casters

Attach the four lockable casters to the base of the stand. Ensure they are securely fastened. The base is designed for stability with a wide footprint.

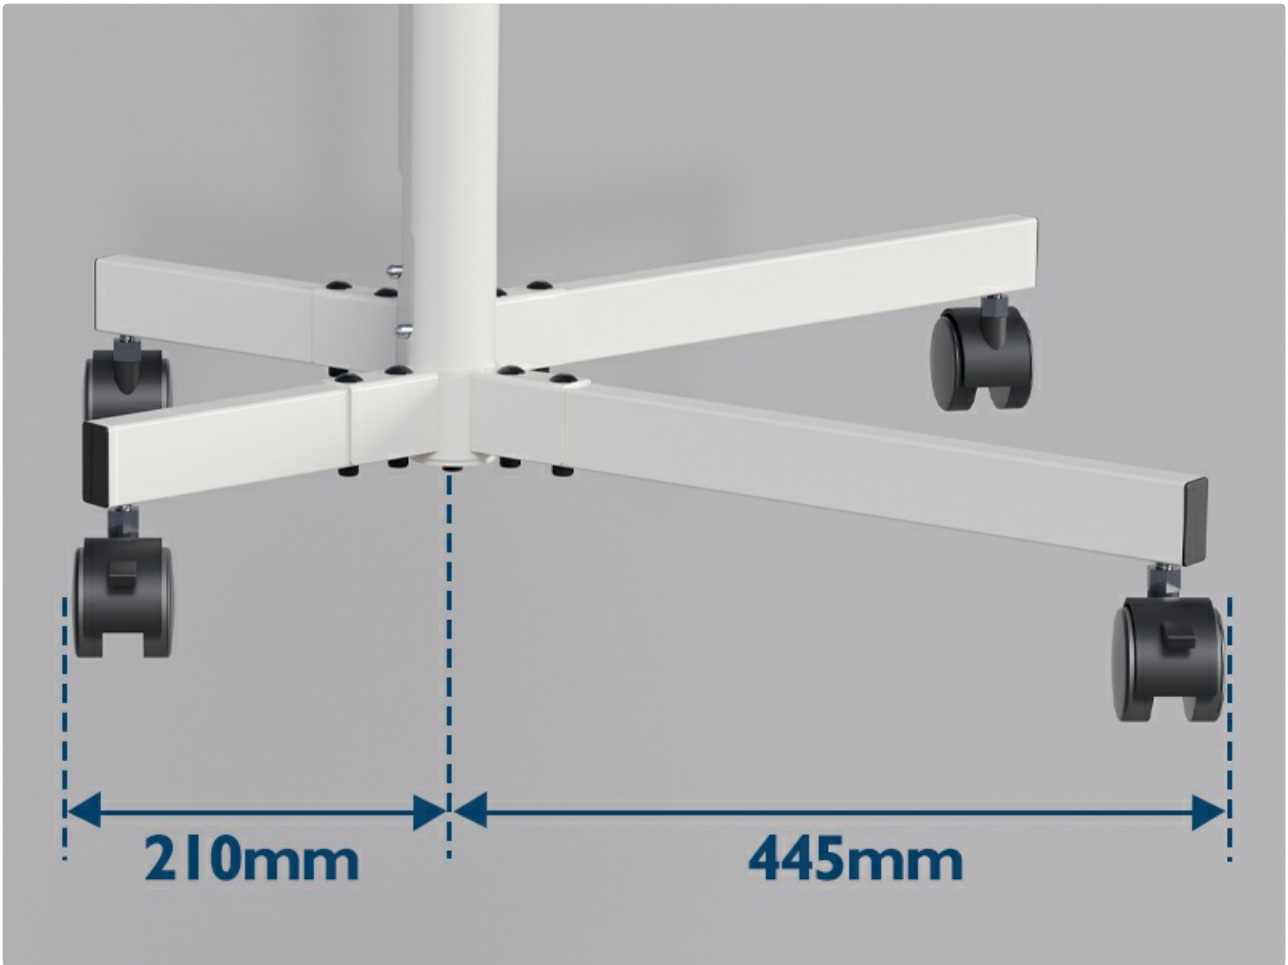

This image illustrates the base dimensions and the attachment points for the casters, highlighting the stability provided by the wide base (210mm and 445mm measurements shown).




A close-up view of a caster wheel with its integrated locking mechanism, which allows the stand to be stationary or mobile.

Step 2: Attach the Support Columns and Media Shelf

Connect the vertical support columns to the base. Then, attach the multimedia shelf to the desired height on the columns. The shelf is adjustable to any height along the columns.

◆ Réglage de la hauteur pour une position de visionnage parfaite

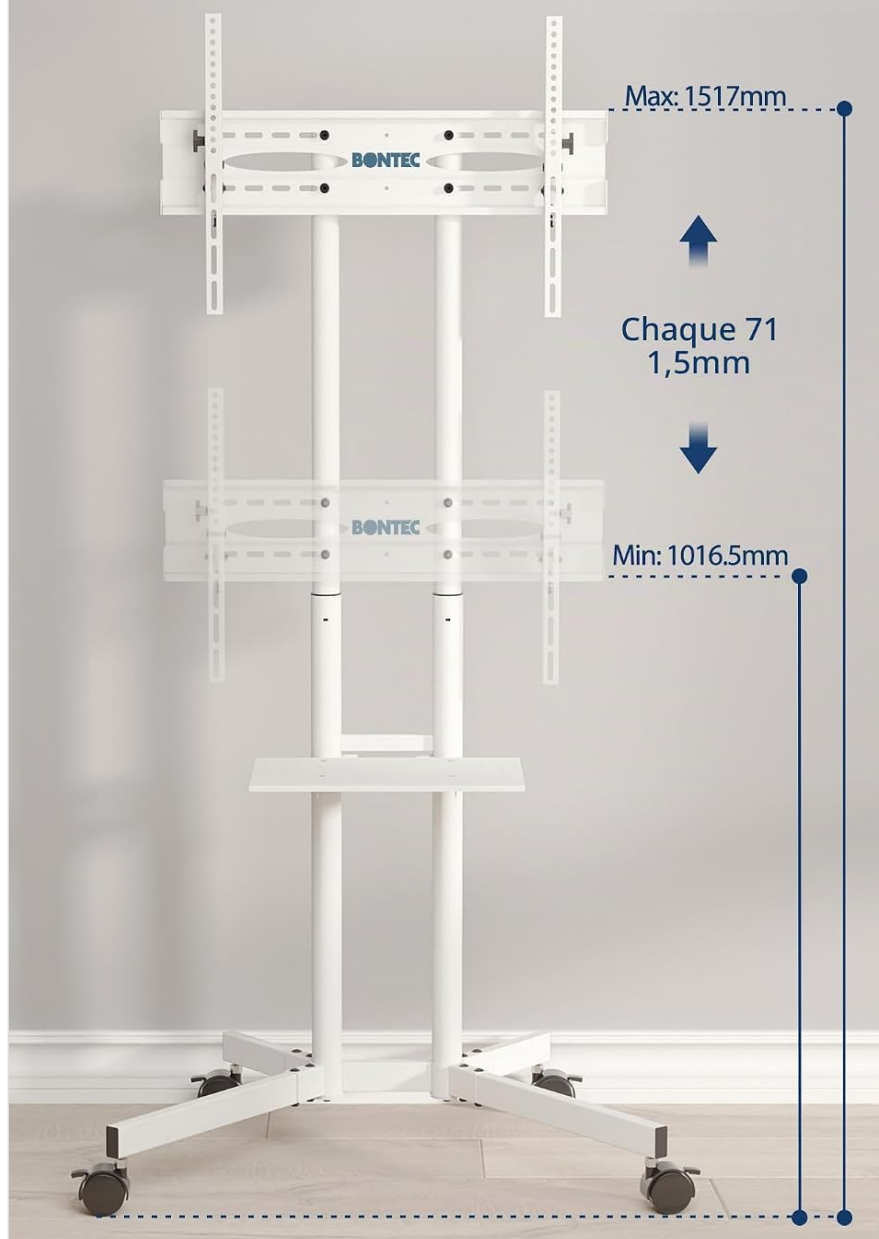

Hauteur de la plaque de montage réglable



Étagère multimédia à hauteur réglable

This image illustrates the height adjustment range of the stand, from a minimum of 1016.5mm to a maximum of 1517mm, with 8 levels of adjustment (71.5mm increments). The media shelf's adjustability is also shown.

Step 3: Install the TV Mounting Bracket


Attach the TV mounting bracket to the top of the support columns. Ensure it is oriented correctly. This bracket supports VESA patterns from 50x50 mm to 600x400 mm.

◆ **Compatible avec écran de 81,3 cm à 215,9 cm**



NÉCESSITE VOTRE ATTENTION

Si l'écran de votre téléviseur est inférieur à 636 x 420 mm, les bras de fixation du téléviseur dépasseront de l'arrière du téléviseur.

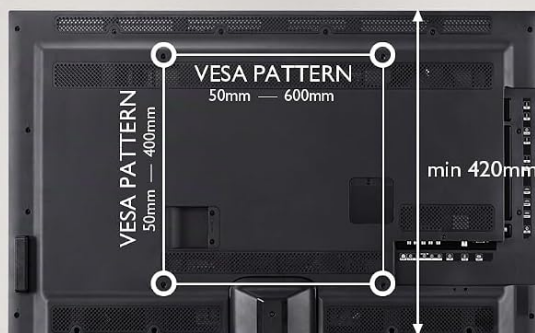

Modèles VESA

Min: 50x50 mm


Max: 600x400 mm

Capacité de charge du support

60kg / 132lbs

Capacité de charge de l'étagère

10kg / 22lbs

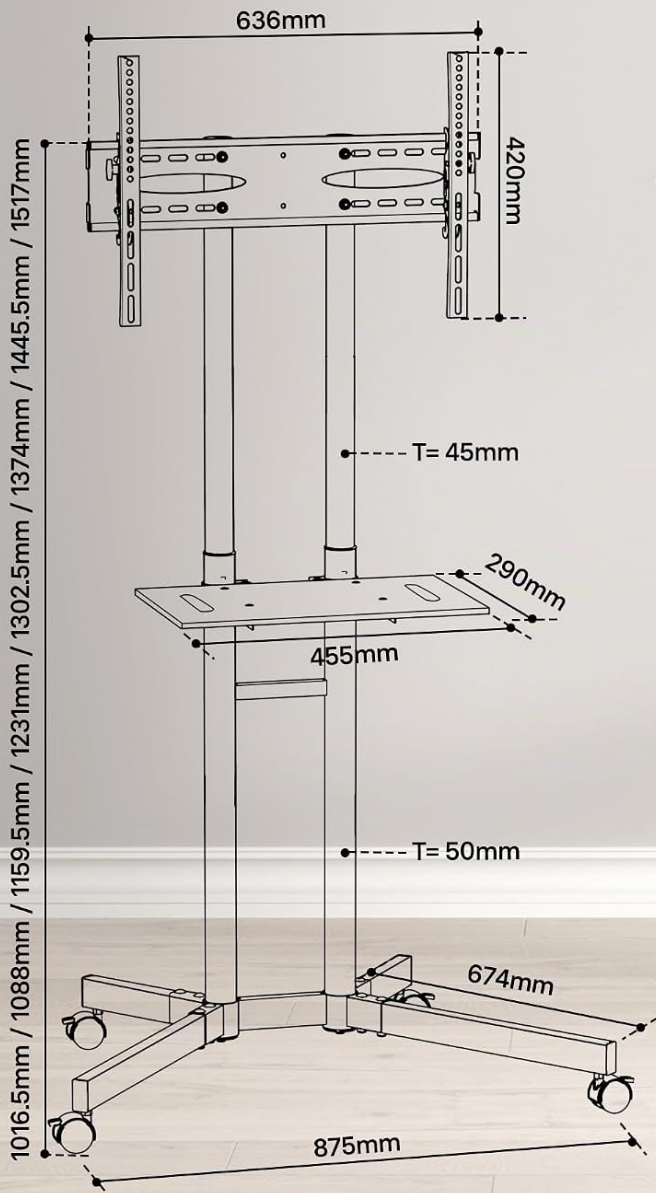

This technical diagram provides overall dimensions of the stand and detailed VESA compatibility information (50x50mm to 600x400mm). It also includes a note regarding TV size and bracket visibility.

Step 4: Mount the TV to the Bracket

Carefully attach your television to the mounting bracket using the appropriate screws and spacers provided. Ensure the TV is centered and securely fastened. The bracket allows for a tilt adjustment of up to 15 degrees up or down.



This image demonstrates a TV mounted on the stand, highlighting the ability to tilt the screen up or down by 15 degrees for optimal viewing angles.



This image shows the integrated cable management system, designed to conceal wires for a tidy appearance.

OPERATING INSTRUCTIONS

Adjusting TV Height

The TV mounting bracket offers 8 levels of height adjustment, ranging from 1016.5 mm to 1517 mm. To adjust the height, loosen the securing bolts on the vertical columns, carefully raise or lower the TV to the desired position (this may require two people), and then re-tighten the bolts securely.

Adjusting TV Tilt

The TV can be tilted up or down by up to 15 degrees. To adjust the tilt, loosen the tilt adjustment knobs on the back of the TV mounting bracket, set the desired angle, and then re-tighten the knobs firmly.

Moving the Stand

To move the TV stand, ensure the casters are unlocked. Gently push the stand to its new location. Once positioned, engage the locking mechanism on all four casters to prevent accidental movement and ensure stability.

Adjusting Media Shelf Height

The media shelf can be adjusted to any height along the vertical columns. Loosen the securing mechanism for the shelf, slide it to the desired height, and then re-secure it firmly. Ensure the shelf does not exceed its maximum load capacity of 10 kg (22 lbs).

MAINTENANCE

Regular maintenance will ensure the longevity and safe operation of your TV stand.

- **Cleaning:** Wipe the stand with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Caster Inspection:** Ensure casters roll freely and locking mechanisms function correctly. Clean any debris from the wheels.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not stable or wobbles.	Screws are loose; TV weight exceeds capacity; casters are unlocked.	Ensure all mounting screws are tight. Verify TV weight is within 60 kg. Lock all casters.
Cannot adjust TV height.	Securing bolts are too tight; mechanism is jammed.	Loosen securing bolts completely. Check for obstructions. Apply gentle force with assistance.
Casters do not roll smoothly.	Casters are locked; debris in wheels.	Unlock all casters. Clean any hair or debris from the wheels.
TV mounting arms extend beyond the TV.	TV is smaller than the minimum recommended size for the bracket width.	This is normal for smaller TVs within the supported range. Ensure VESA compatibility and secure mounting.

SPECIFICATIONS

- **Model:** FN411-WH
- **Material:** Metal
- **Color:** White

- **Compatible TV Sizes:** 32 - 85 inches
- **Maximum TV Load Capacity:** 60 kg (132 lbs)
- **VESA Compatibility:** 50x50 mm to 600x400 mm
- **Height Adjustment:** 1016.5 mm to 1517 mm (8 levels, 71.5 mm increments)
- **Tilt Adjustment:** ± 15 degrees
- **Media Shelf Load Capacity:** 10 kg (22 lbs)
- **Features:** Lockable casters, cable management system, adjustable media shelf



This image visually confirms the supported TV screen size range of 32 to 85 inches.



This image details the VESA compatibility, showing supported patterns from 50x50mm to 600x400mm.



This icon confirms the maximum weight capacity for the TV mount is 60 kg.



This icon confirms the maximum weight capacity for the media shelf is 10 kg.

WARRANTY AND SUPPORT

BONTEC products are manufactured with quality and durability in mind. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official BONTEC website. Please have your model number (FN411-WH) ready when contacting support.

© 2024 BONTEC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question