

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Exuberant Quartz Multifunction Watch NT3301QM01 User Manual

Fastrack NT3301QM01

Fastrack Exuberant Quartz Multifunction Watch NT3301QM01 User Manual

Model: NT3301QM01

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Fastrack Exuberant Quartz Multifunction Watch, model NT3301QM01. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Image: Front view of the Fastrack Exuberant Quartz Multifunction Watch with a brown dial and rose gold stainless steel strap.

PRODUCT OVERVIEW

The Fastrack Exuberant watch features a sophisticated design with multiple functions displayed on its brown dial. Key components include:

- **Main Dial:** Displays the primary time with hour, minute, and second hands.
- **Day Subdial:** Indicates the current day of the week.
- **Date Subdial:** Shows the current date.
- **24-Hour Subdial:** Provides an alternative timekeeping view in a 24-hour format.
- **Crown:** Used for setting the time, date, and day. Located on the right side of the watch case.
- **Stainless Steel Strap:** Durable and adjustable for a comfortable fit.



Image: Detailed view of the watch dial, highlighting the day, date, and 24-hour subdials with gold-tone accents.

SETUP AND INITIAL ADJUSTMENT

Before wearing your watch, you may need to set the time, date, and day. Follow these steps:

1. Setting the Time:

- Pull the crown out to position 2 (farthest out).
- Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time. Ensure you account for AM/PM if setting the 24-hour subdial.
- Push the crown back to position 0 (normal position) to start the watch.

2. Setting the Date:

- Pull the crown out to position 1 (first click).
- Turn the crown clockwise to advance the date hand to the correct date.
- Push the crown back to position 0.

3. Setting the Day:

- Pull the crown out to position 1 (first click).
- Turn the crown counter-clockwise to advance the day hand to the correct day.
- Push the crown back to position 0.

Important Note:

- Avoid setting the date or day between 9:00 PM and 3:00 AM, as this can interfere with the automatic date/day change mechanism and potentially damage the movement. If adjustment is needed during this period, first set the time outside this range, adjust the date/day, then reset the time.
- Ensure the crown is fully pushed back into position 0 after setting to maintain water resistance.

OPERATING THE MULTIFUNCTION FEATURES

Your Fastrack Exuberant watch is designed with three distinct subdials for enhanced functionality:

- **Day Display:** The subdial typically located at the 12 o'clock position indicates the current day of the week (e.g., SUN, MON, TUE). This changes automatically with the main time.
- **Date Display:** The subdial usually found at the 6 o'clock position displays the current numerical date. This also advances automatically.
- **24-Hour Display:** The subdial often positioned at the 9 o'clock position shows the time in a 24-hour format, synchronizing with the main hour hand. This helps distinguish between AM and PM hours.



Image: The Fastrack Exuberant watch worn on a wrist, providing a perspective of its size and how the dial features appear during use.

MAINTENANCE AND CARE

To ensure your Fastrack watch remains in excellent condition, follow these maintenance guidelines:

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth. For stainless steel straps, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is water resistant. However, it is not suitable for swimming, diving, or prolonged exposure to water. Avoid operating the crown or pushers when the watch is wet. Refer to the specifications for the exact water resistance rating.
- **Temperature Extremes:** Avoid exposing your watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect the accuracy and lifespan of the movement.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones) as they can affect the quartz movement's accuracy.

- **Battery Replacement:** When the watch stops or the second hand begins to jump erratically (indicating a low battery), have the battery replaced by an authorized Fastrack service center to ensure proper sealing and water resistance.



Image: Side profile of the watch, illustrating the crown's position and design.

TROUBLESHOOTING

If you encounter any issues with your watch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Low battery or crown is not fully pushed in.	Push the crown fully into position 0. If the problem persists, the battery may need replacement. Contact an authorized service center.

Problem	Possible Cause	Solution
Time, date, or day is incorrect.	Incorrect setting.	Refer to the "Setup and Initial Adjustment" section to reset the time, date, and day.
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Immediately take the watch to an authorized service center for inspection and repair to prevent internal damage.

SPECIFICATIONS

Feature	Detail
Brand	Fastrack
Model Name	Exuberant
Item Model Number	NT3301QM01
Display Type	Analog
Movement	Quartz
Special Features	Water Resistant, Day Display, Date Display, 24-Hour Display
Power Source	Battery Powered (1 Lithium Polymer battery included)
Product Dimensions	14 x 7 x 10 cm
Item Weight	150 g
Country of Origin	India



Image: Rear view of the watch, displaying the stainless steel case back with engravings and the clasp mechanism of the strap.

WARRANTY AND SUPPORT

Your Fastrack Exuberant Quartz Multifunction Watch comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Fastrack website. An optional 1-year extended warranty may also be available for purchase.

For technical support, service, or warranty claims, please contact an authorized Fastrack service center. Ensure you retain your proof of purchase for any warranty-related inquiries.

You can find more information and support on the [Fastrack Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question