

Jocel JE90I-007582

JOCEL JE90I-007582 90 CM Cooker Hood User Manual

Model: JE90I-007582

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your JOCEL JE90I-007582 90 CM Cooker Hood. Please read these instructions carefully before using the appliance and retain them for future reference.

2. SAFETY INFORMATION

To ensure safe operation, always adhere to the following guidelines:

- Ensure the electrical installation complies with local regulations.
- Do not allow children to operate the appliance.
- Regularly clean the grease filters to prevent fire hazards.
- Do not flambé under the cooker hood.
- Ensure adequate ventilation in the room when the cooker hood is used simultaneously with gas or other fuel-burning appliances.
- Disconnect the appliance from the power supply before any cleaning or maintenance.

3. PRODUCT OVERVIEW

The JOCEL JE90I-007582 is a 90 CM wall-mounted cooker hood designed to efficiently remove cooking fumes and odors from your kitchen. It features a durable stainless steel exterior, three-speed extraction, and energy-efficient LED lighting.



This image displays the front view of the JOCEL JE90I-007582 90 CM cooker hood, showcasing its stainless steel finish, control buttons, and three aluminum grease filters.

4. SETUP AND INSTALLATION

The cooker hood is designed for wall mounting. Professional installation is recommended to ensure proper functioning and safety.

4.1 Unpacking

- Carefully remove the cooker hood from its packaging.
- Check for any damage during transit. If damage is found, contact your retailer immediately.
- Ensure all components listed in the packing list are present.

4.2 Mounting

- Determine the optimal mounting height above your cooking surface, typically between 65-75 cm for electric hobs and 70-80 cm for gas hobs.
- Mark the drilling points on the wall according to the provided template (if included) or the appliance dimensions.
- Drill holes and insert wall plugs suitable for your wall type.
- Secure the mounting bracket to the wall.
- Carefully lift and attach the cooker hood to the mounting bracket.

4.3 Ducting and Electrical Connection

- Connect the exhaust ducting to the outlet of the cooker hood and route it to the exterior of the building. Ensure the ducting is as straight and short as possible for optimal performance.
- Connect the power cable to a suitable electrical outlet, ensuring it is properly grounded.

5. OPERATING INSTRUCTIONS

The JOCEL JE90I-007582 cooker hood features intuitive controls for extraction speed and lighting.

5.1 Power On/Off

Press the power button to turn the cooker hood on or off.

5.2 Adjusting Extraction Speed

The cooker hood offers three extraction speeds:

- **Speed 1 (Low):** Ideal for light cooking and simmering.
- **Speed 2 (Medium):** Suitable for general cooking.
- **Speed 3 (High):** Recommended for heavy frying or strong odors.

Press the corresponding speed button to select your desired level.

5.3 Lighting Control

Press the light button to turn the LED lamp on or off, providing illumination for your cooking area.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your cooker hood.

6.1 Cleaning the Grease Filters

The aluminum grease filters should be cleaned regularly, typically every 2-4 weeks depending on usage. They can be washed by hand with warm soapy water or in a dishwasher.

- To remove: Push the latch or handle on the filter and pull downwards.
- To clean: Wash thoroughly and allow to dry completely before reinserting.
- To reinsert: Align the filter and push it back into place until it clicks.

6.2 Cleaning the Exterior

Clean the stainless steel exterior with a soft cloth and a non-abrasive cleaner specifically designed for stainless steel. Avoid using harsh chemicals or abrasive pads that could scratch the surface.

6.3 Replacing the LED Lamp

If the LED lamp needs replacement, ensure the appliance is disconnected from the power supply. Consult a qualified technician for lamp replacement to avoid damage to the electrical components.

7. TROUBLESHOOTING

Before contacting customer support, please check the following common issues:

Problem	Possible Cause	Solution
Cooker hood does not start	No power supply; Power cable disconnected; Fuse tripped.	Check power connection; Check circuit breaker/fuse box.
Low extraction power	Grease filters are dirty; Ducting is blocked or too long/bent.	Clean grease filters; Check ducting for obstructions or improper installation.
Excessive noise	Loose components; Improper installation; Obstruction in fan.	Check for loose screws; Ensure proper installation; Inspect fan for foreign objects.
Light not working	LED lamp faulty; Electrical connection issue.	Consult a technician for lamp replacement; Check electrical connections.

8. SPECIFICATIONS

Model Number	JE90I-007582 (Internal: 5601774007582)
--------------	--

Brand	Jocel
Product Dimensions (H x W x D)	140 mm x 900 mm x 500 mm
Box Dimensions (H x W x D)	180 mm x 945 mm x 530 mm
Extraction Power (Max)	400 m ³ /h
Extraction Power (Speed 1)	280 m ³ /h
Extraction Power (Speed 2)	300 m ³ /h
Extraction Power (Speed 3)	400 m ³ /h
Noise Level (Max)	59 dB(A)
Noise Level (Speed 1)	52 dB(A)
Noise Level (Speed 2)	55 dB(A)
Noise Level (Speed 3)	59 dB(A)
Net / Gross Weight	5.28 kg / 6.98 kg
Exterior Material	Stainless Steel
Maximum Pressure	165 Pa
Lighting	1 x 1.5W LED Lamp
Filters	2 x Aluminum Filters
Energy Class	B
Motor	1 x 65W Motor
Total Power	66.5W
Mounting Type	Wall Mount
Country of Origin	Portugal

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact your retailer. Keep your proof of purchase for any warranty claims.

