

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Ladies' Eco-Drive Classic Watch Instruction Manual

Citizen FE6131-04A

Citizen Ladies' Eco-Drive Watch Instruction Manual

Model: FE6131-04A

1. PRODUCT OVERVIEW

This manual provides instructions for the Citizen Ladies' Eco-Drive Classic Silver Stainless Steel 3 Hand Watch with White Rubber Strap, White Dial (Model: FE6131-04A). This timepiece is designed for daily wear, featuring a silver-tone stainless steel case, a white 3-hand dial with a date function, and a white rubber strap with a buckle closure. A key feature is the Citizen Eco-Drive technology, which powers the watch using any light source, eliminating the need for battery replacement.





Figure 1: Front view of the Citizen Ladies' Eco-Drive watch (Model: FE6131-04A). The watch features a silver-tone case, a white dial with silver-tone hour markers and hands, and a white rubber strap with a textured pattern.

2. INITIAL SETUP AND CHARGING

Your Citizen Eco-Drive watch is powered by light and does not require a traditional battery. For optimal performance, ensure the watch is adequately charged before initial use and regularly exposed to light.

2.1 Charging the Watch

To charge the watch, expose the dial to a light source. The charging time varies depending on the intensity of the light.

- **Sunlight (Outdoors):** Approximately 2 hours for a full charge from a completely depleted state.
- **Overcast Sky (Outdoors):** Approximately 5 hours for a full charge.
- **Fluorescent Lamp (30W, 20 inches away):** Approximately 40 hours for a full charge.

Avoid placing the watch in direct sunlight for extended periods in high temperatures (e.g., on a car dashboard), as this may cause damage.



Figure 2: Side profile of the watch, highlighting the crown and the slim design of the case. The white rubber strap is also visible.

3. OPERATING THE WATCH

The watch features a single crown for setting the time and date.

3.1 Setting the Time

1. Pull the crown out to position 2 (the outermost click). The second hand will stop.
2. Turn the crown to set the hour and minute hands. When setting the minute hand, advance it a few minutes past the desired time and then turn it back to the exact time.
3. Push the crown back in to position 0 (normal position) to start the watch.

3.2 Setting the Date

1. Pull the crown out to position 1 (the first click).
2. Turn the crown clockwise to set the date.
3. Push the crown back in to position 0 (normal position).

Note: Do not set the date between 9:00 PM and 1:00 AM, as this may interfere with the automatic date change mechanism. If it is necessary to set the date during this period, first set the time outside of this range, adjust the date, and then reset the time.



Figure 3: Rear view of the watch, displaying the stainless steel case back with Citizen Eco-Drive branding and water resistance information.

4. MAINTENANCE AND CARE

Proper care will ensure the longevity and performance of your Citizen Eco-Drive watch.

4.1 Cleaning

Wipe the watch case and strap with a soft, dry cloth regularly to remove dust and dirt. For the rubber strap, a mild soap solution and water can be used, followed by thorough rinsing and drying. Avoid using harsh chemicals or abrasive materials.

4.2 Water Resistance

This watch has a water resistance rating of 100 meters (10 ATM). This means it is suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving. Always ensure the crown is pushed in completely before exposing the watch to water.

4.3 Storage

When storing the watch for extended periods, ensure it is exposed to light periodically to maintain a charge. Storing the watch in a dark place for too long may cause it to stop.



Figure 4: The watch's packaging box, closed. It features a black textured base and a white lid with the Citizen logo.



Figure 5: The watch's packaging box, open, revealing the black watch cushion designed to hold the timepiece securely.

5. TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common solutions before seeking professional service.

Problem	Possible Cause	Solution
Watch has stopped or is losing time.	Insufficient charge.	Expose the watch dial to bright light (e.g., sunlight) for several hours to fully charge.
Date does not change at midnight.	AM/PM setting is incorrect.	Advance the time by 12 hours. The date should change at midnight.
Second hand moves in two-second intervals.	Low charge warning.	Immediately expose the watch to bright light for charging.

6. SPECIFICATIONS

Feature	Detail
Model Number	FE6131-04A
Movement	Eco-Drive (Light-Powered)
Case Material	Silver-Tone Stainless Steel
Dial Color	White
Strap Material	White Rubber
Functions	3-Hand, Date
Water Resistance	100 Meters (10 ATM)
Crystal	Mineral Crystal
Package Dimensions	4.92 x 3.86 x 3.11 inches
Item Weight	9.14 ounces

7. WARRANTY AND SUPPORT

Citizen watches are known for their quality and reliability. This product comes with a manufacturer's limited warranty. For specific warranty terms, registration, and service inquiries, please refer to the warranty card included with your purchase or visit the official Citizen website.

For further assistance, you may contact Citizen customer support directly.

Official Website: www.citizenwatch.com

Customer Service: Refer to the contact information provided on the official website for your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C8L3N8K6>

More documents and user manuals: <https://manuals.plus/>