

[Manuals.plus](#) /

> [DEWENWILS](#) /

> DEWENWILS DHRS104L Remote Controlled Programmable Outlet Set - 4 Plugs, 1 Remote, 16A/3680W

DEWENWILS DHRS104L

DEWENWILS Remote Controlled Programmable Outlet Set

Model: DHRS104L

INTRODUCTION

Thank you for choosing the DEWENWILS Remote Controlled Programmable Outlet Set. This product provides a convenient and efficient way to control your home appliances wirelessly. The set includes four 16A/3680W wireless plugs and one pre-paired remote control, designed for ease of use and enhanced safety.



Image: DEWENWILS Remote Controlled Outlets in a home environment.

SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Indoor Use Only:** This product is designed for indoor use in dry locations. Do not expose to water or moisture.

- **Electrical Rating:** Do not exceed the maximum load of 16A or 3680W. Overloading can cause overheating and fire.
- **Grounding:** Ensure the wall outlet is properly grounded.
- **Child Safety:** The outlets feature an integrated safety cover to prevent accidental contact with live parts. Always supervise children around electrical devices.
- **Temperature Range:** Operate within the specified temperature range of -25°C to 40°C.
- **Cleaning:** Disconnect from power before cleaning. Use a dry cloth; do not use liquid cleaners.

Gagnez du Temps et de l'Énergie

Ne bloque pas l'autre prise de courant

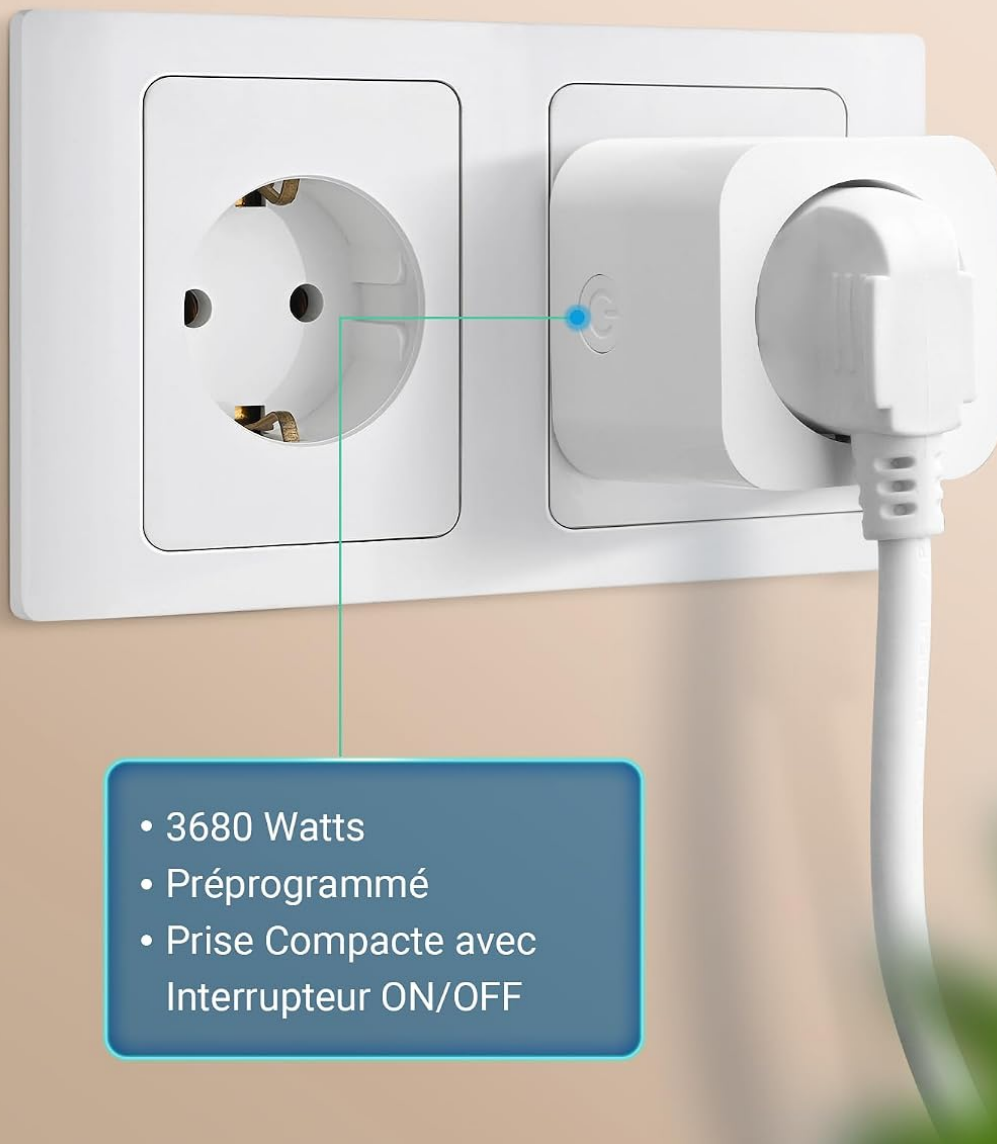


Image: Built-in safety cover on the outlet, designed to prevent accidental contact.



Image: Temperature resistance of the DEWENWILS outlet.

SETUP

The DEWENWILS remote controlled outlets are pre-paired for immediate use. No complex configuration is required.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Plug In:** Insert a DEWENWILS wireless plug into a standard wall outlet. Ensure it is securely seated.
3. **Connect Appliance:** Plug your desired appliance into the DEWENWILS wireless plug.
4. **Remote Control:** The included remote control is pre-paired with the plugs. You can start controlling your devices immediately.

Optional: Wall Mounting the Remote

The remote control can be conveniently mounted on a wall using the provided bracket.

- Choose a suitable location for the remote control bracket.
- Use the included screws to secure the bracket to the wall.
- Slide the remote control into the mounted bracket.

EINGEBAUTE SICHERHEITSSABDECKUNG

Es verhindert, dass Kinder sie versehentlich berühren und vermeidet Sicherheitsrisiken.



Image: Wall mounting the remote control.

OPERATING

The remote control allows for both individual and group control of your connected devices.

Individual Control

Each button labeled 1, 2, 3, or 4 on the remote corresponds to a specific outlet. Press the 'ON' button for the desired number to turn on the corresponding appliance, and 'OFF' to turn it off.

Group Control

The 'ALL ON' button will activate all paired outlets simultaneously, while the 'ALL OFF' button will turn off all connected devices.

PLATZ SPAREN

Geeignet für schwer zugängliche stellen




Image: One-button control for multiple devices.

Wireless Range

The remote control operates with a range of up to 30 meters (100 feet) in open areas. The RF signal can pass through walls and floors, allowing control across different rooms or levels of your home.

Sparen Ihre Zeit und Mühe

Blockieren Sie den zweiten Ausgang nicht

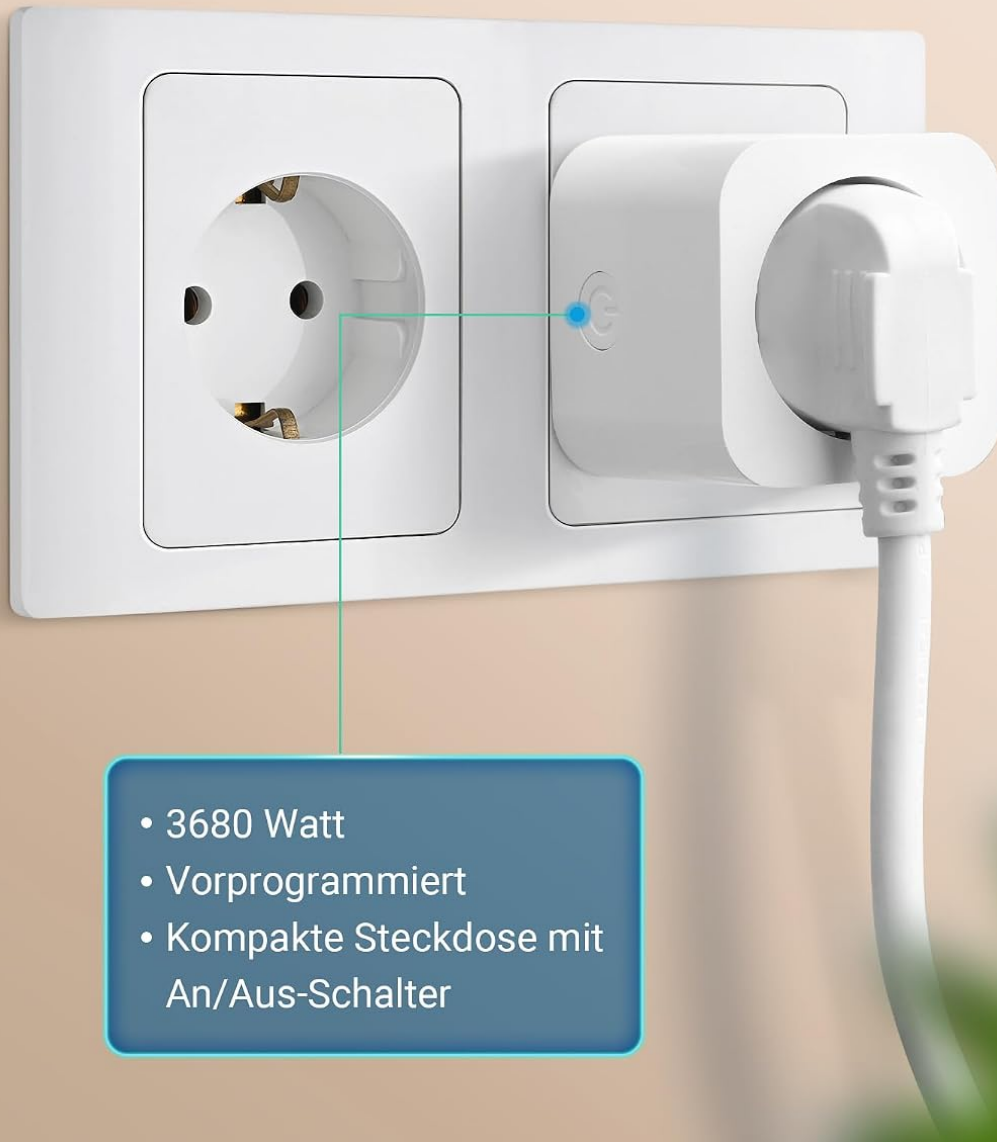

- 3680 Watt
- Vorprogrammiert
- Kompakte Steckdose mit An/Aus-Schalter

Image: 30-meter wireless range illustration.

Compact Design

The compact design of the plugs ensures that they do not block adjacent outlets, maximizing the use of your wall sockets.

PROGRAMMIERBAR UND ERWEITERBAR

Die Verwendung von Steckdosen stört sich nicht gegenseitig und Sie können sie je nach Bedarf koppeln.



Image: Compact plug design, not blocking other outlets.

MAINTENANCE

To ensure the longevity and proper functioning of your DEWENWILS Remote Controlled Programmable Outlet Set, follow these maintenance guidelines:

- **Cleaning:** Disconnect the plugs from power before cleaning. Use a soft, dry cloth to wipe the surfaces. Do not use abrasive cleaners, solvents, or immerse in water.
- **Storage:** When not in use for extended periods, store the plugs and remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote control's range or responsiveness decreases, replace its battery (type usually CR2032, check remote for specifics).

- **Inspection:** Periodically inspect the plugs and cords for any signs of damage, such as frayed wires or cracked casings. Discontinue use if any damage is found.

TROUBLESHOOTING

If you encounter issues with your DEWENWILS Remote Controlled Programmable Outlet Set, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Outlet not responding to remote	Remote battery is low or dead. Outlets are out of range. Pairing issue.	Replace remote battery. Move closer to the outlet. Re-pair the remote and outlet (refer to advanced pairing instructions if needed, usually involves holding a button on the plug).
Appliance does not turn on/off	Appliance is not plugged in correctly. Appliance switch is off. Outlet is overloaded.	Ensure appliance is fully plugged into the wireless outlet. Turn on the appliance's power switch. Check if the appliance's power consumption exceeds 16A/3680W.
Reduced remote range	Low remote battery. Signal interference. Obstructions.	Replace remote battery. Avoid placing the remote near large metal objects or other strong RF sources. Try to minimize physical obstructions between the remote and the outlet.

If the problem persists after trying these solutions, please contact DEWENWILS customer support.

SPECIFICATIONS

- **Model:** DHRS104L
- **Brand:** DEWENWILS
- **Operating Mode:** ON-OFF
- **Current Rating:** 16 A
- **Power Rating:** 3680 W
- **Connector Type:** Schuko
- **Switch Type:** Push Button
- **Material:** Copper, Plastic
- **Product Dimensions (L x W x H):** 50 x 50 x 44 millimeters (5 x 5 x 4.4 cm)
- **Weight:** 420 grams (for the set)
- **Wireless Range:** Up to 30 meters (open area)
- **Operating Temperature:** -25°C to 40°C

WARRANTY AND SUPPORT

DEWENWILS products are designed and manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact DEWENWILS customer support.

If you have any questions, require technical assistance, or need to report a problem, please contact

DEWENWILS customer support through their official website or the retailer where you purchased the product. Please have your model number (DHRS104L) and purchase information ready when contacting support.