



[Manuals.plus](#) /

> [Sauder](#) /

> Sauder Tiffin Line Credenza TV Stand Instruction Manual

Sauder 433576

Sauder Tiffin Line Credenza TV Stand (Model 433576)

User Instruction Manual

INTRODUCTION

Thank you for choosing the Sauder Tiffin Line Credenza TV Stand. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your new furniture. Please read these instructions carefully before assembly and retain them for future reference.

SAFETY INFORMATION

- Always follow the assembly instructions provided with the product packaging.
- Ensure all hardware is securely fastened before use. Periodically check and tighten fasteners as needed.
- Do not overload the unit. The top surface can accommodate a TV weighing **95 lbs (43 kg)** or less.
- This unit is designed for freestanding installation. Do not attempt to mount it to a wall unless specifically instructed by the manufacturer.
- Keep small parts away from children during assembly.
- Use caution when moving the assembled unit to prevent injury or damage.

SETUP AND ASSEMBLY

The Sauder Tiffin Line Credenza TV Stand requires assembly. Detailed, step-by-step assembly instructions, including a list of all parts and hardware, are included in the product packaging. Please refer to those instructions for specific assembly procedures.

Before You Begin:

- **Clear Space:** Choose a large, clear, and flat area for assembly to prevent scratching the furniture or flooring.
- **Tools:** Ensure you have the necessary tools as specified in the assembly guide (typically a screwdriver and hammer).
- **Assistance:** Assembly may require two people for easier and safer handling of larger components.
- **Unpack:** Carefully unpack all components and verify against the parts list in the assembly instructions.

Dimensions:

The assembled unit measures approximately **15.75 inches (D) x 62.52 inches (W) x 28.23 inches (H)**



Image: Product dimensions for planning placement.

OPERATING INSTRUCTIONS

This credenza is designed to function as a TV stand for screens up to **65 inches** and weighing **95 lbs (43 kg)** or less, or as a general storage credenza.

Key Features:

- **TV Placement:** Place your television centrally on the top surface, ensuring it does not exceed the weight capacity.
- **Open Shelf:** A large open shelf is provided for electronic components such as media players, soundbars, or for displaying decorative items.
- **Hidden Storage:** Behind the decorative rattan-insert doors, you will find concealed storage areas.
- **Adjustable Shelves:** Each hidden storage compartment features an adjustable shelf, allowing you to customize the space to fit various items.
- **Cord Management:** The enclosed back panel includes pass-through openings for organizing and routing power cords and cables, helping to maintain a tidy appearance.



Image: Credenza with a TV and media devices on the open shelf.



Image: Credenza used for general storage and display.



Image: View of the interior storage with doors open.

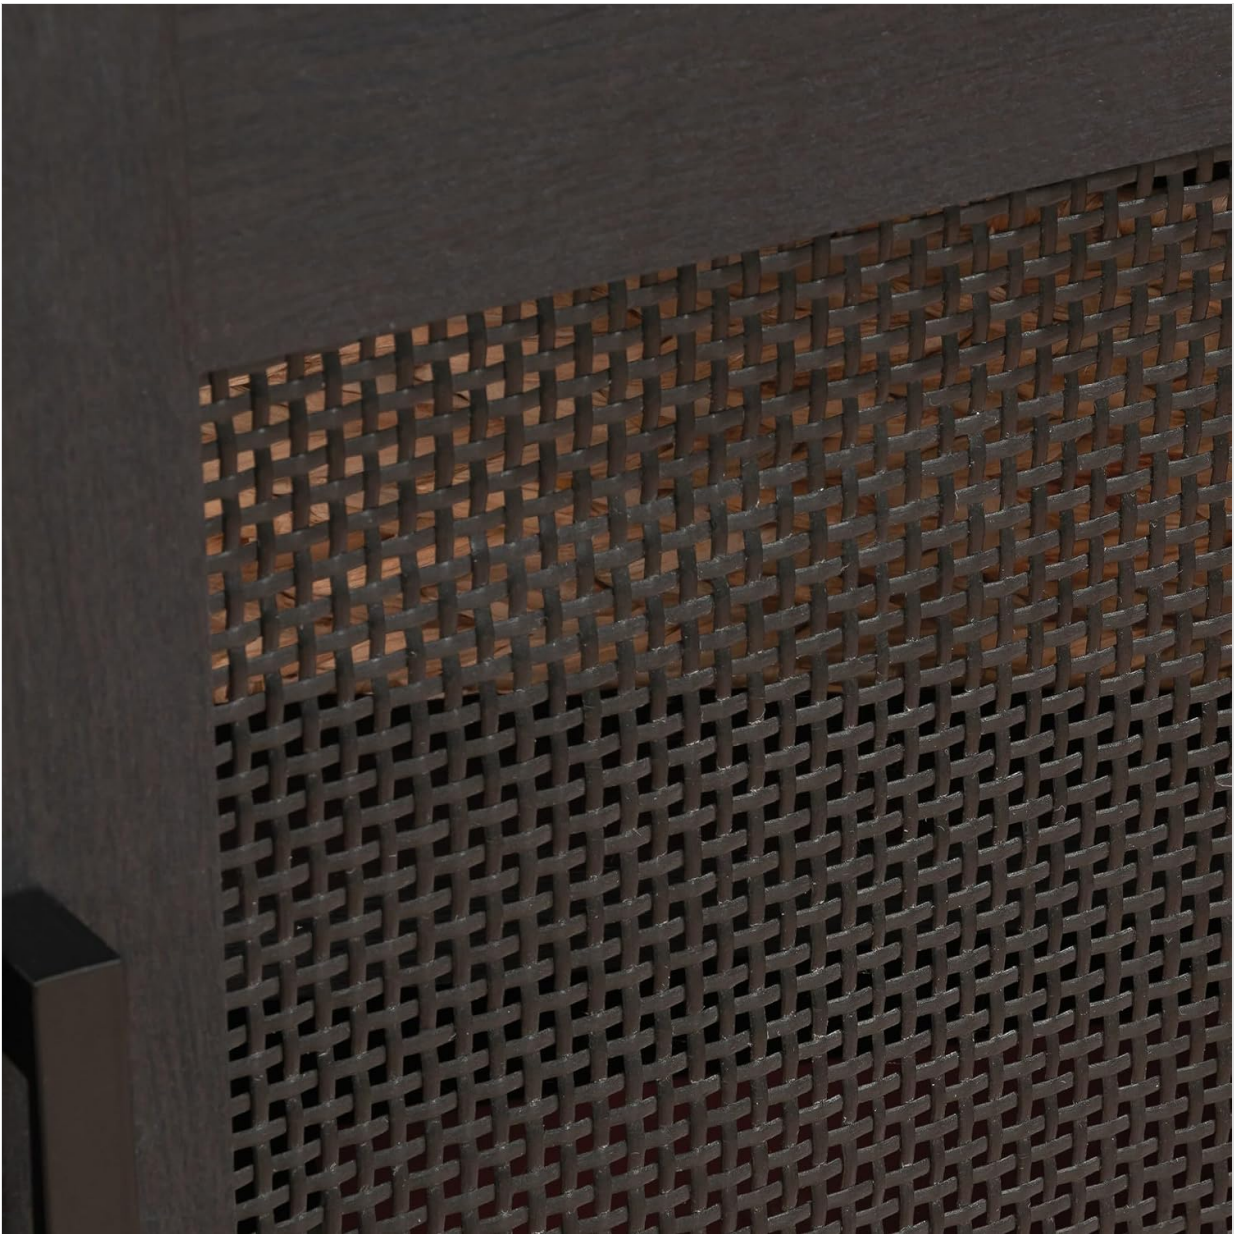


Image: Detail of an adjustable interior shelf.



Image: Detail of the rattan door insert.



Image: Detail of the door handles.

MAINTENANCE

- **Cleaning:** To clean the surface, wipe with a damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Hardware Check:** Periodically inspect all screws, bolts, and fasteners to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Spills:** Wipe up spills immediately to prevent staining or damage to the wood finish.
- **Environmental Conditions:** Avoid placing the unit in direct sunlight or near heat sources, which can cause fading or warping. Maintain a stable room temperature and humidity.

TROUBLESHOOTING

- **Wobbly Unit:** If the credenza feels unstable, check that all assembly hardware is fully tightened. Ensure the unit is on a level surface.
- **Doors Not Aligning:** If the doors do not close properly or appear misaligned, adjust the hinges according to the specific instructions provided in the assembly manual.
- **Missing Parts:** If you find any parts missing during assembly, refer to the parts list in your original assembly

instructions and contact Sauder customer service.

- **Damaged Components:** Do not attempt to assemble or use the unit if any components are damaged. Contact Sauder customer service for replacement parts.

SPECIFICATIONS

Brand	Sauder
Model Number	433576
Product Dimensions (D x W x H)	15.75" x 62.52" x 28.23"
Item Weight	99.22 lbs (45 kg)
Material	Engineered Wood
Color	Raven Oak
TV Size Accommodation	Up to 65 inches
Maximum TV Weight Capacity	95 lbs (43 kg)
Number of Shelves	2 (adjustable)
Number of Doors	4
Assembly Required	Yes
Installation Type	Freestanding

WARRANTY INFORMATION

For detailed information regarding the manufacturer's warranty, please refer to the warranty documentation included with your product packaging or visit the official Sauder website. Warranty terms and conditions may vary.

CUSTOMER SUPPORT

If you require assistance with assembly, have questions about your product, or need to report missing or damaged parts, please contact Sauder customer service directly.

- **Manufacturer:** Sauder
- **Website:** [Visit the Sauder Store on Amazon](#) (for general product information)
- Refer to your product packaging for direct contact information (phone number, email) for customer support.