

## Easytry19694

# Generic Replacement Remote Control Instruction Manual

Model: Easytry19694 | Brand: Generic

## 1. INTRODUCTION

This manual provides essential instructions for the Generic Replacement IR Remote Control, Model Easytry19694. This remote is designed as a replacement for various portable projectors, including but not limited to ELEPHAS RD-606, GP X PJ809B, Riga I RD-606, EU G Mini E3W, E3 US2-E3-01F, D5W, and S6W MINI LED LCD Portable Projectors. Please verify your projector model number against the compatible list before use. This remote control operates using infrared (IR) technology and requires batteries for operation.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Rear view of the remote control with the battery cover removed, illustrating the battery compartment.



Figure 2.2: Rear view of the remote control with AAA batteries correctly installed.

Once batteries are installed, the remote control is ready for use. No additional pairing is typically required for IR remotes; simply point it at your compatible projector.

### **3. OPERATING INSTRUCTIONS**

---

To operate your projector with this remote control, ensure there is a clear line of sight between the remote's IR emitter and the projector's IR receiver. Point the remote directly at the projector.



Figure 3.1: Front view of the remote control, displaying button layout.

### 3.1 Button Functions

- **Power Button ( )**: Turns the projector on or off.
- **MENU Button**: Accesses the projector's main menu.
- **Navigation Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK Button**: Confirms selections.
- **Volume Up/Down Buttons ( / )**: Adjusts the audio volume.
- **Source/Input Button (□)**: Selects the input source (e.g., HDMI, USB).
- **Home Button ( )**: Returns to the projector's home screen or main interface.
- **Back/Return Button (↶)**: Goes back to the previous menu or screen.
- **3D Button**: Activates or deactivates 3D mode (if supported by the projector).

*Note: Specific button functionalities may vary slightly depending on your projector model. Refer to your projector's original manual for detailed information on its features.*

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries

according to local regulations.

#### 4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

### 5. TROUBLESHOOTING

---

- **Remote is not working:**

- Ensure batteries are correctly installed with the proper polarity (+/-).
- Replace old batteries with new AAA batteries.
- Verify there is a clear line of sight between the remote and the projector's IR receiver. Obstructions can block the signal.
- Confirm that your projector model is listed as compatible with this remote control. This remote is an IR replacement and may not support all functions of an original remote, or may not be compatible with models not explicitly listed.
- Test the remote by pointing it at a smartphone camera (most smartphone cameras can detect IR light). If you see a light flashing from the remote's emitter when pressing buttons, the remote is likely transmitting a signal.

- **Limited functionality or some buttons do not work:**

- This replacement remote may not offer identical functionality to your projector's original remote. Some advanced or model-specific features might not be supported.
- Refer to your projector's original manual to confirm if the desired function is typically controlled by an IR remote.

### 6. SPECIFICATIONS

---

- **Model Number:** Easytry19694
- **Brand:** Generic
- **Compatibility:** ELEPHAS RD-606, GP X PJ809B, Riga I RD-606, EU G Mini E3W E3 US2-E3-01F, D5W, S6W MINI LED LCD Portable Projectors
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Item Weight:** 3.84 ounces
- **Package Dimensions:** 5 x 2 x 1 inches
- **Technology:** Infrared (IR)

### 7. WARRANTY INFORMATION

---

Specific warranty information for this Generic replacement remote control is not provided in the product details. Please refer to the retailer or seller from whom you purchased the product for any applicable warranty terms and conditions.

### 8. SUPPORT

---

For technical assistance or inquiries regarding this product, please contact the seller directly through the platform where the purchase was made. As this is a generic replacement item, direct manufacturer support may not be available.

