

AFMAT PSX5BK

AFMAT Electric Pencil Sharpener User Manual

Model: PSX5BK

INTRODUCTION

Thank you for choosing the AFMAT Electric Pencil Sharpener. This fully automatic, rechargeable sharpener is designed for convenience and precision, accommodating pencils with diameters between 7mm and 11.5mm. Its hands-free operation ensures safety and ease of use for various users, from students to artists.

Key features include:

- **Fully Automatic Operation:** Simply insert a pencil, and the sharpener will automatically feed it in and eject it once sharpened.
- **Wide Compatibility:** Accommodates pencils with diameters from 7mm to 11.5mm, including various shapes.
- **Three Sharpness Options:** Choose between sharp, medium, or blunt tips to suit different needs, such as fine lines, general use, or shading.
- **Rechargeable and Portable:** Built-in battery allows for cordless use anywhere. Supports use while charging.
- **Space-Saving Design:** Compact and vertical "robot" style fits easily on desks and in backpacks.



Image: The AFMAT Electric Pencil Sharpener, highlighting its automatic in/out feature and compatibility with 7mm, 9mm, and 11mm pencils.

SETUP

1. **Unboxing:** Carefully remove the sharpener and any accessories from the packaging.
2. **Initial Charge:** Before first use, fully charge the sharpener. Connect the provided USB-C cable to the charging port located at the bottom of the unit. Use a 5V 2A adapter (not included) for optimal charging. A full charge typically takes 2 hours and provides power for approximately 600 sharpenings.
3. **Placement:** Place the sharpener on a stable, flat surface.

RECHARGEABLE & PORTABLE



- 2 hrs of charging
- 600 times of using



Note : Adapter is not included.
Please use a 5V 2A adapter.

Image: The sharpener's rechargeable feature, illustrating the USB-C charging port and battery life.

OPERATING INSTRUCTIONS

1. **Select Sharpness:** Locate the sharpness adjustment slider on the front of the sharpener. Slide it to select your desired tip:

- **Sharp:** For fine lines and detailed work.
- **Medium:** A balanced tip for general use.
- **Blunt:** A thick tip ideal for shading or for younger users who are hard on pencils.

Note: For soft core pencils, it is recommended to use the medium or blunt tip setting to prevent tip breakage.

2. **Insert Pencil:** Gently insert the pencil into the sharpening hole at the top of the unit. The sharpener will automatically grip the pencil and pull it in.
3. **Automatic Sharpening:** The sharpener will begin sharpening automatically. There is no need to hold or apply pressure to the pencil.
4. **Automatic Ejection:** Once the pencil reaches the selected sharpness, the sharpener will automatically eject it. Remove the sharpened pencil.

FULLY AUTOMATIC



Image: Demonstrates the fully automatic operation, where the sharpener pulls the pencil in and pushes it out.

3 SHARPNESS OPTIONS



Image: Illustrates the three adjustable sharpness settings available on the sharpener.

MAINTENANCE

- **Emptying Shavings:** To empty the shavings, gently twist and lift the top cover of the sharpener. Dispose of the pencil shavings. Reattach the cover securely until it clicks into place. The sharpener will

not operate if the cover is not properly closed, ensuring safety.

- **Blade Replacement:** The blade is replaceable. If sharpening performance decreases, a new blade may be needed. The ASIN for replacement blades is B0CJ8YYSV5. Refer to the specific instructions provided with the replacement blade for installation.
- **Cleaning:** Wipe the exterior of the sharpener with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.

SPACE-SAVING & ADORABLE



Image: The compact and space-saving design of the sharpener, suitable for various environments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pencil not sharpening or uneven tip.	Pencil core is off-center or blade is dull.	Check if the pencil core is centered. If not, try a different pencil. If the issue persists, consider replacing the blade (ASIN: B0CJ8YYSV5).
Sharpener does not turn on.	Low battery or cover not properly closed.	Charge the sharpener using the provided USB-C cable. Ensure the top cover is securely closed.
Pencil tip breaks frequently.	Using a soft core pencil with a sharp setting.	Switch the sharpness setting to medium or blunt for soft core pencils.
Pencil not automatically feeding/ejecting.	Obstruction in the sharpening mechanism or incorrect pencil size.	Ensure no broken lead or debris is blocking the mechanism. Verify the pencil diameter is within 7-11.5mm.

SPECIFICATIONS

- **Brand:** AFMAT
- **Model:** PSX5BK
- **Dimensions:** 3.6 x 3.6 x 7.3 inches
- **Item Weight:** 1.43 pounds
- **Color:** Black
- **Material:** ABS housing + S.S. blade
- **Power Source:** Battery Powered (Rechargeable)
- **Compatible Pencil Diameters:** 7-11.5mm
- **Charging Port:** USB-C

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official AFMAT website. Protection plans are also available for extended coverage. For additional support, you may visit the [AFMAT Store on Amazon](#).

