

[Manuals.plus](#) /

› [Oprisen](#) /

› Oprisen Power Recliner Chair with Heat & Massage (Model YM1008) Instruction Manual

## Oprisen YM1008

# Oprisen Power Recliner Chair with Heat & Massage (Model YM1008) Instruction Manual

## INTRODUCTION

Thank you for choosing the Oprisen Power Recliner Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read these instructions thoroughly before use and retain them for future reference.



Image: Two Oprisen Power Recliner Chairs with LED lights illuminated, set in a modern living room.

The Oprisen Power Recliner Chair is designed to enhance your comfort with features such as power recline, full-body

vibration massage, lumbar heating, integrated LED lighting, USB charging ports, and convenient cup holders. Its wingback design and cushioned support offer a comfortable seating experience for various activities.

## Safety Information

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Read all instructions carefully before assembling or operating the chair.
- Keep children and pets away from the chair's moving parts, especially during operation.
- Do not allow children to play on or operate the chair.
- Ensure adequate clearance around the chair (approximately 10 inches) when reclining to prevent obstruction or damage.
- Do not place hands or feet near the reclining mechanism when operating the chair.
- Unplug the chair from the power outlet before cleaning, maintenance, or if it will be unused for an extended period.
- Do not use the chair if the power cord or plug is damaged. Contact customer support for replacement.
- Use only the power adapter provided with the chair.
- The maximum weight capacity for this chair is 330 pounds (150 kg). Do not exceed this limit.
- Avoid spilling liquids on the control panel or electrical components.

## Package Contents

Verify that all components are present before beginning assembly:

- Chair Backrest
- Seat Base with Armrests
- Power Adapter
- Heating & Massage Remote Control
- Lumbar Pillow
- Assembly Instruction Manual

## Setup

Assembly of the Oprisen Power Recliner Chair is designed to be straightforward and typically takes about 10 minutes per chair.

### Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Align the metal grooves on the backrest with the corresponding brackets on the seat base. Push down firmly until the backrest clicks securely into place.
3. **Connect Power Cables:** Locate the power cables extending from the backrest and the seat base. Connect them securely. Ensure all connections are snug.
4. **Connect Power Adapter:** Plug the power adapter into the chair's main power input.
5. **Position Chair:** Place the chair in its desired location, ensuring there is sufficient space behind and in front for full recline.

6. **Plug into Outlet:** Plug the power adapter into a standard wall outlet.
7. **Attach Lumbar Pillow:** Place the lumbar pillow on the chair for added support.



Image: Two black Oprisen Power Recliner Chairs in a home theater setting with blue LED lights.

## OPERATING INSTRUCTIONS

---

Your Oprisen Power Recliner Chair offers multiple functions for personalized comfort.

### 1. Power Recline Function

The chair features a smooth power recline mechanism. Use the buttons located on the side control panel to adjust your seating position.

- **Recline Button:** Press and hold the recline button to extend the footrest and recline the backrest. Release the button when you reach your desired angle.
- **Upright Button:** Press and hold the upright button to retract the footrest and return the backrest to the upright position.

# Side-Push Button

Easily adjust the position you want



Image: Side control panel and recline angles (90° Reading, 110° Gaming, 130° Watching TV, 160° Napping).

## 2. Heat and Massage Functions

Control the heat and massage features using the included remote control.

- **Heat Function:** Press the 'HEAT' button on the remote to activate lumbar heating. Press again to turn off. This function can be used independently.
- **Massage Function:** The chair has 8 vibration points and offers 5 modes and 2 intensity levels. Use the remote control to select your preferred massage mode and intensity.
- **Timer Control:** The massage function includes 15/30/60 minute timer options.



# MASSAGE FUNCTION

- 15/30/60 Timer Control •
- 8 Ponits Vibration Massage •
- Heating Function for Lumbar •
- 2 Massage Intensity •



Image: Diagram showing massage points and remote control for heat and massage functions.

## 3. LED Light Operation

The integrated LED lights provide ambient lighting. Use the dedicated button on the side control panel to cycle through colors or turn the lights on/off.

Your browser does not support the video tag.

Video: Demonstration of the Oprisen Power Recliner Chair's LED light show, displaying various color options.

Your browser does not support the video tag.

Video: Overview of the Oprisen Power Recliner Chair, highlighting its LED light feature.

## 4. USB Charging Port

A USB port is conveniently located on the side control panel for charging devices.

- **Charging:** Plug your USB charging cable into the port. This port is suitable for low-power devices such as smartphones and tablets.
- **Note:** The USB port is not designed for high-power devices like laptops.



Image: Overview of recliner functions, including the USB charging port.

## 5. Cup Holders and Side Pockets

The chair includes two built-in cup holders and two large side pockets for convenience.

- **Cup Holders:** Use the cup holders to securely hold beverages.
- **Side Pockets:** Store books, remote controls, or other small items in the side pockets.



Image: Built-in cup holder.



Image: Side storage pocket.

## MAINTENANCE

Proper care will extend the life and appearance of your recliner.

- **Cleaning Faux Leather:** Wipe the faux leather surface with a soft, damp cloth. For stubborn stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Vacuuming:** Regularly vacuum crevices and under cushions to remove dust and debris.
- **Inspecting Connections:** Periodically check all electrical connections and cables to ensure they are secure and undamaged.
- **Moving the Chair:** When moving the chair, lift it rather than dragging to prevent damage to the legs or frame.

## TROUBLESHOOTING

If you encounter any issues, refer to the following table for common problems and solutions.

| Problem                            | Possible Cause                                                          | Solution                                                                                                                          |
|------------------------------------|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Chair does not recline or operate. | Power cord unplugged; loose connection; power outage.                   | Ensure power cord is securely plugged into outlet and chair. Check all internal connections. Verify power outlet is functional.   |
| Massage/Heat function not working. | Remote control battery low/dead; loose connection to massage/heat unit. | Check and replace remote control batteries. Ensure the massage/heat unit cable is properly connected to the chair's power system. |
| LED lights not turning on.         | LED power cable loose; LED strip damaged.                               | Check the connection of the LED power cable. If still not working, contact customer support.                                      |
| USB port not charging devices.     | Device requires more power than available; loose USB connection.        | Ensure the device is low-power (e.g., smartphone, tablet). Check the USB cable connection. Try a different USB cable.             |
| Unusual noises during recline.     | Mechanism needs lubrication; obstruction.                               | Inspect for any obstructions in the reclining mechanism. Contact customer support if noise persists.                              |

## SPECIFICATIONS

Detailed specifications for the Oprisen Power Recliner Chair (Model YM1008).

| Feature                        | Detail                     |
|--------------------------------|----------------------------|
| Brand                          | Oprisen                    |
| Model Name                     | YM1008                     |
| Color                          | Black                      |
| Material                       | Faux Leather (Sponge Fill) |
| Product Dimensions (D x W x H) | 40"D x 33"W x 44"H         |
| Item Weight                    | 304 pounds (for 2 PCS)     |

| Feature                       | Detail                                                                                         |
|-------------------------------|------------------------------------------------------------------------------------------------|
| Maximum Weight Recommendation | 330 pounds                                                                                     |
| Seat Height                   | 19.2 inches                                                                                    |
| Seat Depth                    | 22 inches                                                                                      |
| Seat Back Interior Height     | 28.7 inches                                                                                    |
| Reclining Positions           | Multiple                                                                                       |
| Massage Points                | 8 Vibration Points                                                                             |
| Heat Function                 | Lumbar Heating Point                                                                           |
| USB Port                      | Yes (for low-power devices)                                                                    |
| Cup Holders                   | 2                                                                                              |
| Side Pockets                  | Yes                                                                                            |
| LED Light                     | Yes                                                                                            |
| Included Components           | Assembly Instruction, Heating&Massage Remote Control, Lumbar Pillow, Power Lift Recliner Chair |
| UPC                           | 793288495391                                                                                   |

## CHAIR DIMENSIONS



Image: Detailed dimensions of the Oprisen Power Recliner Chair.

## WARRANTY AND SUPPORT

Oprisen provides a 30-day easy return policy for this product. For any questions, technical assistance, or warranty claims, please contact Oprisen customer support directly through your purchase platform or the contact information provided with your product packaging. Please have your model number (YM1008) and proof of purchase ready when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**