



Manuals.plus /

› Transformers /

› Transformers Studio Series Leader Optimus Primal 106 Action Figure Instruction Manual

Transformers Optimus Primal 106 (F7248ES00)

Transformers Studio Series Leader Optimus Primal 106 Action Figure Instruction Manual

Model: Optimus Primal 106 (F7248ES00)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, transformation, and care of your Transformers Studio Series Leader Optimus Primal 106 action figure. This collectible figure, inspired by *Transformers: Rise of the Beasts*, transforms between robot and gorilla modes.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not suitable for children under 3 years.

This product contains small parts that may pose a choking hazard. Adult supervision is recommended for children aged 8 and up. Keep all packaging materials away from children.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all components are present. The package should contain:

- 1x Optimus Primal 106 Action Figure
- 2x Scimitars (weapons)
- 2x Chain parts (connectable to scimitars)
- 1x Axe (weapon)
- 1x Transwarp Key (accessory)
- 1x Removable Backdrop (for display)
- 1x Instruction Sheet (this document)



Figure 1: Product packaging showing Optimus Primal in gorilla mode.

4. SETUP AND INITIAL INSPECTION

Before beginning play or display, remove the figure and all accessories from their packaging. Inspect all parts for any manufacturing defects or damage. If any issues are found, please refer to the Warranty and Support section.

5. OPERATING INSTRUCTIONS: TRANSFORMATION

The Optimus Primal 106 figure can transform between its robot mode and gorilla mode in 34 steps. Refer to the included detailed instruction sheet for step-by-step visual guidance. Always apply gentle, even pressure when moving joints and panels to avoid damage.

5.1. Robot Mode to Gorilla Mode

Follow the numbered steps on the instruction sheet to carefully fold and articulate the figure from its robot form into its beast (gorilla) mode. Pay close attention to the alignment of panels and the rotation of limbs.

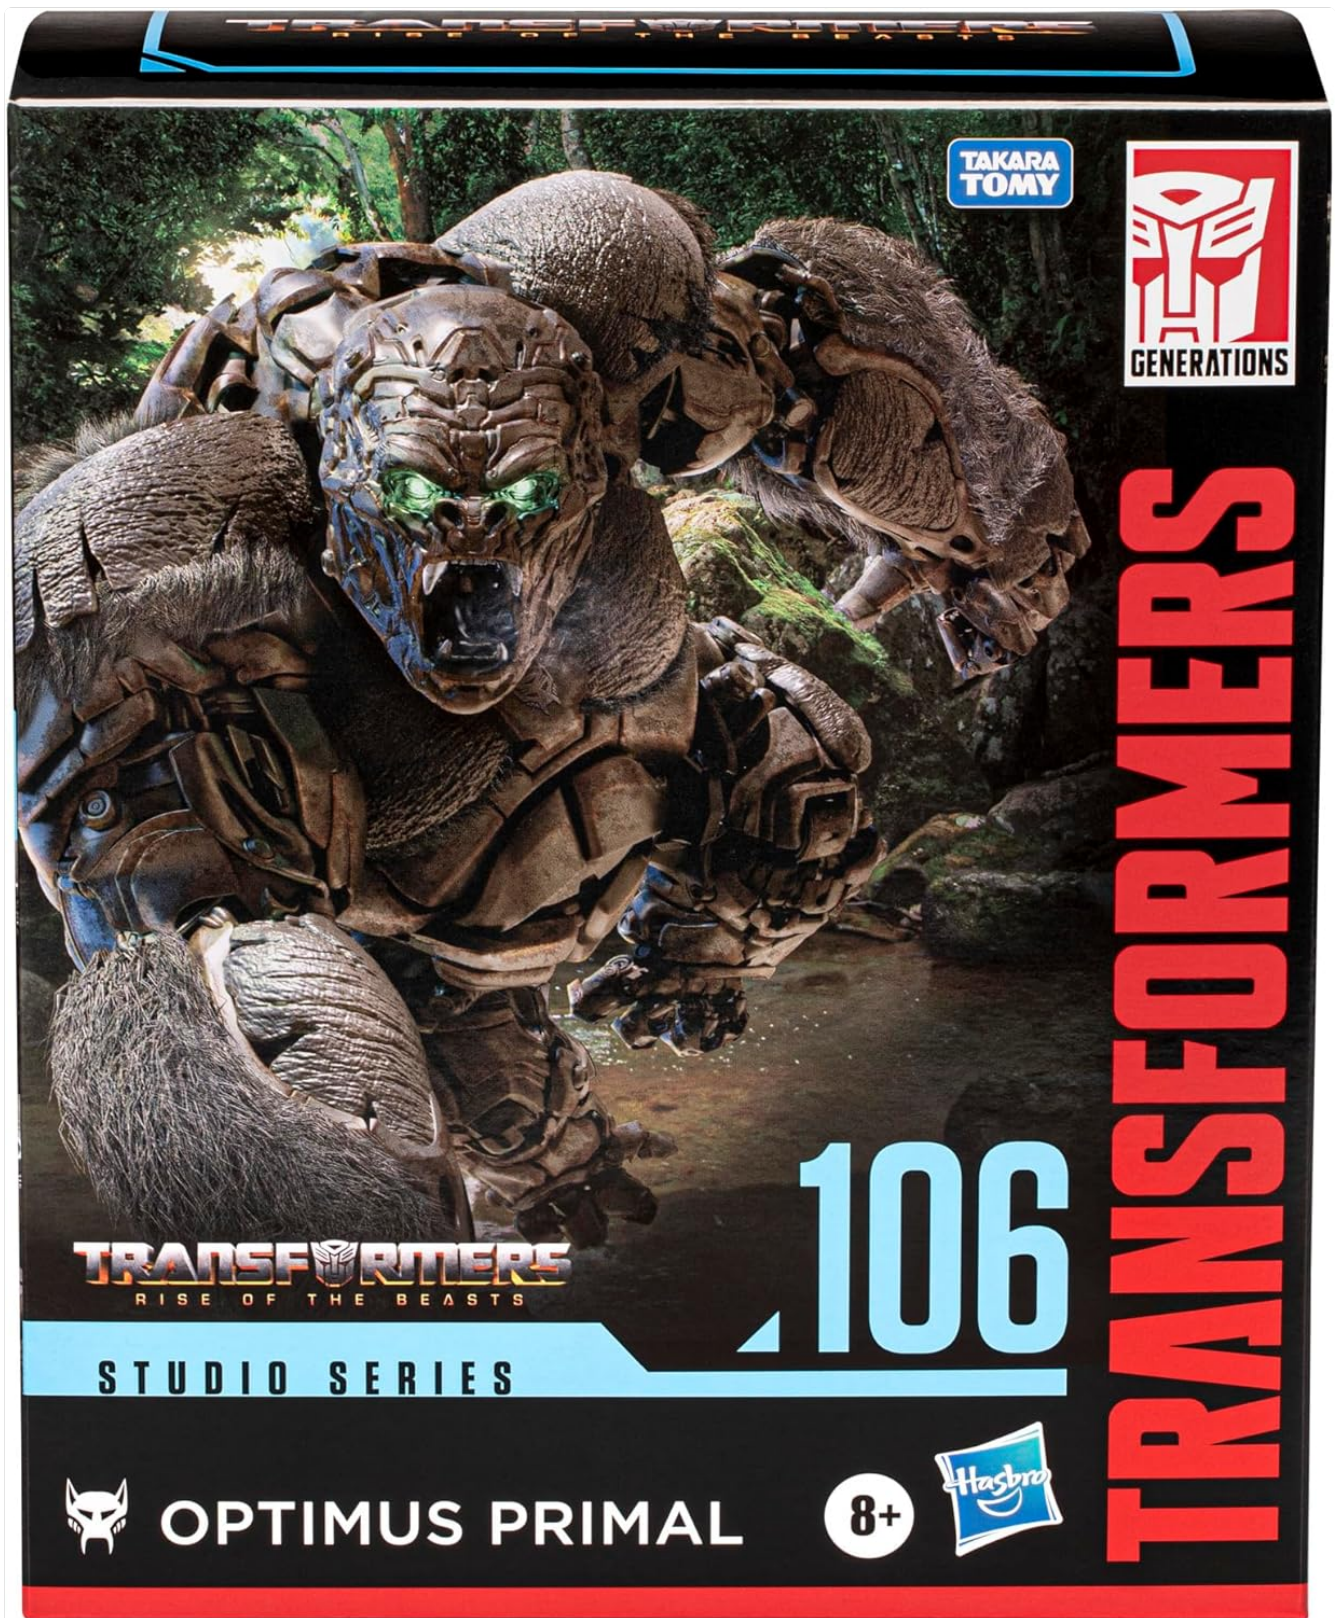


Figure 2: Optimus Primal in Gorilla Mode.

5.2. Gorilla Mode to Robot Mode

To revert the figure to its robot mode, reverse the transformation steps as indicated in the instruction sheet. Ensure all parts click securely into place for a stable robot form.



Figure 3: Optimus Primal in Robot Mode with accessories.

6. ACCESSORIES USAGE

The Optimus Primal figure comes with several accessories to enhance play and display:

- **Scimitars:** These can be held in the figure's hands in robot mode.
- **Chain Parts:** The two chain parts can be connected to the scimitars to create a longer, chained weapon.
- **Axe:** The axe can also be held by the figure in robot mode.
- **Transwarp Key:** This accessory can be attached to the figure in both modes, as indicated in the detailed instruction sheet.

8. MAINTENANCE

To ensure the longevity of your Optimus Primal figure:

- **Cleaning:** Wipe the figure with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the paint or plastic.
- **Storage:** Store the figure away from direct sunlight and extreme temperatures to prevent discoloration or warping of the plastic.
- **Handling:** Handle the figure with care, especially during transformation, to prevent stress on joints and small parts.

9. TROUBLESHOOTING

If you encounter any issues with your Optimus Primal figure, consider the following:

- **Stiff Joints:** If a joint is stiff, try gently wiggling it to loosen it. Do not force movement, as this can cause breakage.
- **Transformation Difficulties:** Refer back to the detailed instruction sheet. Ensure each step is followed precisely. Sometimes a small adjustment can unlock the next step.
- **Loose Parts:** If a part feels loose, check if it is meant to be detachable or if it can be re-secured. For persistent looseness or breakage, refer to the Warranty and Support section.

10. SPECIFICATIONS

Brand	Transformers (Hasbro)
Model Name	Optimus Primal 106
Model Number	F7248ES00
UPC	195166203232
Figure Type	Leader Class Action Figure
Transformation Steps	34 steps (Robot to Gorilla)
Dimensions (L x W x H)	4" x 8.75" x 10.5" (approximate)
Weight	15.2 ounces
Material	Plastic
Recommended Age	8 years and up

11. WARRANTY AND SUPPORT

For warranty information, product support, or to report missing/damaged parts, please contact Hasbro customer service. Refer to the official Hasbro website or the product packaging for the most current contact details.

Website: www.hasbro.com