

TOPINCN Portable Cloth Dryer

TOPINCN Portable Electric Clothes Dryer User Manual

Model: Portable Cloth Dryer

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the appliance. Do not operate with a damaged cord or plug.
- **Water Hazard:** Do not use this appliance near water or in excessively damp environments. Avoid contact with water to prevent electric shock.
- **Heat Warning:** The heating equipment's maximum temperature should not exceed 75°C (167°F). Do not direct the hot air flow directly into eyes or onto skin for prolonged periods.
- **Ventilation:** Ensure adequate ventilation around the dryer during operation. Do not block air inlets or outlets.
- **Suitable Garments:** This dryer is suitable for underwear, socks, tops, fitness wear, baby clothes, and swimsuits. **Do not use for delicate or heat-sensitive garments** that may be damaged by high temperatures.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Do not allow them to play with or operate the dryer.
- **Maintenance:** Unplug the dryer before cleaning or performing any maintenance.
- **Storage:** Store the dryer in a cool, dry place when not in use.





Image: Close-up of the dryer's control panel, showing the power button and a warning label regarding direct exposure to heat and use near water.

2. PRODUCT OVERVIEW

The TOPINCN Portable Electric Clothes Dryer is designed for efficient and convenient drying of small garments. Its compact size and adjustable settings make it ideal for home use or travel.

Key Features:

- **Compact Design:** Measures approximately 7.1 x 3.5 inches, making it highly portable.
- **Adjustable Drying:** Features 4-speed wind control settings.
- **Temperature Range:** Operates within a heating temperature range of 50°C to 75°C (122°F to 167°F).
- **Drying Bag:** Includes a removable and washable drying bag for various small clothing items.
- **Lightweight:** Constructed from durable ABS material, weighing approximately 600g (21.16 oz).





Image: Front view of the TOPINCN Portable Electric Clothes Dryer, showcasing its compact design and integrated handle.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present and undamaged.

- 1 x Portable Clothes Dryer Unit
- 1 x Handle (pre-attached or separate)
- 1 x Drying Bag (removable)

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the dryer unit, handle, and drying bag for any signs of damage. If any part is damaged, do not use the appliance and contact customer support.
3. **Attach Handle (if separate):** If the handle is not pre-attached, securely fasten it to the designated points on the dryer unit.
4. **Prepare Drying Bag:** If using the drying bag, ensure it is clean and properly attached to the dryer's air outlet. The drying bag is designed to contain small garments for efficient drying.
5. **Placement:** Position the dryer in a stable location, away from water sources and flammable materials. Ensure there is sufficient space for air circulation.
6. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure the outlet voltage matches the dryer's specifications.





Image: The portable clothes dryer with the removable drying bag attached, ready for use.

5. OPERATING INSTRUCTIONS

-
1. **Load Garments:** Place the small, suitable garments (e.g., underwear, socks, baby clothes) into the drying bag. Do not overload the bag.
 2. **Power On:** Press the power button (usually indicated by an icon or text like " ") on the dryer unit to turn it on.
 3. **Select Speed/Mode:** The dryer features 4-speed wind control settings. Press the power button repeatedly to cycle through the different speeds. Each press typically advances to the next speed, and a long press may turn the unit off. Refer to the indicator lights for the current setting.
 - **First Gear:** Typically 1 hour drying time.
 - **Second Gear:** Typically 2 hours drying time.
 - **Third Gear:** Typically 3 hours drying time.
 - **Fourth Gear:** Typically 4 hours drying time.

Note: Drying times are approximate and may vary based on garment type, thickness, and humidity.

4. **Drying Process:** The dryer will begin to emit warm air to dry the garments. The heating temperature will be between 50°C and 75°C.
5. **Monitor:** Periodically check the garments to ensure they are drying effectively and not overheating.
6. **Power Off:** Once drying is complete, press and hold the power button to turn off the dryer, or it will automatically shut off after the selected time. Unplug the unit from the power outlet.
7. **Remove Garments:** Carefully remove the dried garments from the drying bag.



Image: The portable dryer in operation, hanging with the drying bag containing small garments, illustrating the drying process.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

- **Cleaning the Unit:**

- Always unplug the dryer before cleaning.
- Wipe the exterior of the dryer unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the internal components.

- **Cleaning the Drying Bag:**

- The drying bag is removable and washable. Hand wash or machine wash on a gentle cycle with mild detergent.
- Allow the drying bag to air dry completely before reattaching it to the dryer unit.

- **Air Vents:** Periodically check the air inlet and outlet vents for any lint or debris accumulation. Gently clean with a soft brush or vacuum cleaner to ensure unobstructed airflow.
- **Storage:** When not in use, store the dryer in a clean, dry place, away from direct sunlight and extreme temperatures.



Image: Bottom view of the dryer, highlighting the air outlet vent which should be kept clear for proper operation.

7. TROUBLESHOOTING

If you encounter any issues with your dryer, refer to the following troubleshooting guide. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in. Power outlet malfunction. Power button not pressed correctly.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Press and hold the power button firmly.
Garments are not drying effectively.	Drying bag overloaded. Incorrect speed setting. Air vents blocked. Garments too thick or wet.	Reduce the amount of garments in the drying bag. Select a higher speed setting for longer drying time. Check and clear any obstructions from the air vents. Ensure garments are wrung out thoroughly before drying.
Unusual noise during operation.	Foreign object in fan. Unit not stable.	Unplug the unit and inspect the air vents for any foreign objects. Ensure the dryer is placed on a stable surface or hung securely.

8. SPECIFICATIONS

Feature	Specification
Brand	TOPINCN
Model Name	Portable Cloth Dryer
Item Type	Portable Clothes Dryer
Dimensions (D x W x H)	Approx. 3.5" x 3.54" x 7.09" (18 x 9 cm)
Weight	Approx. 600g / 21.16 oz
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Orange
Frequency	50-60Hz
Heating Temperature Range	Approx. 50°C - 75°C (122°F - 167°F)
Heat Generation Mode	Corrugated electric furnace wire heating
Speed Settings	4-speed adjustable wind control

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact the retailer.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact TOPINCN customer service through the retailer's platform or the official TOPINCN website.

When contacting support, please have your product model name (Portable Cloth Dryer) and purchase information readily available.

© 2023 TOPINCN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question