

Xiaomi Xiaomi Pad 6 (Model: 23043RP34G)

Xiaomi Pad 6 WiFi Version User Manual

MODEL: 23043RP34G

1. INTRODUCTION

The Xiaomi Pad 6 WiFi Version is a high-performance tablet designed for productivity and entertainment. Featuring a Snapdragon® 870 processor, an 11-inch 144Hz display, and quad speakers with Dolby Atmos, it offers a seamless user experience. This manual provides detailed instructions to help you set up, operate, and maintain your device.



Figure 1: Xiaomi Pad 6 WiFi Version

2. WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- Xiaomi Pad 6 WiFi Version (Graphite Gray)
- USB Type-C Cable
- Fast Car Charger
- Wall Charger & Pen (NOT included, sold separately)

3. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model Name	Xiaomi Pad 6
Model Number	23043RP34G
Display Size	11 inches
Display Resolution	2880 x 1800 pixels (309 ppi)
Refresh Rate	144Hz (7-Stage AdaptiveSync)
Brightness	550 nits (typ)
Processor	Snapdragon 870 Octa-core
RAM	8GB LPDDR5
Storage	256GB UFS 3.1
Operating System	Android 13, MIUI 14 for Pad
Rear Camera	13MP (4k 30fps, 1080p 30fps, 720p 30fps)
Front Camera	8MP (1080p 30fps, 720p 30fps)
Audio	Quad Speakers, Dolby Atmos, Dolby Vision
Battery	8840mAh
Connectivity	WiFi 6, WiFi 5, WiFi 4, 802.11a/b/g, Bluetooth 5.2
Dimensions (H x W x T)	253.95mm x 165.18mm x 6.51mm
Weight	490g

4. SETUP GUIDE

4.1 Initial Charging

Before first use, fully charge your Xiaomi Pad 6 using the provided USB Type-C cable and a compatible charger. The device supports fast charging.

4.2 Power On/Off

To power on, press and hold the Power button located on the top edge of the tablet until the Xiaomi logo appears. To power off, press and hold the Power button, then select 'Power off' from the options that appear on the screen.

4.3 Initial Setup Wizard

Upon first power-on, follow the on-screen instructions to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network, signing in with your Google account, and setting up security features.

5. OPERATING THE XIAOMI PAD 6

5.1 Display and Navigation

The 11-inch 2.8K display offers a vibrant visual experience with a 144Hz refresh rate for smooth scrolling and gaming. Navigate the interface using touch gestures: swipe to scroll, tap to select, pinch to zoom.



Figure 2: Xiaomi Pad 6 Front Display

5.2 Performance and Multitasking

Powered by the Snapdragon 870 processor and 8GB LPDDR5 RAM, the Xiaomi Pad 6 handles demanding applications and multitasking with ease. Utilize MIUI for Pad's multi-tasking tools, such as split-screen and floating windows, to enhance your workflow. You can also control your smartphone from the tablet by signing into your Mi Account and enabling Bluetooth.

5.3 Audio and Visual Experience

Enjoy immersive audio with the quad speakers supporting Dolby Atmos. The device also enhances video watching with Dolby Vision, providing reimagined depth of color. Channel mapping adjusts audio output based on screen orientation.

5.4 Camera Functionality

The Xiaomi Pad 6 features a 13MP rear camera and an 8MP front camera. The front camera includes FocusFrame and a 4-mic array to ensure you are always in focus and clearly heard during video calls.

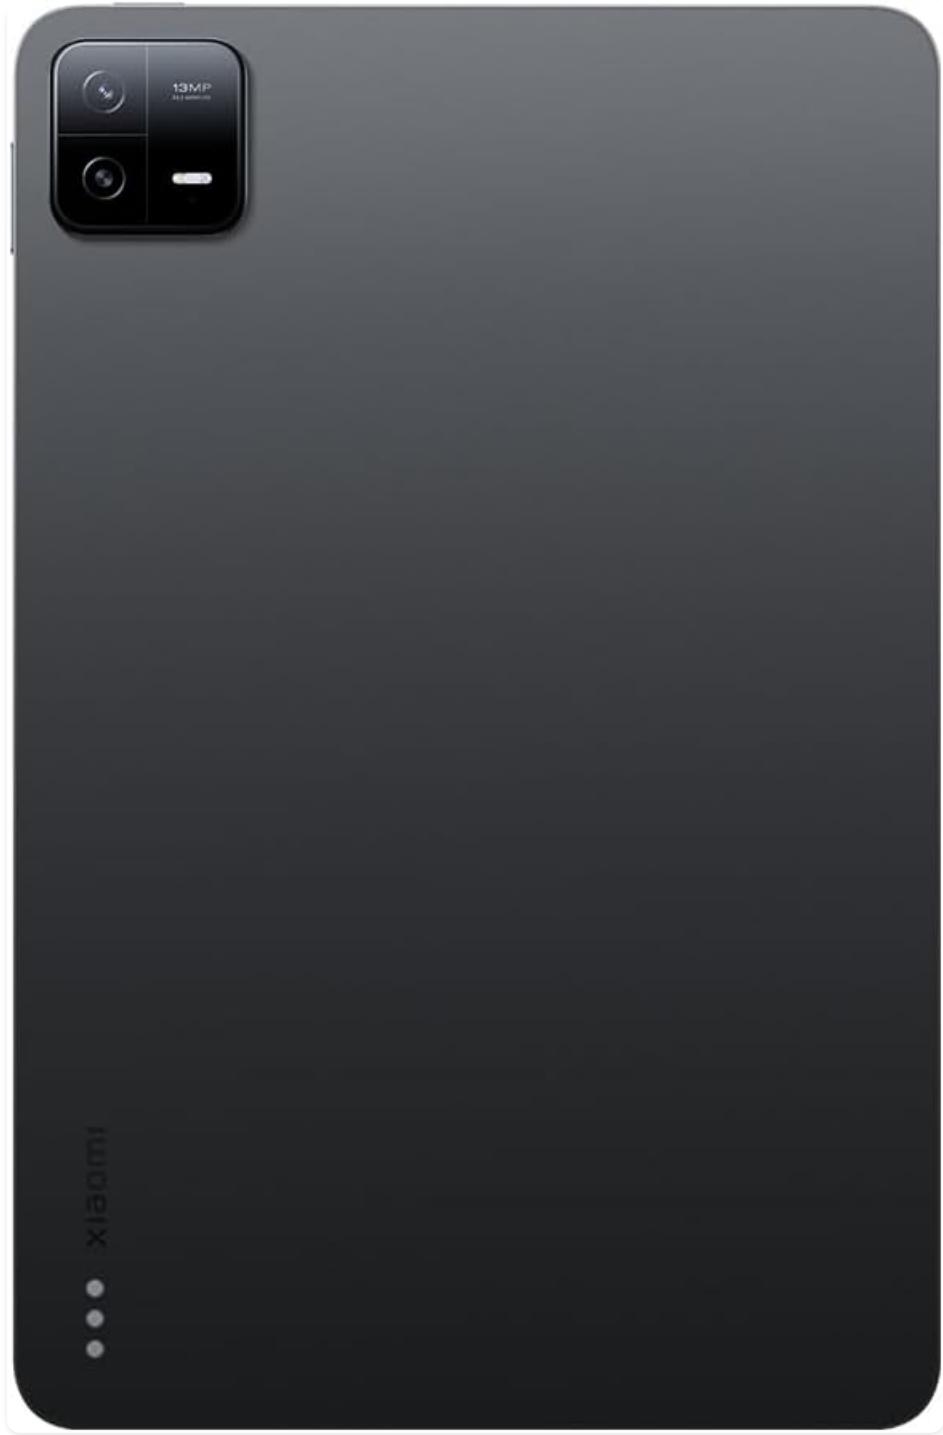


Figure 3: Xiaomi Pad 6 Rear Camera

5.5 Connectivity

The tablet supports WiFi 6, WiFi 5, WiFi 4, and 802.11a/b/g for high-speed internet access. Bluetooth 5.2 ensures stable connections with wireless accessories.

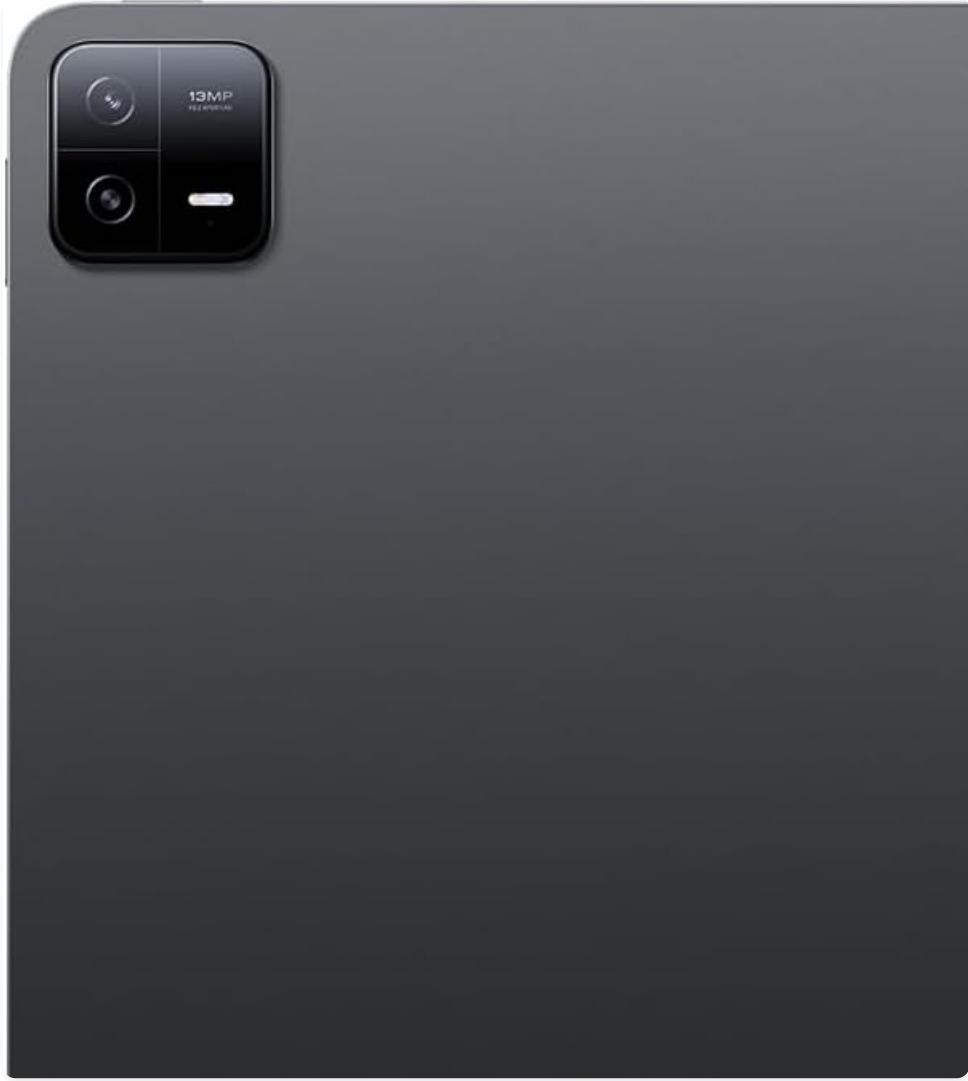


Figure 4: Xiaomi Pad 6 Side View

6. MAINTENANCE

6.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

6.2 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > About tablet > MIUI version** to check for updates.

6.3 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal longevity. Use only the provided or certified chargers and cables.

7. TROUBLESHOOTING

7.1 Device Not Powering On

- Ensure the battery is sufficiently charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for at least 10-15 seconds to perform a forced restart.

7.2 Screen Unresponsive

- Restart the device.
- If the issue persists, perform a factory reset (this will erase all data, so back up important files first). Go to **Settings > About tablet > Factory reset**

7.3 Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in the Quick Settings panel.
- Restart your Wi-Fi router.
- Forget the network and reconnect: **Settings > Wi-Fi > Tap network name > Forget network**

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Xiaomi website or contact Xiaomi customer service. Keep your proof of purchase for warranty claims.