

- Manuals.plus /
- > [VINGLI](#) /
 - > VINGLI 60-Inch Pre-lit Outdoor Christmas Wreath (Model VLWT60) Instruction Manual

VINGLI VLWT60

VINGLI 60-Inch Pre-lit Outdoor Christmas Wreath (Model VLWT60) Instruction Manual

Model: VLWT60 | Brand: VINGLI

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your VINGLI 60-Inch Pre-lit Outdoor Christmas Wreath. Please read this guide thoroughly before installation and use to ensure proper function and longevity of your product. Retain this manual for future reference.

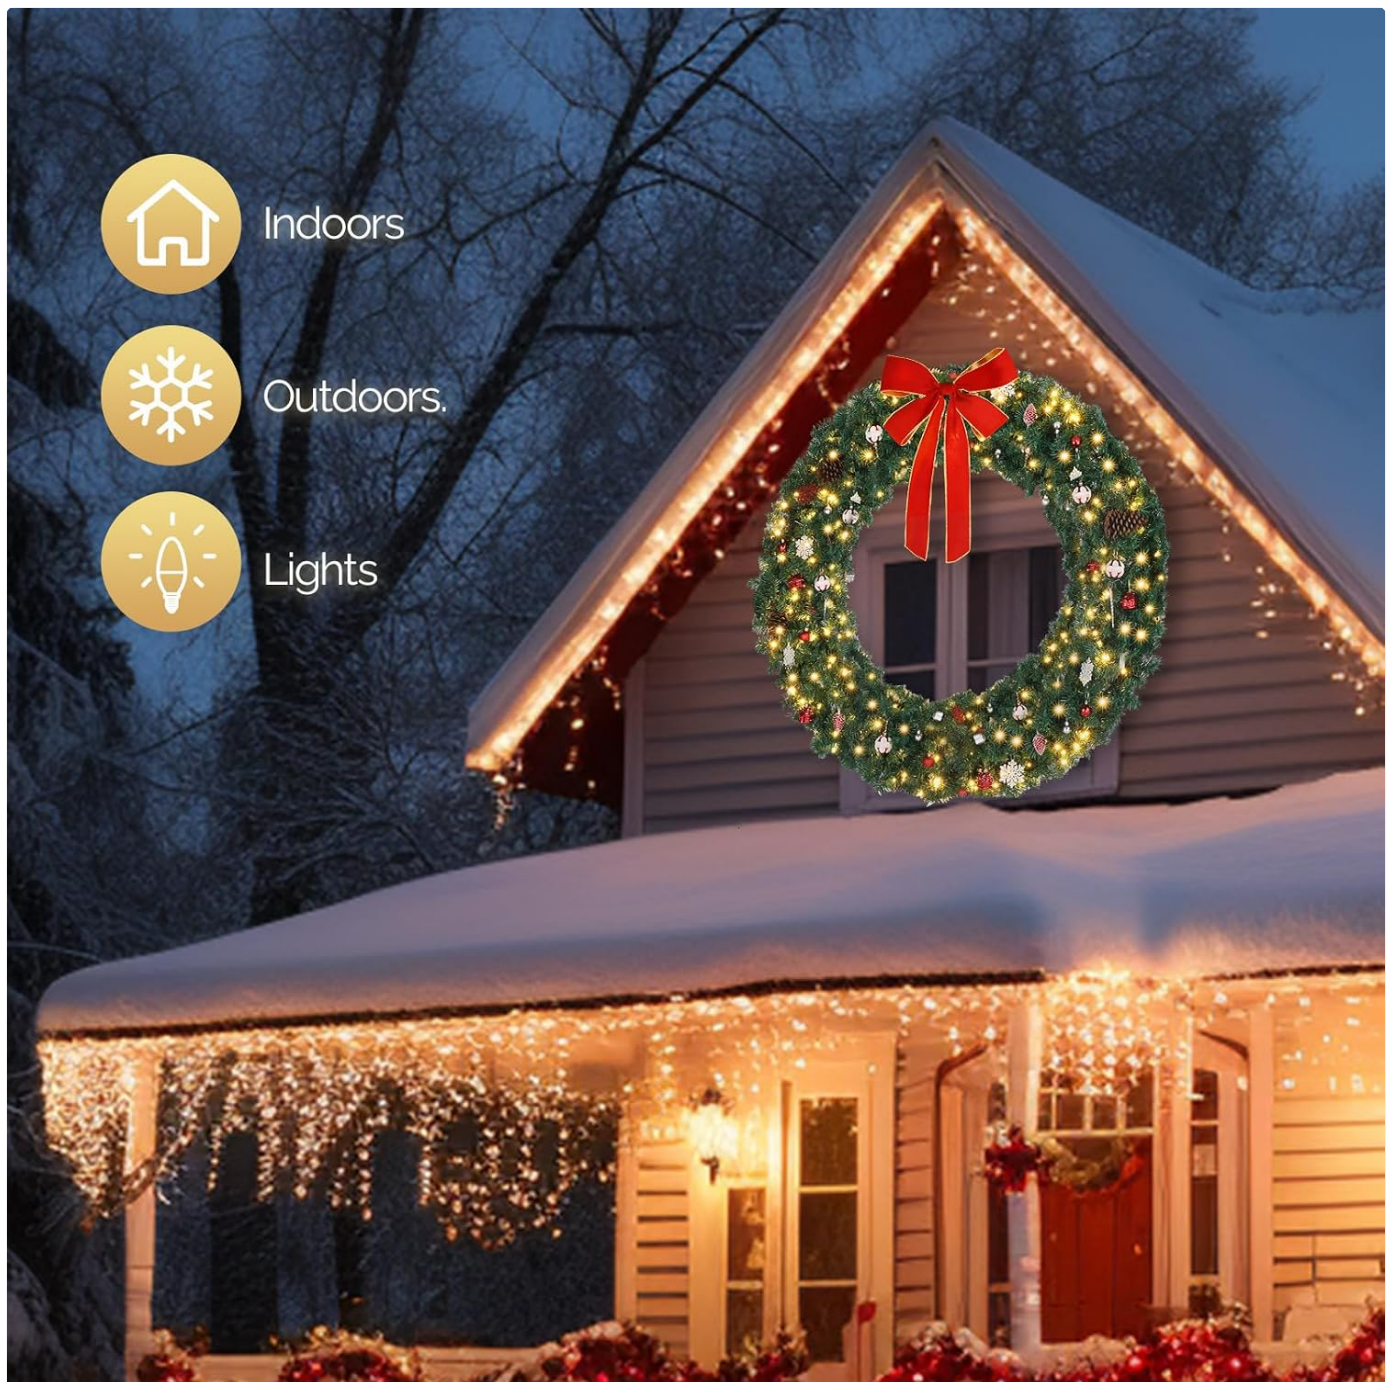


Image: The VINGLI 60-inch pre-lit Christmas wreath adorning the exterior of a house, demonstrating its outdoor application.

PRODUCT FEATURES

- **Pre-Decorated Design:** The 60-inch wreath features 600 artificial PVC branches, pre-decorated with a bow, pine cones, gift boxes, balls, and 220 warm white LED lights.
- **Multi-Modes Lights and Remote Control:** Offers 8 distinct light modes to create various atmospheric effects. A remote control is included for convenient operation.
- **Multi-Scenarios Applicable:** Constructed with durable PVC branches for extended service life, suitable for various outdoor and indoor settings such as windows, garages, balconies, and front doors.
- **Easy-Operated Timing Function:** Includes a 6-hours-on and 18-hours-off timer function to conserve energy and simplify daily operation.
- **Convenient Use & Storage:** Designed for simple assembly in approximately 20 minutes by one person without tools. The wreath can be disassembled for compact storage.

APPLICABLE SCENARIOS



Fireplaces



Window



Balcony



Front Door

Image: Key features of the wreath, highlighting its suitability for indoor and outdoor use, weather resistance, flame-retardant material, and branch tip count.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- VINGLI 60-Inch Pre-lit Christmas Wreath (in two halves)
- Pre-attached LED Lights (220 count, warm white)
- Decorative Elements (bow, pine cones, gift boxes, balls, snowflakes)
- Remote Control
- Power Adapter (Plug-in)
- Assembly Hardware (screws for connecting wreath halves)



Image: The complete VINGLI 60-inch pre-lit Christmas wreath, showcasing its decorations and the included remote control.

SETUP INSTRUCTIONS

Follow these steps to assemble your Christmas wreath:

1. Step A: Connect Wreath Halves

Open the folded two parts of the wreath. Align the connection points and lock them together using the provided screws. Ensure the connection is secure.

2. Step B: Fluff and Decorate

Gently open and spread the branches to achieve a fuller, more natural appearance. Arrange the pre-equipped decorations such as gift boxes, pine cones, and bows as desired. Additional decorations can be added if preferred.

3. Step C: Power On

Plug the power adapter into a suitable outdoor-rated electrical outlet. The lights will illuminate. Use the remote control to select your preferred lighting mode.



INDOOR & OUTDOOR USE

Abundant PVC branches wrapped around a durable iron frame for long-lasting use



Weather Resistant



Flame-retardant



450 Total branch tips

Image: Visual guide illustrating the three-step assembly process: connecting wreath halves, fluffing branches and adding decorations, and plugging in the power.

OPERATING INSTRUCTIONS

Lights and Remote Control

The wreath is equipped with 220 warm white LED lights and comes with a remote control for easy operation.

- **Power On/Off:** Use the power button on the remote control to turn the lights on or off.
- **Light Modes:** The remote control allows you to cycle through 8 different lighting modes. Press the mode button to select your desired effect.
- **Brightness Adjustment:** Use the brightness control buttons (DN+/DW-) on the remote to adjust the intensity of the LED lights.

Timer Function

The integrated timer function simplifies daily operation and helps conserve energy.

- To activate the timer, press the "TIMER" button on the remote control.
- Once activated, the lights will remain on for 6 hours and then automatically turn off for 18 hours. This cycle will repeat daily until the timer is deactivated.
- To deactivate the timer, press the "TIMER" button again or unplug the wreath.



Image: The remote control and power adapter, highlighting the buttons for mode selection, timer, and brightness adjustment.

MAINTENANCE

To ensure your wreath remains in good condition for many seasons:

- **Cleaning:** Gently dust the wreath with a soft cloth or use a low-power vacuum cleaner with a brush attachment. Avoid using harsh chemicals or abrasive cleaners.
- **Light Inspection:** Periodically check the LED lights for any damage. If a light string fails, ensure all connections are secure. Individual LED bulbs are not typically replaceable on pre-lit wreaths; if a section fails, it may indicate a wiring issue.
- **Decoration Security:** Ensure all decorative elements (bows, pine cones, ornaments) are securely attached. Re-secure with floral wire or hot glue if necessary.

STORAGE

Proper storage will help preserve your wreath for future use:

- **Disassembly:** Carefully disconnect the two halves of the wreath. Gently compress the branches to reduce volume.
- **Packaging:** Store the wreath in its original packaging or a dedicated wreath storage bag/box. This protects it from dust and damage.
- **Location:** Store in a cool, dry place away from direct sunlight and extreme temperatures.



Image: The VINGLI wreath being stored in a compact box, demonstrating its convenient storage capability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Power adapter not plugged in. Remote control battery is dead. Loose connection between wreath halves. Power outlet malfunction.	Ensure the power adapter is securely plugged into a working outlet. Replace the remote control battery. Check and secure the connection points of the wreath halves. Test the outlet with another device.
Remote control is unresponsive.	Battery is low or dead. Obstruction between remote and wreath receiver. Remote is too far from the wreath.	Replace the remote control battery. Ensure a clear line of sight to the wreath's receiver. Move closer to the wreath when operating the remote.
Wreath appears sparse.	Branches are not fully fluffed.	Carefully separate and spread out all individual branches and tips to achieve a full appearance.

SPECIFICATIONS

Brand	VINGLI
Model Number	VLWT60
Product Dimensions	59.06"D x 59.06"W x 7.87"H (60 Inch Diameter)
Material	Polyvinyl Chloride (PVC)
Lights	220 LED Warm White Lights
Branches	600 PVC Branches
Mounting Type	Door Mount (or other suitable surfaces)
Indoor/Outdoor Usage	Outdoor

Special Feature	Pre-lit, Remote Control, Timer (6H On/18H Off)
Item Weight	14.52 pounds
UPC	840323584234

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact VINGLI customer service directly. Contact details can typically be found on the manufacturer's website or on the purchase receipt.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0C8SSHDJD>

More documents and user manuals: <https://manuals.plus/>