

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Yabano](#) /

> [Yabano 3-in-1 Sandwich Maker, Waffle Maker, and Panini Press Grill Instruction Manual](#)

## Yabano B0BY23TG57

# Yabano 3-in-1 Sandwich Maker, Waffle Maker, and Panini Press Grill

Model: B0BY23TG57

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Always ensure the appliance is properly assembled before use.

### PRODUCT OVERVIEW

The Yabano 3-in-1 Sandwich Maker is a versatile kitchen appliance designed for preparing

sandwiches, waffles, and grilled items. It features interchangeable non-stick plates for various cooking needs and a compact design for easy storage.

# 800W

## HIGH EFFICIENCY DOUBLE TUBE FEVER

—

This 800-watt sandwich maker makes it heat up faster and makes sandwiches much faster, takes only 3 minutes to reach 392 °F, save your time!



Figure 1: Yabano 3-in-1 Sandwich Maker

## 3 SETS OF DETACHABLE HEATING PLATES



For steak,  
chicken, etc



For waffle



For sandwich

Figure 2: Detachable Cooking Plates (Grill, Waffle, Sandwich)

### BEFORE FIRST USE

1. Unpack the appliance and all accessories. Remove any packaging materials, stickers, or labels.
2. Wipe the exterior of the appliance with a damp cloth.
3. Wash the detachable cooking plates with warm, soapy water. Rinse thoroughly and dry completely before first use.
4. Ensure the appliance is placed on a stable, heat-resistant surface.

## PLATE INSTALLATION AND REMOVAL

The Yabano 3-in-1 Sandwich Maker features easily interchangeable plates for different cooking functions.

1. **To Remove Plates:** Locate the release buttons on the side of the appliance, near where the plates are inserted. Press these buttons firmly to release the plates. Carefully lift the plates out.
2. **To Install Plates:** Align the desired cooking plates with the slots in the appliance. Gently press the plates down until they click securely into place. Ensure both the top and bottom plates are correctly installed before use.



Figure 3: Plate Removal

Video 1: Demonstrates the installation and removal of cooking plates, as well as the use of the grill plates for making grilled cheese sandwiches.

## OPERATING INSTRUCTIONS

Follow these steps for general operation and specific cooking functions.

### General Operation

1. Ensure the desired cooking plates are securely installed.
2. Close the lid and plug the appliance into a 110-120V electrical outlet.
3. The red and green indicator lights will illuminate, indicating the appliance is powered on and preheating.
4. Wait for the green indicator light to turn off, signaling that the appliance has reached the optimal cooking temperature.
5. Carefully open the lid using the cool-touch handle.
6. Place your food item onto the bottom cooking plate. Do not overfill.
7. Close the lid and engage the locking handle. The green light may illuminate again during cooking.
8. Cook for the recommended time or until desired doneness is achieved.
9. Once cooking is complete, carefully open the lid and remove the food using a heat-resistant, non-metallic utensil.
10. Unplug the appliance from the outlet after use and allow it to cool completely before cleaning or storing.

### Making Sandwiches

1. Install the sandwich plates.
2. Preheat the appliance as described in General Operation.
3. Lightly butter the outer sides of your bread slices, if desired.
4. Place one slice of bread on each bottom plate, butter-side down. Add your desired fillings (e.g., cheese, ham).
5. Cover with the second slice of bread, butter-side up.
6. Close the lid and lock the handle. Cook for 3-5 minutes, or until the sandwich is golden brown and the filling is melted.
7. Remove carefully and serve.

# YABANO 3 IN 1 SANDWICH MAKER

ANTI-STICK TOAST PLATE  
(8.46 X 5.71 IN)

Making 2 sandwiches at a time.  
Nonstick plate make it very easy to clean.



Figure 4: Sandwich Plates in Use

Video 2: Demonstrates the process of making sandwiches using the sandwich maker, highlighting its ease of use.

## Making Waffles

1. Install the waffle plates.
2. Preheat the appliance as described in General Operation.
3. Pour approximately 1/2 cup of waffle batter onto the center of each bottom waffle plate. Do not overfill.
4. Close the lid and lock the handle. Cook for 3-5 minutes, or until the waffles are golden brown and crisp.
5. Remove carefully and serve with your favorite toppings.

# PORTABLE SANDWICH MAKER

Yabano sandwich maker has ergonomic handle  
made from heat resistant material  
For easy carrying, comfortable and safe opening experience



Figure 5: Waffle Plates in Use

Video 3: Demonstrates the use of the waffle plates for making waffles.

## Using as a Panini Press / Grill

1. Install the grill plates.
2. Preheat the appliance as described in General Operation.
3. Lightly brush the grill plates with cooking oil or butter, if desired.
4. Place your food item (e.g., panini, chicken breast, vegetables) onto the bottom grill plate.
5. Close the lid and lock the handle. Cook for the desired time, flipping if necessary for even grilling.
6. Remove carefully when cooked to your preference.

# GRIDDLE PLATE

Yabano 3 in 1 waffle maker

Comes with griddle plate  
You can use it to make break-  
fast, lunch and full dinner  
Don't need extra panini press  
grill. Save your place



Figure 6: Grill Plates in Use

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your Yabano 3-in-1 Sandwich Maker.

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. Remove the cooking plates by pressing the release buttons.
3. Wash the detachable non-stick cooking plates with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating.
4. For stubborn food residue, soak the plates in warm, soapy water for a few minutes before cleaning.

5. Rinse the plates thoroughly and dry them completely before re-installing or storing.
6. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water or any other liquid.
7. Do not use sharp objects to clean the plates, as this can scratch the non-stick surface.

## STORAGE

Store the appliance in a dry, clean place. The compact design allows for vertical storage to save counter space. Ensure the handle is locked to keep the unit closed during storage.

## SPECIFICATIONS

| Feature            | Detail   |
|--------------------|--|
| Brand              | Yabano   |
| Model              | B0BY23TG57                                       |
| Special Feature    | Cool Touch, Non-Stick Coating, Removable Surface |
| Color              | Sandwich Maker with Removable Plate              |
| Material           | Stainless Steel                                  |
| Product Dimensions | 10.35"D x 12.2"W x 5.35"H                        |
| Wattage            | 800 watts  |
| Voltage            | 120 Volts  |
| Number of Settings | 3 (Sandwich, Waffle, Grill)                      |
| Item Weight        | 4.8 pounds                                       |

## LIMITED WARRANTY AND SUPPORT

This Yabano product comes with a limited warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included in your product packaging or contact Yabano customer service directly. Keep your purchase receipt as proof of purchase.