

uRage Reaper 330

uRage Reaper 330 RGB Gaming Mouse User Manual

Model: Reaper 330 | Brand: uRage

1. INTRODUCTION

This manual provides detailed instructions for the uRage Reaper 330 RGB Gaming Mouse. It covers initial setup, operational guidance, software customization, maintenance, and troubleshooting to ensure optimal performance and user experience. The Reaper 330 is designed for precise and responsive control, featuring a high-quality optical sensor and programmable buttons.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product packaging:

- 1x uRage Reaper 330 Gaming Mouse
- 1x USB-A to USB-C Detachable Cable (2m length)
- 1x Cable Manager
- 1x User Manual

3. SETUP

Follow these steps to set up your uRage Reaper 330 Gaming Mouse:

1. **Connect the Cable:** Insert the USB-C end of the detachable cable into the port located at the front of the mouse.
2. **Connect to Computer:** Plug the USB-A end of the cable into an available USB port on your computer. The mouse is Plug and Play, meaning it should be recognized automatically by your operating system.
3. **Cable Management:** Use the included cable manager to organize the cable and prevent tangles.
4. **Software Installation (Optional but Recommended):** For advanced customization, including button programming, DPI settings, and RGB lighting effects, download and install the uRage gaming software. Refer

to Section 5 for details.



Image: The uRage Reaper 330 gaming mouse with its detachable USB-C cable, illustrating the connection point.

4. OPERATING INSTRUCTIONS

The uRage Reaper 330 mouse features 9 buttons, including a scroll wheel and two dedicated DPI buttons, designed for ambidextrous use.

4.1 Basic Mouse Functions

- **Left Click:** Primary action.
- **Right Click:** Secondary action, typically opens context menus.
- **Scroll Wheel:** Scrolls content up or down. Can also be clicked for a middle-click function.
- **Side Buttons:** Typically used for 'forward' and 'back' navigation in web browsers or can be programmed for other functions.

4.2 DPI Adjustment

The mouse is equipped with two DPI buttons, usually located behind the scroll wheel. These buttons allow you to cycle through preset DPI (Dots Per Inch) sensitivity levels on the fly, ranging from 100 to 8000 DPI. The current DPI setting may be indicated by the mouse's RGB lighting color, which can be customized via software.

4.3 RGB Lighting

The mouse features customizable RGB lighting with 16.8 million colors. Default lighting effects are active upon connection. Advanced lighting customization is available through the uRage gaming software.



Image: Top-down view of the uRage Reaper 330 gaming mouse, showcasing its active RGB lighting and ergonomic design.

5. SOFTWARE INSTALLATION AND CUSTOMIZATION

To unlock the full potential of your uRage Reaper 330 Gaming Mouse, including button remapping, macro creation, profile management, and advanced RGB lighting control, install the dedicated uRage gaming software.

1. **System Requirements:** Ensure your computer runs on Windows 11 or Windows 10.
2. **Download Software:** Visit the official uRage website (www.urage.com - hypothetical link, please refer to product packaging or official website for actual download link) and navigate to the support or downloads section for the Reaper 330 mouse. Download the latest version of the gaming software.
3. **Installation:** Run the downloaded installer and follow the on-screen instructions.
4. **Customization:** Once installed, launch the software to:
 - Program all 9 buttons with custom functions or macros.
 - Adjust DPI settings and create multiple DPI profiles.
 - Configure RGB lighting effects, colors, and brightness.

- Save different profiles for various games or applications.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your gaming mouse.

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the mouse surface. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.
- **Sensor Care:** Keep the optical sensor on the underside of the mouse clean and free from dust or debris to maintain tracking accuracy. Use a cotton swab if necessary.
- **Cable Care:** The uFlex detachable cable is designed for durability. Avoid sharp bends or excessive pulling. Use the cable manager to prevent tangles during storage or transport.
- **Glide Pads:** The 100% PTFE glide pads are designed for smooth movement. If they become worn, replacement pads may be available from uRage support.

7. TROUBLESHOOTING

If you encounter issues with your uRage Reaper 330 mouse, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mouse not responding	Loose cable connection, faulty USB port, driver issue.	Ensure the USB cable is securely connected to both the mouse and the computer. Try a different USB port. Restart your computer. Check Device Manager for driver issues.
Inaccurate tracking or erratic movement	Dirty optical sensor, unsuitable mouse pad surface.	Clean the optical sensor on the underside of the mouse. Use a clean, uniform mouse pad.
DPI settings not changing	Software conflict, incorrect button assignment.	Ensure the uRage gaming software is installed and running correctly. Check button assignments within the software.
RGB lighting not working or incorrect	Software settings, power issue.	Verify RGB settings in the uRage gaming software. Ensure the mouse is receiving sufficient power from the USB port.
Programmable buttons not working	Software not installed, incorrect button programming.	Install the uRage gaming software. Open the software and ensure buttons are correctly programmed and saved to an active profile.

8. SPECIFICATIONS

- **Model Name:** Reaper 330
- **Model Number:** 00217838
- **Brand:** uRage
- **Color:** Black
- **Sensor:** Pixart PMW3333 Professional Optical Gaming Sensor

- **DPI:** 100 - 8000 DPI
- **Polling Rate:** 1000 Hz (1 ms response time)
- **Buttons:** 9 programmable buttons (including 2 DPI buttons and scroll wheel)
- **Switches:** TTC-GOLDEN (50 million clicks lifespan)
- **Glide Pads:** 100% Polytetrafluoroethylene (PTFE)
- **Cable:** uFlex Detachable USB-A to USB-C, 2m length
- **Acceleration:** 35 G
- **Processor:** 32 Bit ARM
- **RGB Lighting:** 16.8 million colors
- **Compatible Operating Systems:** Windows 11/10
- **Dimensions (H x W x D):** 4 cm x 6.9 cm x 12.5 cm
- **Weight:** 75 g
- **Hand Orientation:** Ambidextrous

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official uRage website. Specific details regarding spare parts availability are not provided.

If you require technical assistance or have questions not covered in this manual, please contact uRage customer support through their official website or the contact information provided in your product packaging.

© 2023 uRage. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question