

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Ukeety](#) /

› [Ukeety Professional Cordless Hair Clippers and Beard Trimmer Kit Instruction Manual](#)

Ukeety B0C8T57QJX

Ukeety Professional Cordless Hair Clippers and Beard Trimmer Kit Instruction Manual

Model: B0C8T57QJX

INTRODUCTION

Thank you for choosing the Ukeety Professional Cordless Hair Clippers and Beard Trimmer Kit. This comprehensive kit is designed to provide a precise and efficient grooming experience for both household and professional use. It includes a professional barber clipper and a detail trimmer, along with a variety of accessories to achieve desired hairstyles and beard trims.

WHAT'S INCLUDED

Your Ukeety Hair Cutting Kit comes with the following items:

- 1x Professional Hair Clipper
- 1x Detail Trimmer
- 13x Guide Combs (various sizes for both clipper and trimmer)
- 1x Blade Oil
- 1x Hair Cutting Cape
- 1x Long Comb
- 1x Cleaning Brush
- 1x User Manual
- 1x Universal USB Cable



Image: Overview of the Ukeety Hair Clipper and Detail Trimmer kit, showcasing the main units, multiple guide combs, blade oil, and charging cable.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge both the hair clipper and the detail trimmer.

- **Hair Clipper:** Requires approximately 3 hours for a full charge, providing up to 270 minutes of runtime.
- **Detail Trimmer:** Requires approximately 2 hours for a full charge, providing up to 210 minutes of runtime.

Use the provided universal USB cable. It is recommended to use a power adapter with an input voltage not higher than 5V 1A (not included) for safe and efficient charging.



Image: Close-up of the Ukeety Hair Clippers, highlighting the LED display for battery status and the charging port.

Attaching Guide Combs

Select the desired guide comb for your preferred hair length. Align the comb with the clipper blade and push firmly until it clicks into place. Ensure it is securely attached before use.

Various Accessories & Adjustable Taper Lever

Adjustable length
from 0.5mm-1.7mm

0

1

2

3

4

5

6

7

8

9

10

11

12

mm

0.5mm

1.0mm

1.7mm

UKEETY[®]
PRO

Multiple Guide Combs for Hair Cutting

1.5 mm
(1/16 in)

4.5 mm
(3/16 in)

3 mm
(1/8 in)

6 mm
(1/4 in)

10 mm
(3/8 in)

13 mm
(1/2 in)

16 mm
(5/8 in)

19 mm
(3/4 in)

22 mm
(7/8 in)

25 mm
(1 in)

Image: The Ukeety Hair Clipper demonstrating the adjustable taper lever and a selection of guide combs for various cutting lengths.

OPERATING INSTRUCTIONS

Powering On/Off

- **Hair Clipper:** Press and hold the power button for 3 seconds to turn on/off. The LED display will show the battery status.
- **Detail Trimmer:** Press and hold the power button to turn on/off.

Adjusting Cutting Length (Hair Clipper)

The hair clipper features an adjustable taper lever, allowing precise control over cutting length from 0.5mm to 1.7mm. Use this in combination with the guide combs for desired styles.

Using the Detail Trimmer

The zero-gapped T-blade of the detail trimmer is ideal for precise trimming, grooming sideburns, necklines, and intricate designs. It provides a close cut of 0.1mm.

Perfect for Fading & Blending



Detail Trimmer
0.1mm (zero gap)



Hair Clipper
0.5/1.0/ 1.5/ 2.0/ 2.5mm



1.5 mm
(1/16 in)



3 mm
(1/8 in)



6 mm
(1/4 in)



10 mm
(3/8 in)



13 mm
(1/2 in)



4.5 mm
(3/16 in)



16 mm
(5/8 in)



19 mm
(3/4 in)



22 mm
(7/8 in)



25 mm
(1 in)



Image: Demonstrates the use of both the hair clipper and detail trimmer for achieving various styles, including fades and precise lines.

MAINTENANCE

Cleaning the Blades

After each use, turn off and unplug the device. Use the provided cleaning brush to remove any hair clippings from the blades. For thorough cleaning, the blades can be detached and rinsed under water (ensure the main body of the clipper/trimmer does not get wet unless specified as waterproof).

Oiling the Blades

To maintain optimal performance and blade sharpness, it is recommended to drip a few drops of the provided blade oil onto the blades after every 3-5 uses. Turn on the clipper/trimmer for a few seconds to distribute the oil evenly, then turn off and wipe off any excess.

SAFETY INFORMATION

- Always use with caution near the face and head.
- Keep out of reach of children. Adult supervision is required for children.
- Always unplug and allow to cool before cleaning.
- Do not ingest or inhale small parts.
- Dispose of used blades responsibly.
- Do not use if the blades are damaged or bent.
- Avoid using the device in wet environments or near water sources to prevent electric shock.

SPECIFICATIONS

Product Dimensions	1.8 x 1 x 6.9 inches
Weight	1.61 Pounds
Batteries	1 Lithium Ion battery required (included)
Charging Time (Hair Clipper)	3 Hours
Runtime (Hair Clipper)	Up to 270 minutes
Charging Time (Detail Trimmer)	2 Hours
Runtime (Detail Trimmer)	Up to 210 minutes
Power Source	Battery Powered
Blade Material	Metal (Self-sharpening)
Motor Speed	6500 RPM
Noise Level	Less than 60 decibels

WARRANTY AND SUPPORT

Ukeety is committed to providing excellent products and service. For any questions or support needs, please refer to the

contact information provided in your product packaging or visit the official Ukeety store online.

- **Return Policy:** This product is eligible for a refund/replacement within 30 days of purchase.
- **Customer Service:** Ukeety offers 24-hour customer service.
- **Warranty:** A 365-day warranty is typically provided. Please check your product documentation for specific details.

