

DOLPHIN PLAYGROUND T PL-628A-1

DOLPHIN PLAYGROUND T Cedar Wooden Swing Set

MODEL: PL-628A-1

1. Introduction

Thank you for choosing the DOLPHIN PLAYGROUND T Cedar Wooden Swing Set. This outdoor playset is designed to provide a fun and engaging experience for children, featuring a variety of activities including a monkey bar, a 2-in-1 outdoor table, a 6-foot wave slide, two belt swings, a climbing wall, and a fort with a telescope. This manual provides essential information for safe assembly, operation, and maintenance of your playset.

2. Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in serious injury.

- **Recommended Age:** Suitable for children aged 3 years and up.
- **Maximum Weight Capacity:** Each swing hanger supports up to 400 pounds.
- **Supervision:** Adult supervision is required at all times when children are using the playset.
- **Installation:** Ensure the playset is installed on level ground and securely anchored to prevent tipping. Each post includes 2 ground anchors for stability.
- **Clearance:** Maintain a minimum 6-foot safety zone around all sides of the playset.
- **Pinch-Free Chains:** The swings are equipped with pinch-free chains to prevent finger injury or hair entanglement.
- **Material Safety:** Constructed from high-quality cedar wood with anti-corrosion and anti-crack functions.

SAFETY SURFACING REQUIREMENTS

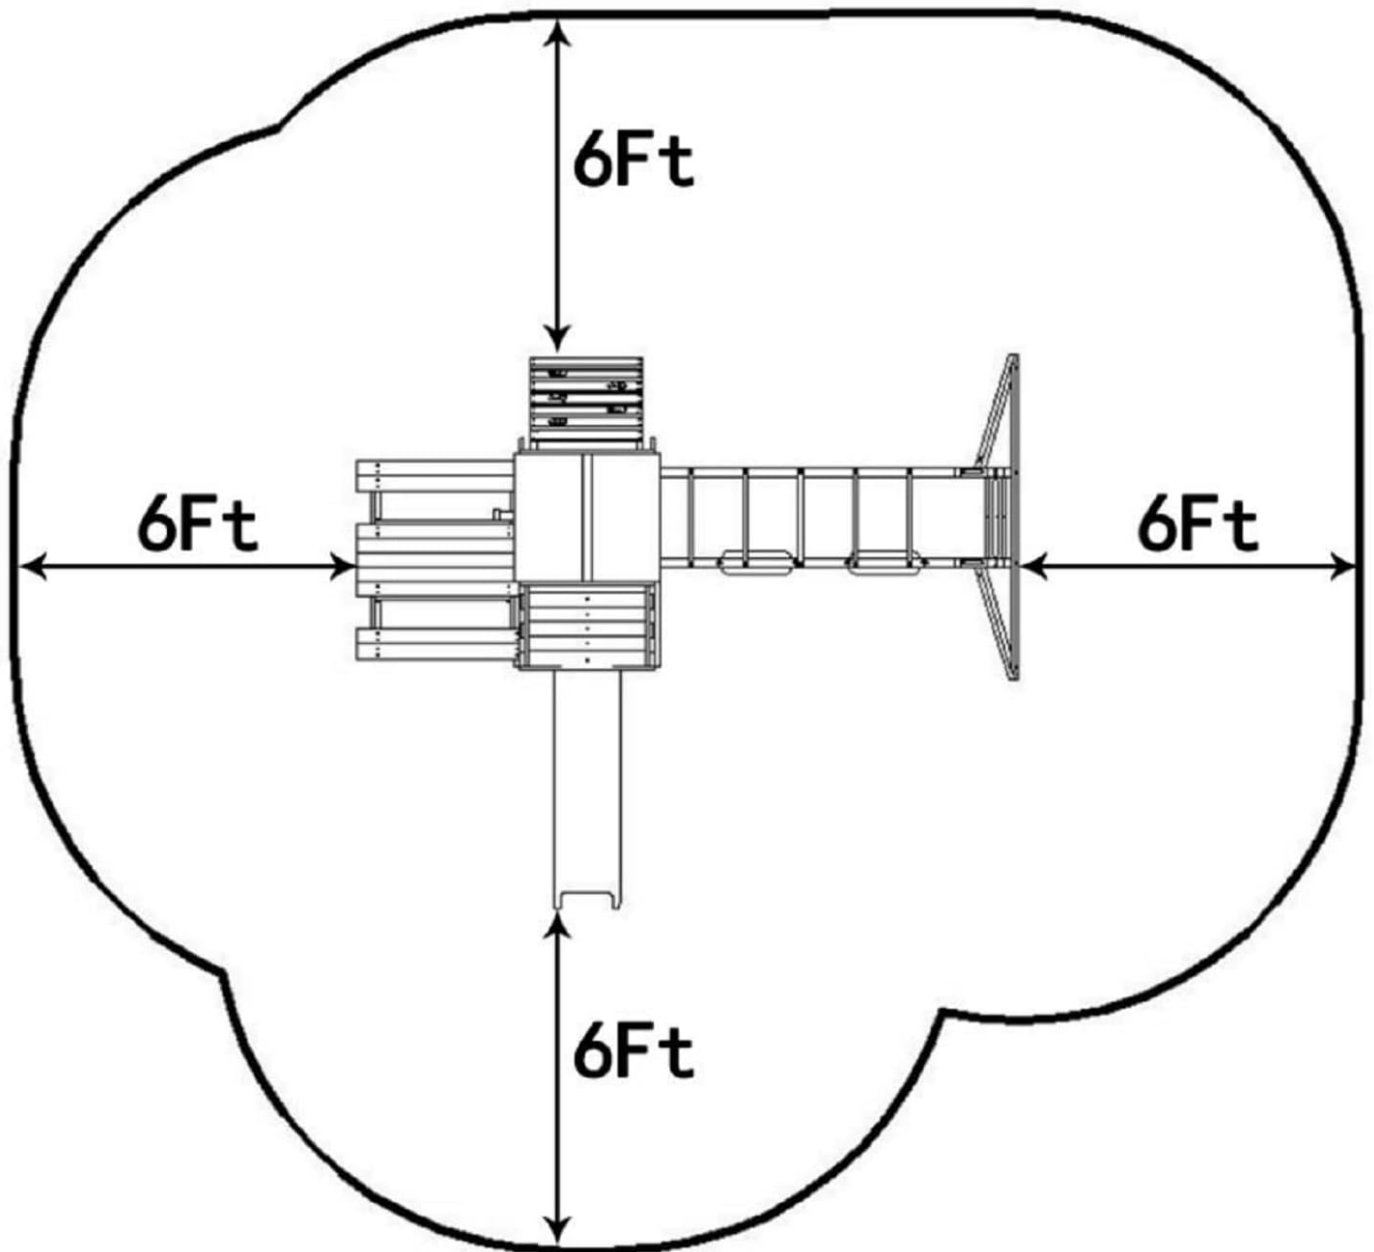


Figure 2.1: Safety Surfacing Requirements. A minimum 6-foot clearance is required around the entire playset for safe use.

3. Components List

Your playset is shipped in 3 boxes. Please ensure all boxes have arrived before beginning assembly. The hardware is organized according to building steps, with an additional 10% spare parts included to prevent missing component issues.

- Wooden components (labeled for easy identification)
- Monkey bar rungs
- 6-foot wave slide
- 2 Belt swings with pinch-free chains
- Climbing wall holds
- Telescope
- 2-in-1 Outdoor Table components
- Hardware packages (organized by step)
- Ground anchors (2 per post)

- Detailed 3D building plan

STEP PACKAGING

- To avoid the confusion when installing, we pack the hardware according to the **BUILDING STEPS**.
- To avoid the parts missing issue, we add **10% MORE SPARE PARTS** into the hardware package.
- To make the assemble procedure easier, detailed **3D BUILDING PLAN** provided with the product.

ENJOY YOUR Backyard Fun.

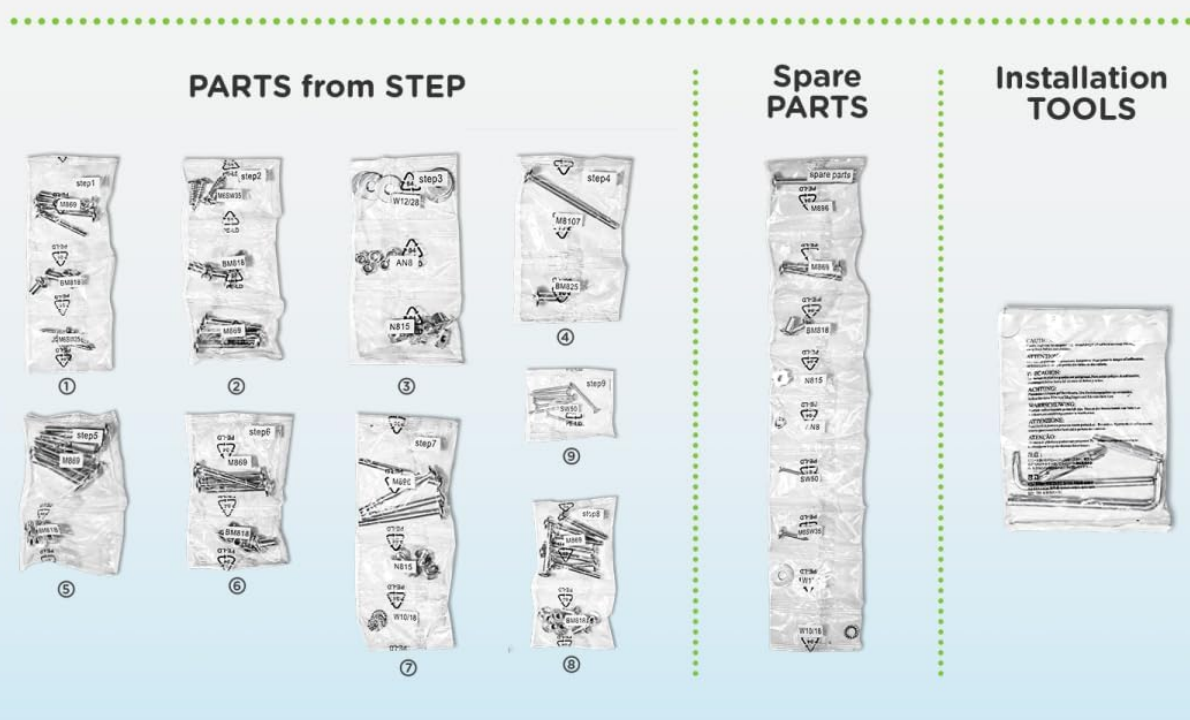


Figure 3.1: Orderly Packaging. Hardware is packed and labeled by building step, with spare parts included.

4. Setup and Assembly

Assembly requires two adults and typically takes 6-8 hours. Follow the detailed 3D building plan provided with the product. All wooden pieces and hardware are clearly marked to simplify the process.

1. **Unpack and Verify:** Unpack all three boxes and lay out the components. Use the provided sheet to verify all pieces are present and accounted for. Each wooden piece is labeled (e.g., B2) and hardware is packaged by step.
2. **Follow 3D Plan:** Refer to the detailed 3D building plan for step-by-step instructions. Pay close attention to the orientation of pieces as shown in the diagrams.
3. **Hardware Organization:** Use the hardware packages corresponding to each step. Extra screws are provided.
4. **Drilling:** When using a drill, apply careful and slow pressure to avoid cracking the wood. Tighten screws securely once pieces are aligned.
5. **Swing Attachments:** For swing attachments, place the metal piece at the top of the hole and push it in. Screw the swing attachment under the hole, ensuring the spacer is in place. Use a metal rod with a bolt opening to assist in fitting, then drill

the nut onto the top while holding it.

6. **Secure Anchors:** Once the playset is fully assembled, install the ground anchors at the base of each post to ensure stability.

Video 4.1: Assembly Overview. This video highlights the ease of assembly with clearly labeled parts and organized hardware.

5. Operating Instructions

The DOLPHIN PLAYGROUND T Swing Set offers multiple activities for children:

- **Monkey Bars:** Children can use the monkey bars to develop upper body strength and improve balance.
- **2-in-1 Outdoor Table:** This versatile table can be used for picnics, crafts, or as a sand table when the cover is opened.
- **6-Foot Wave Slide:** Provides a fun and thrilling descent from the playset's platform.
- **Belt Swings:** Two belt swings allow children to enjoy swinging. The chains are coated for safety.
- **Climbing Wall:** Features colorful holds for children to climb, enhancing coordination and strength.
- **Fort with Telescope:** The elevated fort provides a lookout point with a telescope for imaginative play.



Figure 5.1: Overview of the Playset.



Share & Create Together ★

Figure 5.2: The 2-in-1 Outdoor Table. This table can be used for various activities, including a sand table.



Figure 5.3: Playset Features in Use. Highlights the wave slide, rock wall, and telescope.

Video 5.1: Product Overview. A brief video showcasing the various features of the Cedar Wooden Swing Set.

Video 5.2: Detailed Product Tour. An in-depth look at the playset's components and design.

6. Maintenance

Regular maintenance will ensure the longevity and safety of your playset.

- **Wood Care:** The playset is made of high-quality cedar, which is naturally waterproof, anti-corrosion, and anti-crack. Periodically inspect the wood for any signs of wear, splintering, or damage. Sand down any rough spots and apply a wood sealant annually to maintain its condition and protect against weathering.
- **Hardware Check:** Regularly check all bolts, nuts, and screws for tightness. Tighten as needed to ensure structural integrity.
- **Swing Chains:** Inspect swing chains for any signs of rust or wear. The plastic coating helps protect them, but ensure it remains intact.
- **Ground Anchors:** Verify that ground anchors remain securely in place, especially after heavy winds or rain.
- **Cleaning:** Clean the playset with mild soap and water. Avoid harsh chemicals that could damage the wood or plastic.

components.

7. Troubleshooting

- **Missing Parts:** If you find any parts missing during assembly, please contact customer support. The packaging includes 10% more spare parts to mitigate this issue.
- **Difficulty Aligning Wood Pieces:** Some wood pieces may appear slightly warped. Ensure you are following the 3D building plan precisely. If alignment issues persist, contact customer support.
- **Wood Cracking:** When drilling, apply gentle and steady pressure. Excessive force can cause the cedar wood to crack. If minor cracks occur, they can often be repaired with wood glue and clamps.
- **Playset Instability:** Ensure all ground anchors are properly installed and secured. Verify all bolts and nuts are tightened.

8. Specifications

Feature	Detail
Brand	DOLPHIN PLAYGROUND T
Model Number	PL-628A-1
Material	Cedar Wood
Product Dimensions (D x W x H)	131.5"D x 152"W x 108.6"H
Maximum Weight Recommendation	440 Pounds (per swing hanger)
Recommended Age	3 Years and Up
Assembly Required	Yes
UPC	740907184358



Figure 8.1: Product Dimensions and Key Specifications.

9. Warranty and Support

For any questions, concerns, or assistance with missing parts, please contact DOLPHIN PLAYGROUND T customer support. Refer to your purchase documentation for specific warranty details.

Contact Information: Please refer to the contact details provided with your product packaging or visit the official DOLPHIN PLAYGROUND T store on Amazon: [DOLPHIN PLAYGROUND T Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C8T7R87W>

More documents and user manuals: <https://manuals.plus/>