

[Manuals.plus](#) /

› [Hesitroad](#) /

› Hesitroad Cordless Power Pressure Washer User Manual

Hesitroad Car Washing Machine

Hesitroad Cordless Power Pressure Washer User Manual

Model: Car Washing Machine

1. PRODUCT OVERVIEW

The Hesitroad Cordless Power Pressure Washer is a versatile, portable, and lightweight cleaning device, enabling the effortless removal of various stains. It facilitates efficient and convenient cleaning of cars, gardens, and outdoor equipment, thus promoting unrestricted cleaning. Equipped with an adjustable nozzle, it allows you to rotate the front mouth to adjust the amount and shape of different water. It also features a special foam spray pot for rich, uniform, and delicate foam application, making car washing easier. Powered by a 21V rechargeable battery, it provides sufficient power for outdoor cleaning.



Figure 1.1: Complete set of the Hesitroad Cordless Power Pressure Washer, including the main unit, two batteries, charger, water pipe, accessories bag, user manual, and toolbox.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Car Washing Machine (Main Unit)
- 2 x Batteries (21V, 1500mAh Lithium)
- 1 x Charger
- 1 x Water Pipe
- 1 x Accessories Bag (includes foam spray pot, filter, etc.)
- 1 x User Manual (this document)
- 1 x Tool box
- 1 x Bucket



Figure 2.1: Overview of all components included in the package, showing the pressure washer, batteries, charger, water pipe, and various accessories.

3. SAFETY INSTRUCTIONS

Read all safety warnings and instructions before operating the device. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

3.1 Battery Safety

- Before first use, ensure the battery is fully charged.
- Store batteries in a cool, dry place.
- Do not disassemble, squeeze, or impact the battery.
- Do not immerse the battery in water.
- Keep batteries away from children.

3.2 General Safety

- Always wear appropriate personal protective equipment, such as safety glasses, when operating the pressure

washer.

- Do not direct the water spray at people, animals, or electrical equipment.
- Ensure all connections are secure before operation to prevent leaks.
- Do not operate the pressure washer if any part is damaged.

4. SETUP

Follow these steps to set up your pressure washer for first use:

1. **Charge the Battery:** Connect the charger to a power outlet and insert the battery. Ensure the battery is fully charged before initial use.
2. **Attach the Battery:** Slide the charged battery into the battery slot on the main unit until it clicks into place.
3. **Connect the Water Pipe:** Attach one end of the water pipe to the inlet port of the pressure washer. Ensure a secure connection.
4. **Insert Water Filter:** If using a bucket or other water source, install the filter onto the other end of the water pipe. This helps remove silt and impurities from the water.



Figure 4.1: The water filter (left) should be installed on the hose to prevent impurities from entering the pump. The foam bottle (right) is used for applying cleaning solutions.

5. **Prepare Water Source:** Place the filtered end of the water pipe into a bucket of water, rivulet, or other suitable water source.
6. **Attach Nozzle:** Select the desired nozzle and attach it to the front of the pressure washer wand. The adjustable nozzle allows for different spray patterns.



Figure 4.2: The nozzle can be rotated to adjust the water spray from a concentrated jet to a wider fan pattern, offering versatility for various cleaning tasks.

7. **Optional: Attach Foam Spray Pot:** For foam cleaning, fill the foam spray pot with appropriate cleaning solution and attach it to the pressure washer.

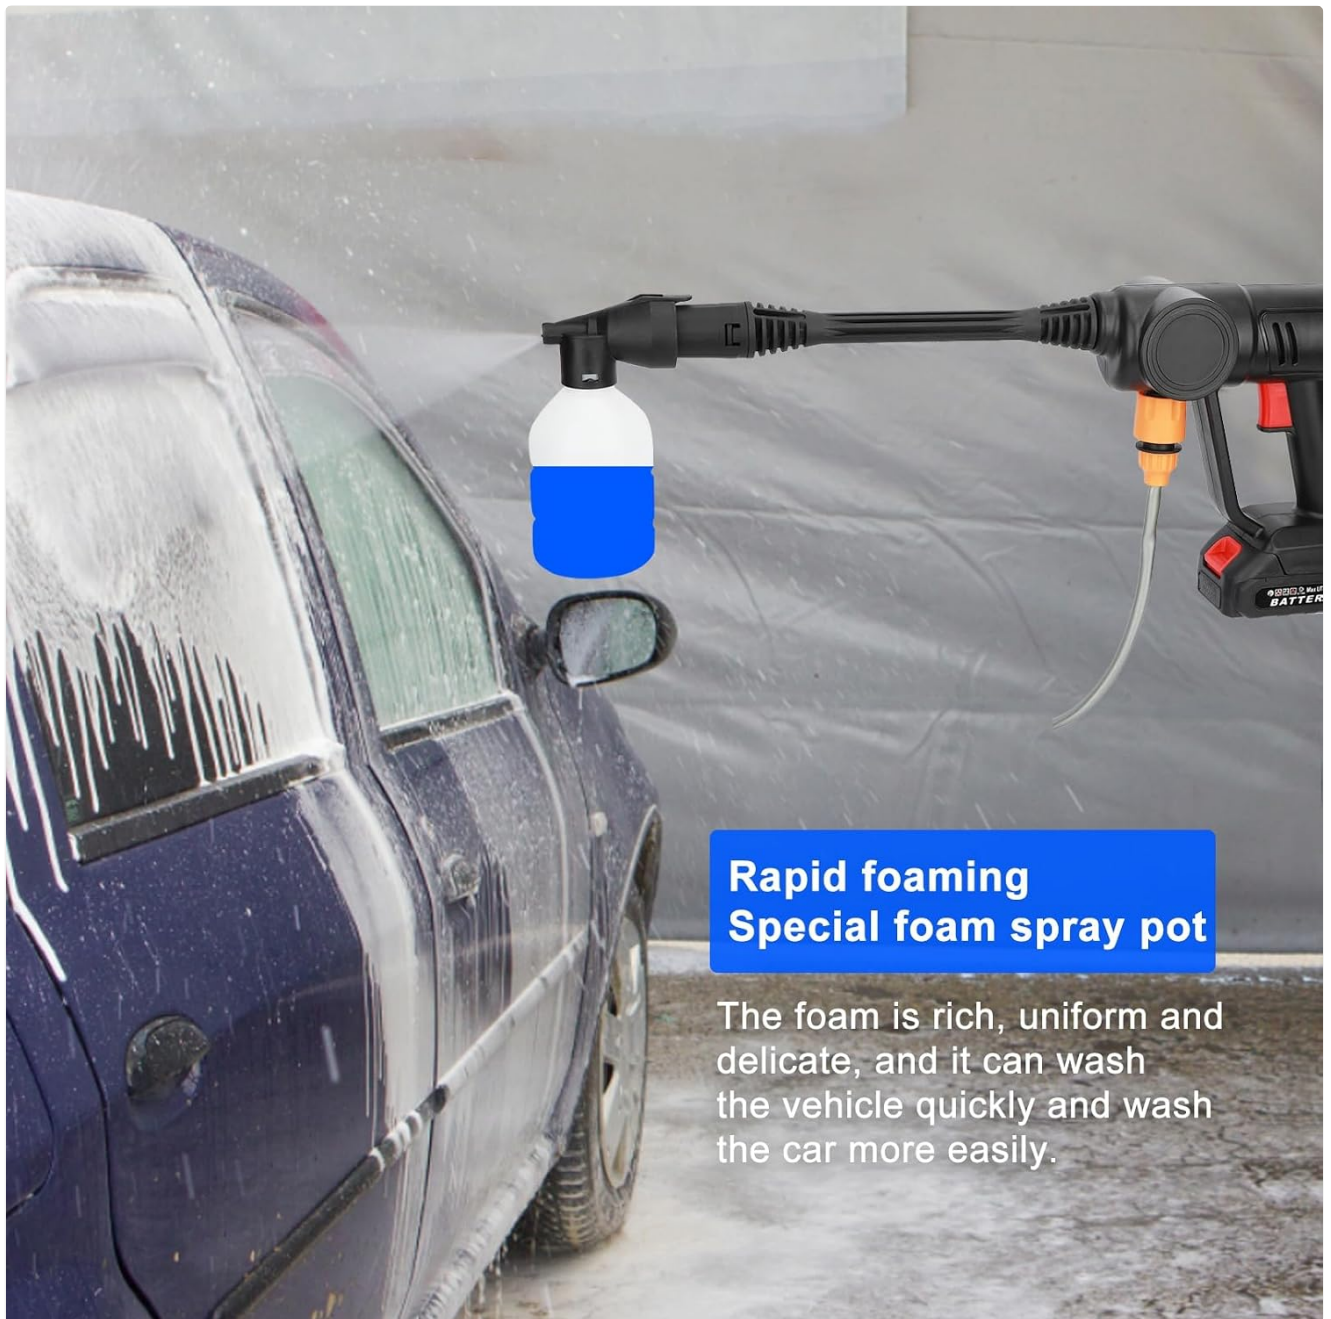


Figure 4.3: The foam spray pot allows for rapid and uniform application of foam, making car washing and other cleaning tasks easier and more effective.

5. OPERATING INSTRUCTIONS

Once set up, operate the pressure washer as follows:

1. **Prime the Pump:** Before starting, ensure the water pipe is submerged in water. Squeeze the trigger for a few seconds to allow water to flow through and prime the pump.
2. **Start Cleaning:** Press and hold the trigger to activate the pressure washer. Release the trigger to stop the water flow.
3. **Adjust Spray Pattern:** Rotate the front nozzle to change the spray pattern as needed for different cleaning tasks. A narrow jet is suitable for stubborn dirt, while a wider fan is better for general rinsing.
4. **Apply Foam (Optional):** If using the foam spray pot, ensure it is properly attached and filled. The pressure washer will automatically mix the solution with water to create foam.

Your browser does not support the video tag.

Video 5.1: Demonstration of the Hesitroad Cordless Power Pressure Washer in operation, showcasing its powerful spray for various cleaning applications.

5.1 Application Scenarios

The pressure washer is suitable for a variety of cleaning tasks:

- **Car Washing:** Effectively remove dirt and grime from vehicles.
- **Garden Cleaning:** Clean garden tools, furniture, and pathways.
- **Floor and Patio Cleaning:** Ideal for cleaning hard surfaces like driveways, patios, and garage floors.
- **Window Cleaning:** Use a wide spray pattern for gentle cleaning of windows.
- **Watering Plants:** With a gentle spray, it can be used for watering plants.
- **Pet Bathing:** A gentle setting can be used for bathing pets.

Multiple Application Scenarios



Wash the car



Water the flowers



Irrigation



Wash the floor

Figure 5.1: Examples of common uses for the pressure washer, including vehicle cleaning, garden maintenance, and hard surface washing.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Cleaning:** After each use, rinse the pressure washer and accessories with clean water to remove any detergent or debris.
- **Storage:** Store the pressure washer and batteries in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** Fully charge the batteries before long-term storage. Recharge them every 3-6 months if not in use to maintain battery health.
- **Filter Cleaning:** Regularly inspect and clean the water filter to ensure unrestricted water flow and prevent pump damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow or weak pressure	Battery not charged	Charge the battery fully.
	Water pipe not submerged or kinked	Ensure water pipe is fully submerged and free of kinks.
	Water filter clogged	Clean the water filter.
	Air in the pump	Prime the pump by squeezing the trigger until water flows steadily.
Unit does not turn on	Battery not properly inserted	Re-insert battery firmly.
	Battery discharged	Charge the battery.
Foam spray pot not producing foam	Incorrect solution concentration	Adjust detergent to water ratio.
	Foam pot clogged	Clean the foam pot and nozzle thoroughly.

8. SPECIFICATIONS

Feature	Specification
Brand	Hesitroad
Model	Car Washing Machine
Power Source	Battery Powered
Battery Voltage	21V
Battery Capacity	1500mAh
Rated Power	180W
Motor Speed	21000 RPM
Water Pressure	1.8 bar (approx. 26.1 PSI)
Water Outlet Per Minute	3 Liters
Item Weight	2501 Grams (approx. 5.51 lbs)

Feature	Specification
Dimensions (L x W x H)	45cm x 25cm x 10cm (approx. 17.72" x 9.84" x 3.94")
GTIN	07712757284871

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Hesitroad website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Hesitroad. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question