

[Manuals.plus](#) /

› [Zunate](#) /

› Zunate HL156D Dual Screen Laptop User Manual

Zunate HL156D

Zunate HL156D Dual Screen Laptop User Manual

Model: HL156D

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Zunate HL156D dual-screen laptop. Please read this guide thoroughly before using the device to ensure proper function and longevity.



Figure 1: Zunate HL156D Dual Screen Laptop. This image shows the laptop in an open position, highlighting its dual-screen design.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Zunate HL156D Dual Screen Laptop (with integrated battery)
- Plug-in HD Camera
- Power Adapter (EU Plug)
- User Manual (this document)

SETUP

1. Initial Charging

Before first use, connect the laptop to the power adapter and charge it fully. The charging indicator light will show the charging status.



Figure 2: Connecting the power adapter to the laptop. Ensure the adapter is securely plugged into both the laptop and a power outlet.

2. Attaching the Camera

The 1.9MP HD camera is a plug-in magnetic unit. Align the camera with the designated port on the top edge of the main display and gently attach it. It will snap into place magnetically.



Figure 3: Attaching the external HD camera. The camera connects magnetically to the top bezel of the main screen.

3. Powering On

Press and hold the power button located on the side of the laptop until the screen illuminates. The laptop will boot into Windows 11.

4. Initial Windows Setup

Follow the on-screen prompts to complete the initial Windows 11 setup, including language selection, network connection, and user account creation.

OPERATING INSTRUCTIONS

1. Main Display (15.6-inch)

The primary display is a 15.6-inch IPS 2K screen with a resolution of 1920x1080. It offers a wide color gamut and a 93% screen-to-body ratio for an immersive viewing experience.



Figure 4: The main 15.6-inch IPS display. This screen is ideal for general computing tasks and media consumption.

2. Secondary Touchscreen (7-inch)

The secondary 7-inch IPS display features TP touchscreen functionality with a resolution of 1920x1200. It supports handwriting input and can be used for extended desktop, mirroring, or as a dedicated control panel.



Figure 5: The 7-inch secondary touchscreen in use, demonstrating stylus input. This screen enhances multitasking and interactive applications.

3. Keyboard and Touchpad

The laptop is equipped with an RGB seven-color backlit keyboard with large round keycaps. The integrated touchpad supports multi-touch gestures for navigation.



Figure 6: Close-up of the RGB backlit keyboard and touchpad. The backlighting can be adjusted for various lighting conditions.

4. Fingerprint Recognition

For enhanced security, the laptop includes fingerprint recognition. Set up your fingerprint in Windows Settings for quick and secure login.

5. Connectivity

- **Wi-Fi:** Supports dual-band 2.4G/5G Wi-Fi (802.11b/g/n) for high-speed wireless internet access.
- **Bluetooth:** Integrated BT4.2 for connecting wireless peripherals.
- **USB Ports:** Two USB 3.0 ports for high-speed data transfer.
- **Type-C Port:** One Type-C port for versatile connectivity.
- **HDMI:** One HD Multimedia Interface for connecting to external displays.
- **Audio Jack:** One 3.5mm standard headphone jack.
- **Micro SD Card Slot:** For expanding storage or transferring data from memory cards.

MAINTENANCE

1. Cleaning

- Use a soft, lint-free cloth to clean the screens. For stubborn marks, dampen the cloth slightly with water or a screen-safe cleaner.
- Wipe the keyboard and chassis with a dry or slightly damp cloth. Avoid excessive moisture.
- Do not use harsh chemicals, abrasives, or solvents.

2. Battery Care

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods.
- Do not expose the battery to extreme temperatures.

3. Software Updates

Regularly check for and install Windows updates to ensure optimal performance and security. Go to *Settings > Windows Update* to manage updates.

TROUBLESHOOTING

Laptop Does Not Power On

- Ensure the power adapter is securely connected to both the laptop and a working power outlet.
- Verify the power outlet is functional by plugging in another device.
- Allow the laptop to charge for at least 30 minutes before attempting to power on again.

No Display on Main Screen

- Check if the laptop is powered on (power indicator light).

- Try connecting an external monitor via the HDMI port to see if there is output.
- Perform a hard reset by holding the power button for 10-15 seconds until the laptop shuts down, then restart.

Secondary Screen Not Responding

- Ensure the secondary screen is enabled in Windows Display Settings.
- Restart the laptop.
- Check for any driver updates for display adapters.

Wi-Fi Connectivity Issues

- Verify that Wi-Fi is enabled in Windows Settings.
- Restart your router and modem.
- Ensure you are within range of your Wi-Fi network.
- Check for updated Wi-Fi drivers.

SPECIFICATIONS

Feature	Description
Model	HL156D
Main Display	15.6-inch IPS 2K, 1920x1080 resolution
Secondary Display	7-inch IPS TP Touchscreen, 1920x1200 resolution
Processor	Intel Celeron N5105 Quad Core, 2.0GHz (up to 2.9GHz RWD)
RAM	16GB DDR4 SDRAM
Storage	512GB SSD
Operating System	Windows 11
Battery	7.6V/4500mAh Polymer Lithium (integrated)
Camera	1.9MP HD Plug-in Magnetic Camera
Wireless Connectivity	Dual-band Wi-Fi (2.4G/5G 802.11b/g/n), Bluetooth 4.2
Ports	2x USB 3.0, 1x Type-C, 1x HDMI, 1x 3.5mm Audio Jack, 1x Micro SD Card Slot
Keyboard	RGB Seven-Color Backlit Keyboard
Cooling System	Copper, Tubular Fan
Power Adapter	12V-2.5A, 100-240V 50/60Hz 0.8A

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the

official Zunate website. Keep your proof of purchase for warranty claims.

Contact Information: Please refer to your purchase receipt or the product packaging for specific customer service contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question