

[Manuals.plus](#) /

> [CAMECO](#) /

> CAMECO Electric Heated Foot Warmer Instruction Manual (Model CM-ZF-FR-A27-999)

CAMECO CM-ZF-FR-A27-999

CAMECO Electric Heated Foot Warmer Instruction Manual

Model: CM-ZF-FR-A27-999

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your CAMECO Electric Heated Foot Warmer. Failure to follow these instructions may result in electric shock, fire, or injury.

- Always use the foot warmer on a flat, stable surface.
- Do not use while sleeping or unattended.
- Keep the product away from water. Do not immerse the controller or power cord in water.
- Allow the product to cool completely before washing.
- Do not use if the product, power cord, or controller appears damaged.
- Keep out of reach of children and pets.
- Do not use pins or other metallic objects with this appliance.
- Do not use if the skin is sensitive to heat or if you have poor circulation, unless advised by a medical professional.
- Consult a physician before use if you have any medical conditions, including neuropathy, diabetes, or are pregnant.

2. PRODUCT OVERVIEW

The CAMECO Electric Heated Foot Warmer is designed to provide soothing heat to your feet and ankles. It features a soft plush material, a detachable cover for easy cleaning, and an intuitive controller for temperature and timer adjustments.

30s Fast Heating Technology



UL



Auto
Shut Off



30s
Quick Heating



FCC



Overheat
Protection



Thermostat
Function

- ✓ Alleviate whole foot pain
- ✓ Speed recovery after injury
- ✓ Improve blood circulation
- ✓ Deep muscle relaxation
- ✓ Relieve arthritis & joint pain
- ✓ Relieve stiffness & fatigue
- ✓ Promote tissue healing
- ✓ Relieve pain from joint injuries



Image: The CAMECO Electric Heated Foot Warmer in use, providing warmth and comfort.

Key Features:

- **Fast Heating:** Utilizes even layout technology for quick and consistent heat distribution.
- **Temperature Settings:** Adjustable from 86°F to 158°F (30°C to 70°C).
- **Timer Function:** Set for 10 to 90 minutes with automatic shut-off.
- **Detachable & Washable Cover:** Easy to remove and machine wash for hygiene.
- **Comfortable Design:** Soft plush material with a pocket design that warms the entire foot up to the calf.
- **Safety Features:** Overheat protection, thermostat protection, and auto-off timer.
- **Long Power Cord:** Equipped with a 9.2ft power cord for flexible placement.

3. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the foot warmer and all components from the packaging.
2. **Placement:** Place the foot warmer on a flat, stable surface near an electrical outlet.
3. **Insert Feet:** Gently slide both feet into the foot warmer. The design accommodates both left and right feet together, fitting up to US size 13.

4. **Connect Controller:** Locate the connection port inside the foot warmer and securely plug in the controller cable.
5. **Adjust Drawstring:** Use the drawstring closure to gently secure the opening around your ankles, helping to retain heat. Do not overtighten.
6. **Power Connection:** Plug the power cord from the controller into a standard electrical outlet.

Your browser does not support the video tag.

Video: Demonstrates how to easily wear and connect the CAMECO Heated Foot Warmer.



Image: Detailed view of connecting the controller to the foot warmer.

4. OPERATING INSTRUCTIONS

The foot warmer is operated using the attached handheld controller. The LCD digital display shows the current temperature and remaining time.

Handheld Controller & Easy Operation

LCD Digital Display
(Temperature & time display)

Auto Shut Off
End of the setup time

Backlight Off Display Button
Energy saving, eye protection

Comfortable Temp Button
One button to 122°F/50°C

Temperature Adjustment
(86°F-158°F/30°C-70°C)

Time Adjustment
(10-90mins)

Switch Button
(ON / OFF)

WARM TIPS!!

- >>>The temperature adjustment range is 86°F-158°F, 2°F is a level.
- >>>The time adjustment range is 10mins-90mins, 5 mins is a level.
- >>>The default time is 30 mins and default temperature is 122°F.
- >>>Overheat protection>>thermostat function>>countdown function.

Image: The handheld controller for adjusting settings.

- Power On/Off:** Press the power button (usually marked with a power symbol) to turn the unit on or off.
- Temperature Adjustment:** Use the temperature adjustment buttons (often marked with '+' and '-' or up/down arrows) to select your desired heat level between 86°F and 158°F (30°C and 70°C). The default temperature is 122°F (50°C).
- Timer Setting:** Use the timer adjustment buttons to set the operating duration from 10 to 90 minutes. The default timer is 30 minutes. The unit will automatically shut off once the set time expires.
- Backlight Off Display Button:** Some models may include a button to turn off the display backlight for energy saving or eye protection.
- Comfortable Temp Button:** A quick-set button may be available to instantly set the temperature to a comfortable 122°F (50°C).

Always monitor your comfort level and adjust settings as needed. If the heat feels too intense, reduce the temperature or turn off the device.

Your browser does not support the video tag.

Video: Shows the CAMECO Electric Heated Foot Warmer in use, highlighting its features for both men and women.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and prolongs the life of your foot warmer.

1. **Disconnect Power:** Always unplug the foot warmer from the electrical outlet and disconnect the controller before cleaning.
2. **Remove Cover:** The outer plush cover is detachable. Unzip or unfasten the cover from the main heating element.
3. **Washing Instructions:** The detachable cover can be washed by hand or machine. For machine washing, use a gentle cycle with cold water. Do not bleach.
4. **Drying:** Air dry the cover completely before reattaching it to the heating element. Do not tumble dry or iron.
5. **Spot Cleaning:** For the non-washable heating element, spot clean with a damp cloth if necessary. Do not submerge in water.
6. **Storage:** When not in use, store the foot warmer in a cool, dry place, away from direct sunlight and moisture.



Image: The foot warmer showing its detachable and washable cover.

6. TROUBLESHOOTING

If you encounter any issues with your CAMECO Electric Heated Foot Warmer, please refer to the following table:

Problem	Possible Cause	Solution
Foot warmer does not turn on.	Not plugged in correctly; Power outlet issue; Controller not connected.	Ensure power cord is securely plugged into outlet. Test outlet with another device. Check controller connection to the foot warmer.
Foot warmer is not heating.	Temperature setting too low; Timer expired; Overheat protection activated.	Increase temperature setting on the controller. Check timer setting. Unplug the unit for 30 minutes to reset overheat protection, then try again.
Heat feels uneven or insufficient.	Feet not fully inserted; Product not positioned correctly.	Ensure both feet are fully inserted into the warmer. Adjust the drawstring to retain heat. Ensure the warmer is on a flat surface.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- **Model Number:** CM-ZF-FR-A27-999
- **Color:** Blue
- **Material Type:** Plush
- **Temperature Range:** 86°F - 158°F (30°C - 70°C)
- **Timer Settings:** 10 - 90 minutes
- **Number of Heat Settings:** 3 (implied by temperature range and control)
- **Power Cord Length:** 9.2 ft
- **Package Dimensions:** 12.24 x 8.03 x 4.45 inches
- **Item Weight:** 1.96 Pounds
- **Manufacturer:** CAMECO

Heated Foot Warmer for Pain Relief



**Left/Right
foot together**



**One Size
Fits Most**



**Ideal Gift
for Loved**



**Hand Wash
Recommended**



**Ergonomic
Design**

Image: Dimensions and size compatibility of the foot warmer.

8. WARRANTY AND SUPPORT

CAMECO is committed to providing reliable aftercare service for its products. If you are not completely satisfied with your electric heated foot warmer or encounter any issues, please contact us directly.

To reach customer support, navigate to "My Order – Contact the Seller" on the platform where you purchased the product. Our support team is available 24/7 to provide a satisfactory solution.

Your browser does not support the video tag.

Video: Illustrates various scenarios where the CAMECO Heated Foot Warmer can be used, such as under a desk.